








Quick Reference Guide 156800 Issue 1

© IDEAL INDUSTRIES Ltd 2012 +44 (0) 1925 444446 UKSales@idealnwd.com

www.idealnwd.co.uk

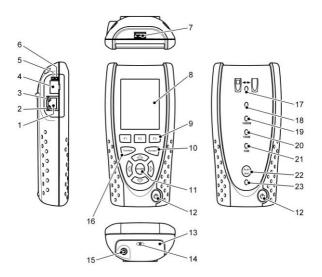


SignalTEK II shown with Power Module item 13 fitted. When Battery Pack is fitted, items 14 & 15 are not present.

1	RJ 45 Port	13 <sup>2</sup>	Power module
2	RJ 45 activity LED	14 <sup>2</sup>	Charger LED
3	RJ45 link LED	15 <sup>2</sup>	DC in connector
4 <sup>1</sup>	Optical port (SFP)	16	Autotest button
5 <sup>1</sup>	Optical activity LED	17	Link LED
6 <sup>1</sup>	Optical link LED	18	Status LED
7	USB port	19	1000 Mb/s line rate LED
8	LCD color display	20	100 Mb/s line rate LED
9	Function keys F1 to F3	21	10 Mb/s line rate LED
10	Escape key	22	Remote Autotest button
11	Cursor and ENTER keys	23	Power LED
12	ON/OFF button		

*Charger LED	Status		
Green	Power module is charging		
Off (with charger connected)	Power module is charged		
Green flashing	Power module is not being charged		

<sup>&</sup>lt;sup>1</sup> SignalTEK II FO only <sup>2</sup> Power Module option shown


## Three Ways to Navigate

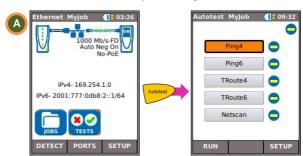




Escape – returns to previous screen


ENTER – accepts selection

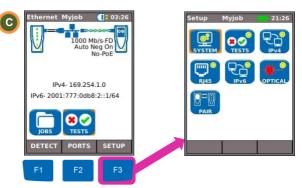


## Wiremap Testing

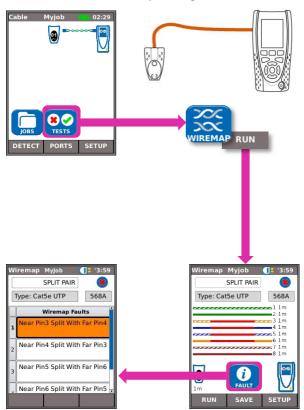


# **Cable Testing**

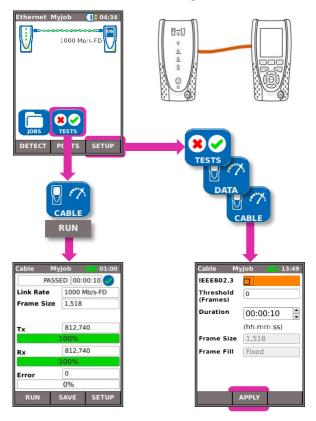


# **IP Testing**

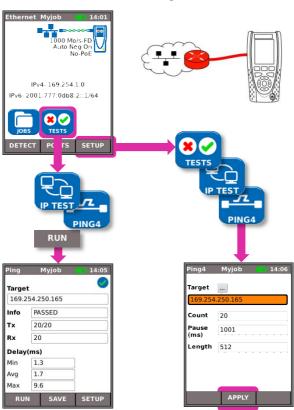

# **Performance Testing**

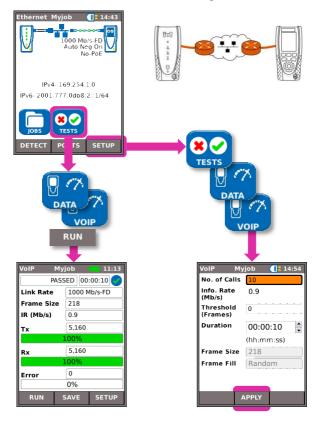


#### Save and View Test Results

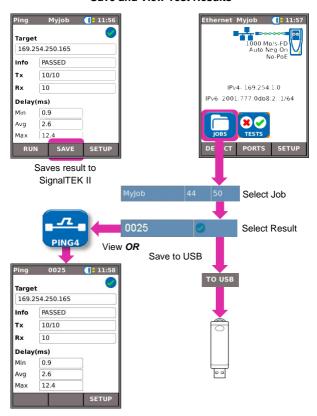

# **Tests Menu Maps**

#### Cable Mode



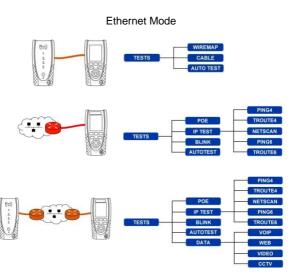

In Ethernet Mode, SignalTEK II FO connects with copper or fiber cable