


PROCENTEC

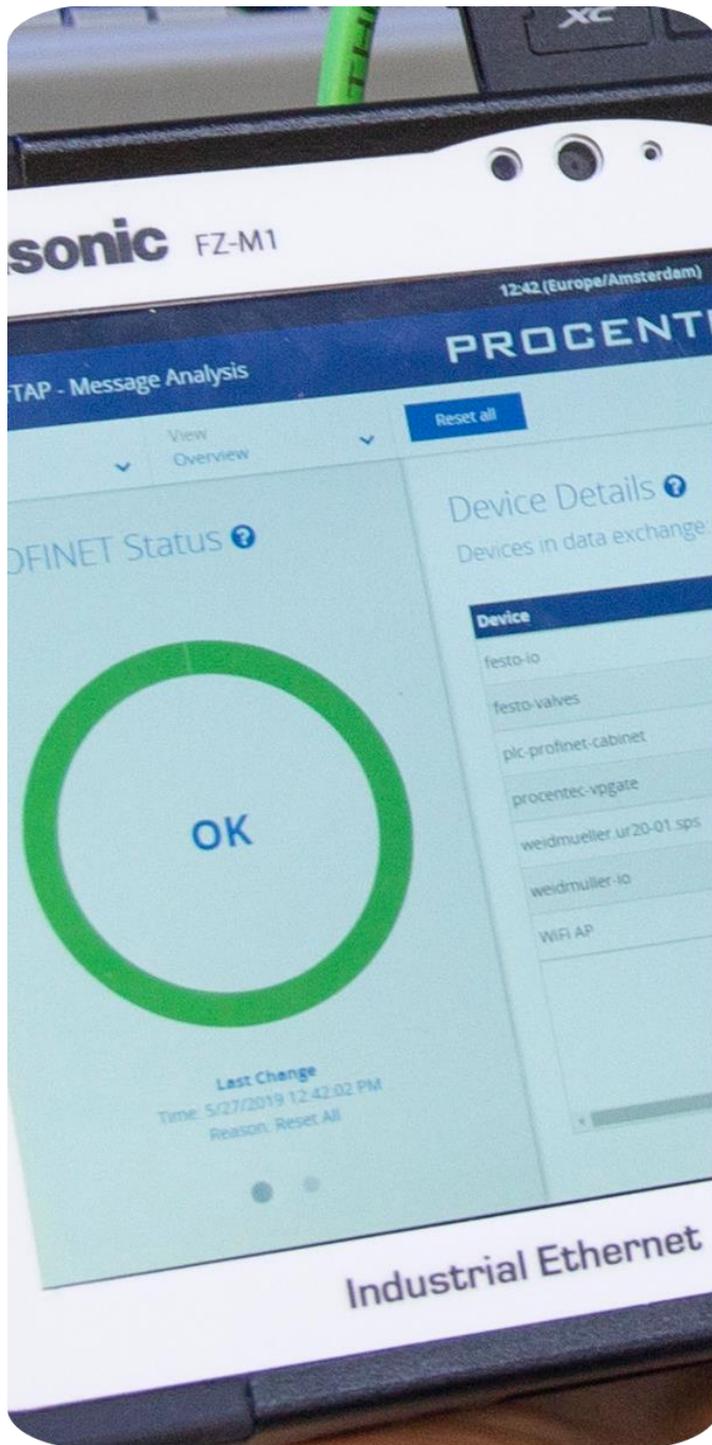

on Atlas, Mercury and PC
User Manual

Safety Guidelines

This manual contains notices which you should observe to ensure your own personal safety, as well as to protect the product and connected equipment. These notices are highlighted in the manual by a warning sign and are marked as followed according to the level of danger:



Draws your attention to important information on handling the product, a particular part of the documentation or the correct functioning of the product.

Warning

This device and its components may only be used for the applications described in this manual and only in connection with devices or components that comply with Industrial Ethernet interfaces.

This product can only function correctly and safely if it is transported, stored, set up, installed, operated and maintained as recommended. Atlas and/ or Mercury is a CE class A product. In a domestic environment it may cause radio interference in which case the user may be required to take adequate measures.

Warranty

Warranty is void if you open Atlas and/or Mercury.

Qualified Technicians

Only qualified technicians should be allowed to install and work with this equipment. Qualified technicians are defined as persons who are authorized to commission, to ground, to tag circuits and systems in accordance with established safety practices and standards. It is recommended that the technicians carry a Certified PROFINET Installer or Certified PROFINET Engineer certificate.

Disclaimer of Liability

We have checked the contents of this manual as much as possible. Since deviations cannot be precluded entirely, we cannot guarantee full agreement. However, the content in this manual is reviewed regularly and necessary corrections will be included in subsequent editions. Suggestions for improvements are welcome.

Copyright © 2020 PROCENTEC

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written permission of the publisher.

Important information

Purpose of the Manual

This user manual provides information how to work with Osiris on Atlas, Mercury and/or PC.

This manual does not describe the usage of the tablet itself. For the manual of the tablet, refer to the manual of FZ-M1 on the Panasonic website.

Support

In case of a defective product or unanswered questions, please get in contact with the support department:

T: +31 (0)174 671 800
F: +31 (0)174 671 801
E: support@procentec.com

Recycling and Disposal

The parts of the Mercury can be recycled.



“WARNING, BATTERY INSIDE; Battery may explode if mistreated. Do not disassemble or dispose of in fire. Dispose product according to the instructions”

For further information about environment-friendly recycling and the procedure for the disposing of your old equipment, please contact:

PROCENTEC
Vlasmarkt 1
3011 PW, ROTTERDAM
The Netherlands

T: +31 (0)174 671 800
F: +31 (0)174 671 801
E: info@procentec.com

Document Updates

You can obtain constantly updated information on PROCENTEC products on the Internet at www.procentec.com

Table of contents

Important information.....	3
1. Product description	8
1.1 Introduction.....	8
1.2 Your benefits	8
1.3 Product features.....	8
1.4 System requirements	8
2. Getting started: Atlas.....	9
2.1 Quick Start	9
2.2 Atlas installation instructions	9
2.2.1 Location	9
2.2.2 Position.....	10
2.2.3 Power supply	10
2.2.4 Ethernet connections	10
3. Getting started: Mercury.....	12
3.1 Quick Start	12
4. Getting started: Osiris as a Software (on PC/laptop).....	13
4.1 System requirements	13
4.2 Before the installation	13
4.3 Preparation of the installation.....	14
4.4 Licenses.....	18
5. Osiris User interface	19
5.1 Terminology and definitions.....	19
5.2 System Bar	20
5.3 System buttons.....	20
5.4 Measurement Button	21
5.5 Current User	21
5.6 Notifications	21
5.7 Delphi Help	22
5.8 Application Menu	22
6. Setup Wizard	23
7. Device mode	24
8. Device mode: Industrial Ethernet.....	25
8.1 Dashboard	25
8.1.1 Dashboard organization	25
8.1.2 Customize Dashboard.....	25
8.1.3 User administration.....	26
8.1.4 The account 'networkengineer'	26
8.1.5 Default users.....	27
8.2 Password best practice.....	28
8.3 Starting a measurement.....	28

8.4	Topology	28
	Topology	28
8.4.1	View types	28
8.4.2	Topology search.....	31
8.4.3	Device types in the Topology view	31
8.4.4	Device status indicators in the Topology view	33
8.4.5	Link indicators in the Topology view	33
8.4.6	Protocol indicators in the Topology view	34
8.4.7	Device details.....	34
8.5	Q-Factor	37
8.5.1	Multiple Q-Factors.....	37
8.6	Traffic Light	38
8.6.1	Traffic light state explained	38
8.6.2	Traffic light triggers.....	38
8.7	Device list.....	38
8.7.1	Table customization	38
8.7.2	Available columns.....	39
8.7.3	PROFINET Features	42
8.8	Link List	43
8.9	ComBricks Integration	44
8.9.1	Setting up ComBricks integration	44
8.9.2	Overview.....	44
8.9.3	Live List and Statistics	45
8.9.4	Bar Graph.....	45
8.9.5	Scope Images	46
8.9.6	Message recordings.....	46
8.10	Trending.....	47
8.11	Report48	
8.12	OPC UA	49
8.13	MQTT 50	
8.14	E-mail Notifications	51
8.15	IXON VPN service (Atlas only).....	52
8.15.1	Configure a VPN Service on your device.....	52
8.15.2	How to use IXON VPN.....	53
9.	Commissioning Wizard	56
9.1.1	Starting the Commissioning Wizard	56
9.1.2	Quickscan.....	56
9.1.3	Commissioning	57
10.	EtherTAP	58
10.1.1	EtherTAP – Message Analysis	58
10.2	PROFINET analysis	59
10.2.1	Network overview and device details	59
10.2.2	Alarms.....	60
10.2.3	Message Recording.....	60
10.3	Ethernet/IP analysis.....	61
10.3.1	Network overview and details.....	61
10.3.2	Message Recording.....	63
10.4	Ethernet analysis	64
10.4.1	Overview.....	64

10.4.2 Trending.....	64
11. Device mode: PROFIBUS (Not available on Atlas)	65
11.1 Dashboard	65
11.1.1 Network status	65
11.1.2 Q-Factor.....	70
11.1.3 Scope	71
11.1.4 Bargraph	72
11.1.5 Messages	73
11.1.6 GSD Management.....	74
12. Settings	76
12.1 General	76
12.1.1 User	76
12.1.2 Date & time	77
12.1.3 Updates	77
12.1.4 About	77
12.1.5 License Manager.....	77
12.1.6 How to upload a new license file.....	78
12.2 Network: Office (Atlas only) & Factory interface	79
12.2.1 Network Monitoring.....	80
12.2.2 SNMP Communities	80
Other	82
12.3 Connectivity.....	82
12.3.1 E-Mail.....	82
12.3.2 Google Gmail-account	82
12.3.3 Relay (Atlas only)	83
12.4 Alarm configuration.....	84
12.5 System (Atlas only).....	85
13. Updating the firmware	86
13.1 How to find your current version	86
13.2 How to update.....	87
13.3 Updating Atlas(> 1.0.32)	87
13.4 Updating Mercury and Osiris as a Software on PC.....	90
13.5 Updating Atlas Version 1.0.32	95
14. Resetting Osiris to factory defaults	96
14.1 On Atlas	96
14.2 On Mercury or PC	96
14.3 Using the Settings in the web interface.....	97
15. Firewall settings.....	98
16. Technical specifications Atlas	99
17. Technical specifications Mercury	101
18. Order codes	103
19. Certificates.....	107

- 20. Sales offices and distributors..... 108
- 21. About PROCENTEC..... 113
- 22. Notes 114

1. Product description

1.1 Introduction

PROCENTEC's Osiris on Atlas, Mercury and PC is the solution for monitoring and diagnosing Ethernet networks, where innovative simplicity and predictive capabilities are desired. The tool is perfect for preventing unexpected and expensive downtime within PROFIBUS, PROFINET and industrial Ethernet networks.

PROCENTEC's Osiris provides unique insight in your networks health and topology. With PROCENTEC Osiris operators and engineers can easily detect problems and find their causes within your network. This prevents costly down times.

The ease of use and clear overview makes this an ideal solution for the complete understanding of networks, always and anywhere. Atlas is a compact device that can be installed on a DIN rail and plugged in to the network for permanent network monitoring, and Mercury is the portable version. Osiris does not require additional and time-consuming software installations on the PC. You can get all the information using a custom designed web application. All the information Osiris provides can be viewed on the central, customizable dashboard page.

1.2 Your benefits

- Ease of use
- Use of Industrial Ethernet
- Topology
- Standalone device, 24/7 available
- Safe use
- Customizable dashboard
- Resistant to all environmental factors
- No software required

1.3 Product features

- Network Topology
- Customizable dashboard
- Network Quality Factor
- Alarms
- Not vendor or protocol specific

1.4 System requirements

Osiris runs on any browser-enabled computer; the interface is fully web based.

HTML5 and JavaScript must be supported by the browser.

The minimum version requirements for web browsers are:

- Chrome version 46 or higher
- Edge version 25 or higher
- Firefox version 42 or higher
- Safari version 5 or higher

For optimal experience it is recommended to use Chrome. Internet Explorer versions are not supported.

2. Getting started: Atlas

2.1 Quick Start

This checklist describes all the steps to a quick usage of Atlas.

Step: Instructions:

STEP 1 Install the device on a DIN rail.

STEP 2 Connect the Office port to your laptop and the Factory port to the factory network. The factory side should NOT be connected to a mirror port of a switch.

STEP 3 Connect the Atlas to a power supply. Wait until the green RDY LED is on.

STEP 4 Set your laptops IP address to 192.168.1.1 and the netmask to 255.255.255.0.

STEP 5 Open a web browser and go to <https://192.168.1.10/>. You will receive a warning about the certificate:

- Chrome users should click 'ADVANCED' followed by 'Proceed ..'
- Edge users should click 'Continue to this website ..'

STEP 6 Enter user 'admin' and password 'admin' for the first login.

STEP 7 Now complete the Setup Wizard but do not change the settings of Office port yet.

STEP 8 Now setup the Office port in the Settings, unplug your laptop and connect the Office port to the office network.

The Atlas is now operational. From here you can change settings, layout and behavior of the Atlas. If connected to a factory network, it will start scanning and gathering information.

2.2 Atlas installation instructions

2.2.1 Location

Atlas can be installed anywhere in a non-hazardous / non-Ex area that complies with IP 20 (DIN 40 050) and the specified temperature range of -20° to +60° Celsius. Do not install the Atlas in a humid or dusty environment. To comply with UL certification regulations, in ambient temperatures higher than 55°C or 131°F it is mandatory to install the Atlas in an industrial installation cabinet with the "HOT HOUSING" warning label visible during operation.



“WARNING, HOT HOUSING. When in use at an ambient temperature higher than 55°C or 131°F, the housing of the Atlas will be hot. Do not touch the housing!”

To comply with UL certification regulations the Atlas is to be used at altitudes not exceeding 2000m and in non-tropical climate regions only.

2.2.2 Position

Atlas can only be installed on a horizontal 35mm DIN rail with the front plates facing forward (see Figure 1 for an example). In this position the generated heat of the module can escape through the grid in the top of the housing. It is also easier to read the status LEDs. Do not install the Atlas in any other position, this could lead to overheating of the device.

2.2.3 Power supply

The Atlas contains a 3-pin screw type power connector on the front.

The layout is as follows:

- 1 = - (upper pin)
- 2 = + (middle pin)
- 3 = SH (lower pin)

The power supply must comply with the following specifications:

- Voltage: 12 .. 24 VDC
- Wire diameter: < 2.5 mm²

For more information about the power supply see chapter [16 Technical specifications](#).

After the power has been connected, the Atlas will boot up. This process can take up to 90 seconds. When it is booted, the green RDY LED will go on. You will see the Network Status LED blink yellow as long as the Setup Wizard has not been completed and a measurement has not been started.

2.2.4 Ethernet connections

The Atlas has two physical network interfaces named Office and Factory. The networks are not connected with each other one-on-one. The scanning, measuring and reporting of the network does not occur on the Office side, only on the Factory side.

The Atlas may be connected anywhere in the Factory network. Do not connect Atlas to a mirror port, as the Topology will not be accurate.

Please note: the web interface can be reached on the Office and the Factory network IP range. So it does not matter where you are connected, as long as you have set the correct IP

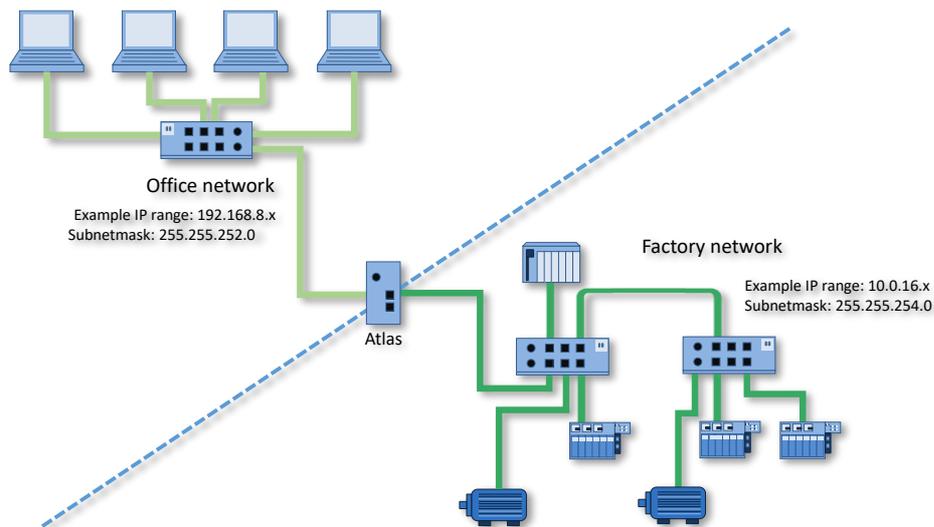


Figure 1 – Atlas mounted on a 35mm DIN

range and netmask settings of your laptop/client network card. You will only be able to scan and see the devices connected to the Factory network, not the Office network.

Pointers about the IP-address configuration:

In case your office and factory share the same (sub)network you should NOT connect and configure the Office port. Just make sure that the default Office IP-address does not exist on your network and uses a non-existing subnet. In case your company network does use the 192.168.1.0/24 subnet, please change the IP-address to be part of a non-existing network, for example 192.168.100.10/24.



For a description on how to use Atlas, read on from chapter 6.

3. Getting started: Mercury

3.1 Quick Start

Step: Instructions: _____ :

STEP 1 Switch on the Mercury by pressing the power button on the top.

STEP 2 Log in by entering your Windows username and/or password/pincode.

STEP 3 Double-click on the OsirisControl icon on the desktop. When Osiris starts, it will show a login window.

STEP 4 Use user 'admin' and password 'admin' for the first login.

STEP 5 Complete the Setup Wizard by entering the requested details.

STEP 6 Connect the RJ45 port of Mercury to an empty port of the factory network (do not use a mirror port).

Osiris on Mercury is now operational. From here you can change settings, layout and behavior. If connected to a factory network, it will start scanning and gathering information.



Warning: Do not re-install Windows or format the tablet. This will cause Osiris not to start. If problems arise, first check the FAQ on our webpage.

4. Getting started: Osiris as a Software (on PC/laptop)

Osiris runs on any Windows-based PC or laptop. A license (issued by PROCENDEC) is needed to run Osiris.

4.1 System requirements

In order to properly install and use Osiris Software, the following requirements must be met:

Operating System	Windows 10
CPU	Intel core i5-7xxx or better
RAM	4 GB or more
LAN	100 Mbit/s or better
USB	Optional 1x USB 3.0 (required when using EtherTAP) Optional 1x USB 2.0 (required for measuring PROFIBUS)
STORAGE	25 GB free space or more (SSD optional but recommended)
Browser	Chrome, version 46 or higher. Other browsers are not fully supported.
CPU Hardware Virtualization	Enabled

It is required to have Google Chrome installed on your PC in order to use Osiris Software. Please download and install the latest version of Google Chrome on your PC before the installation of Osiris Software. (Download Link: <https://www.google.com/chrome/>)

Note: Hardware Virtualization

To use VirtualBox, hardware virtualization features must be available (and enabled) on the CPU. This feature is available on all modern CPUs. On most CPUs these features are also enabled.

If not, then enable them via the BIOS.

4.2 Before the installation

Please check if your system meets one of the following situations:

1. There is already a version of VirtualBox installed

The installer for Osiris as a Software package will detect if a version of VirtualBox is already installed. If there is, the installer will ask you what to do; either use the already installed version of VirtualBox or install the one supplied with the installer.

If you choose to use the already installed version, you must install the correct version of the VirtualBox Extension Pack.

This Extension pack can be downloaded from <https://www.virtualbox.org/wiki/Downloads>

Without the correct extension pack Osiris Software will not work.

2. There is already a VirtualBox Host-Only Ethernet Adapter

Communication between Windows and Osiris is done using the VirtualBox Host-Only Ethernet Adapter.

OsirisControl will create this adapter during startup when it is not available. On some systems a restart is needed before the adapter can be used.

If there already is a Host-Only Ethernet adapter available, the network settings might need to be changed. The IP address of the adapter must be set to 10.76.97.111 with netmask

255.255.255.0.

The user can check these settings using Oracle VM VirtualBox Manager – Host Network Manager.

3. **You are using a firewall other than Windows Firewall**

Please update the firewall settings in order to enable communication correctly, see Note: Firewall Settings in the installation procedure (in paragraph 4.3, point 14).

4. **You have USBpcap installed on your machine**

USBpcap is a Wireshark plugin used to analyze USB communication.

USBpcap changes the Windows USB configuration and it is not compatible with Osiris when using ProfiCore or EtherTAP. Uninstall USBpcap before using Osiris.

If you still have issues using ProfiCore or EtherTAP after removing USBpcap, follow this procedure:

1. Select the 'Start' button, in the 'search programs and files' box, type 'regedit.exe'

2. **Make a backup of your registry settings**

3. Navigate the registry to this entry:

HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Control\Class\{36FC9E60-C465-11CF-8056-444553540000}

4. In the right hand side, if the value "UpperFilters" exists, delete it.


5. Reboot Windows

In this way Osiris will be able to communicate with the USB devices.


4.3 Preparation of the installation

Osiris comes with a quick installer, in order to install all the applications necessary to run on a Windows PC. Please follow the instruction in order to properly install Osiris on your PC.


1. Download the latest version of Osiris Software from the PROCENTEC website.
<https://procentec.nl/service-support/software-firmware/>
2. Connect the PC to the power supply and turn it on.
3. **Make sure that the battery is fully charged and the sleep mode of Windows is completely disabled.**
4. Check that you don't have any pending Windows update.
Note: pending Windows updates can cause Osiris to not start.
5. Open the installer folder, extract the files and click on OsirisForWindows.exe
Note: Make sure you start the .exe file, do not start the .msi file in the directory!

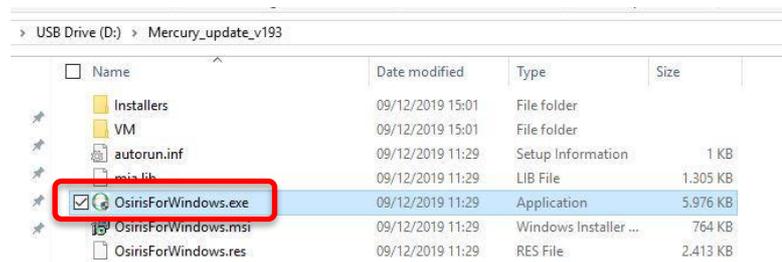


- When prompted, click on YES to allow the execution of the installer.

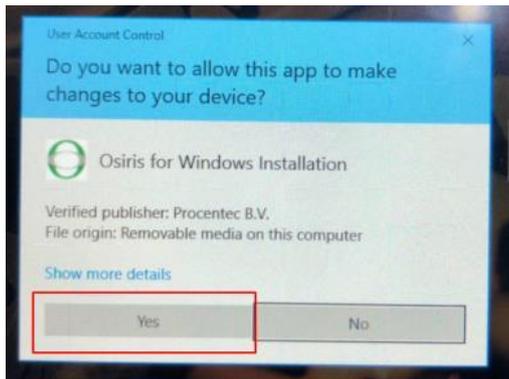

- Click Next 2 times.
- If you already have VirtualBox installed on your PC, you will get a pop-up for installing the VirtualBox update, click **YES**, the system will install the latest Virtualbox.

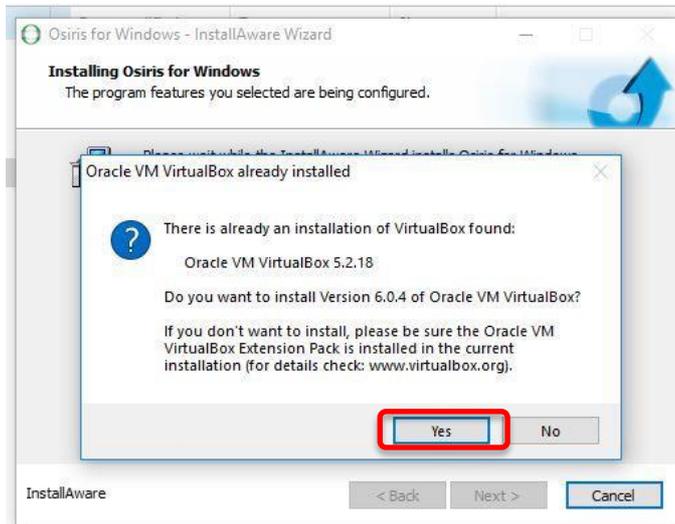


- If you already have CodeMeter installed on your PC, you will get a pop-up for installing the CodeMeter update. Click **YES**, the system will install the newer CodeMeter.

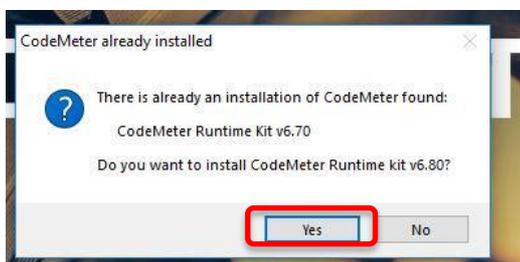

- Follow the instructions of the CodeMeter installer (Click Next 4 times, then click Install).

11. Wait until all the installation is done.

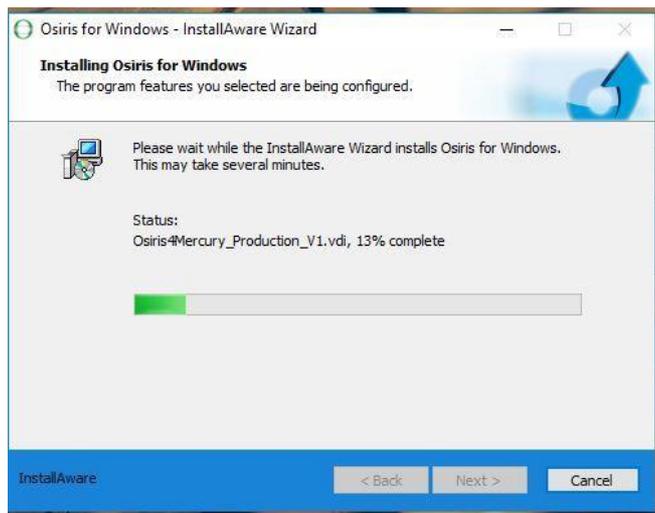


12. When the installation is finished, make sure you have selected “Run Osiris for Windows now” and click Finish.



13. Wait a while, OsirisControl is now starting and preparing your system to startup.

14. If you get a firewall settings popup, click OK two times.

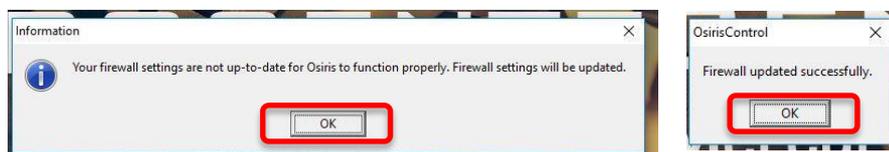


Important note: Firewall Settings

In order to check the license state, Osiris must be able to communicate with the CodeMeter service running on Windows. This communication is done using TCP/IP on port 22350. OsirisControl checks and configures the Windows Firewall automatically to allow incoming TCP communication on port 22350. **However, if you use a third party firewall which is not linked to the Windows firewall, you must manually open port 22350 for incoming TCP communication related to the application Codemeter, default path:**
C:\Program Files (x86)\CodeMeter\Runtime\bin\Codemeter.exe


15. Connect your PC to the internet.

Your pc needs to be connected to the internet in order to activate your license. Connect your pc to an Ethernet/WiFi connection with internet.


16. A License pop-up will appear, click on Install.

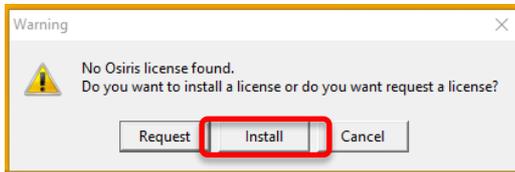

17. Insert the ticket number you received with your Osiris Software order.

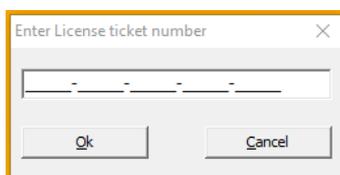


18. After some seconds you will have a license installation confirmation, click OK.

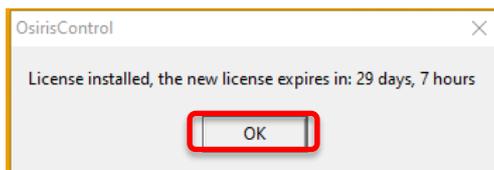


19. OsirisControl will ask you which interface you want to use for the measurement. Select the Ethernet interface you want Osiris to use for running the measurements and click OK.




20. A black popup will appear with the terms and conditions of VirtualBox, read them carefully and accept by typing "Y" and pressing Enter on the keyboard.

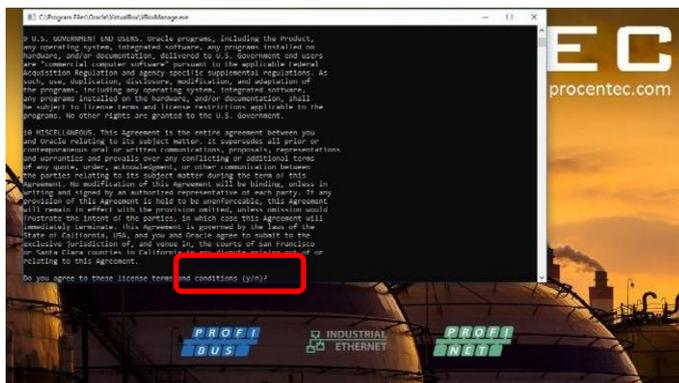

21. Osiris will now start, is it possible that at the first time you will see a “Not private connection” warning, click on ‘Advanced’ and ‘Proceed’ on the page.

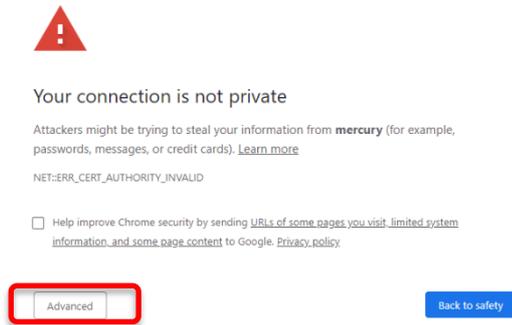

22. The Log-in page will appear, insert the default credentials (Username: admin, Password: admin).

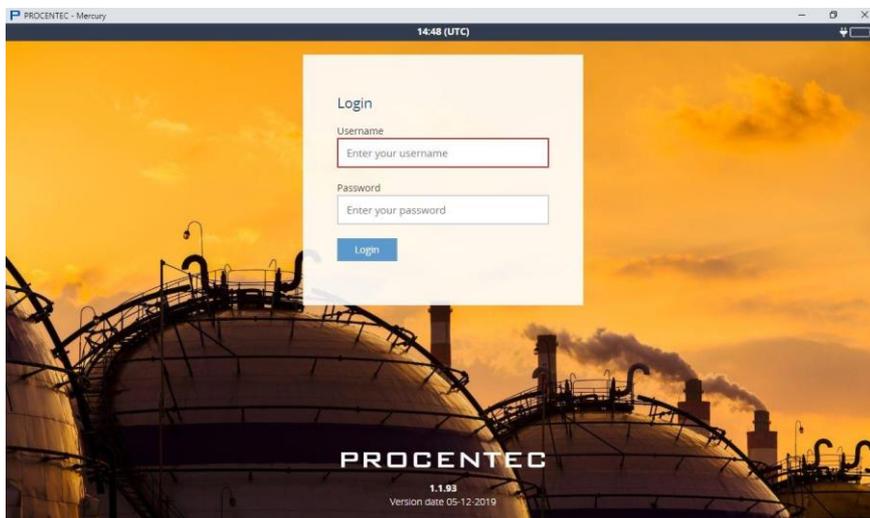


23. You can now start using Osiris Software!

4.4 Licenses

The basic license can be used for networks with up to 100 nodes. More than 100 nodes cannot be displayed. If more than 100 nodes are in the network, you can upgrade your license so that all nodes will be displayed. The notification in the System Bar will indicate if there are hidden nodes.

Contact our Sales Department for further information on upgrading your license.

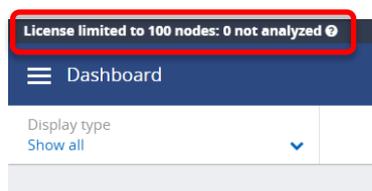

5. Osiris User interface

Osiris displays all information by means of a web page. To access this information, simply open a web browser and type in the IP-address of your device (for Atlas the default address is 192.168.1.10 for the Office side and 192.168.0.10 for the Factory side; for Mercury, simply double-click on the OsirisControl icon on the desktop, Osiris webpage will appear as soon as the system has started).

5.1 Terminology and definitions

In this manual the following terms and definitions are used to refer to items in the web interface.

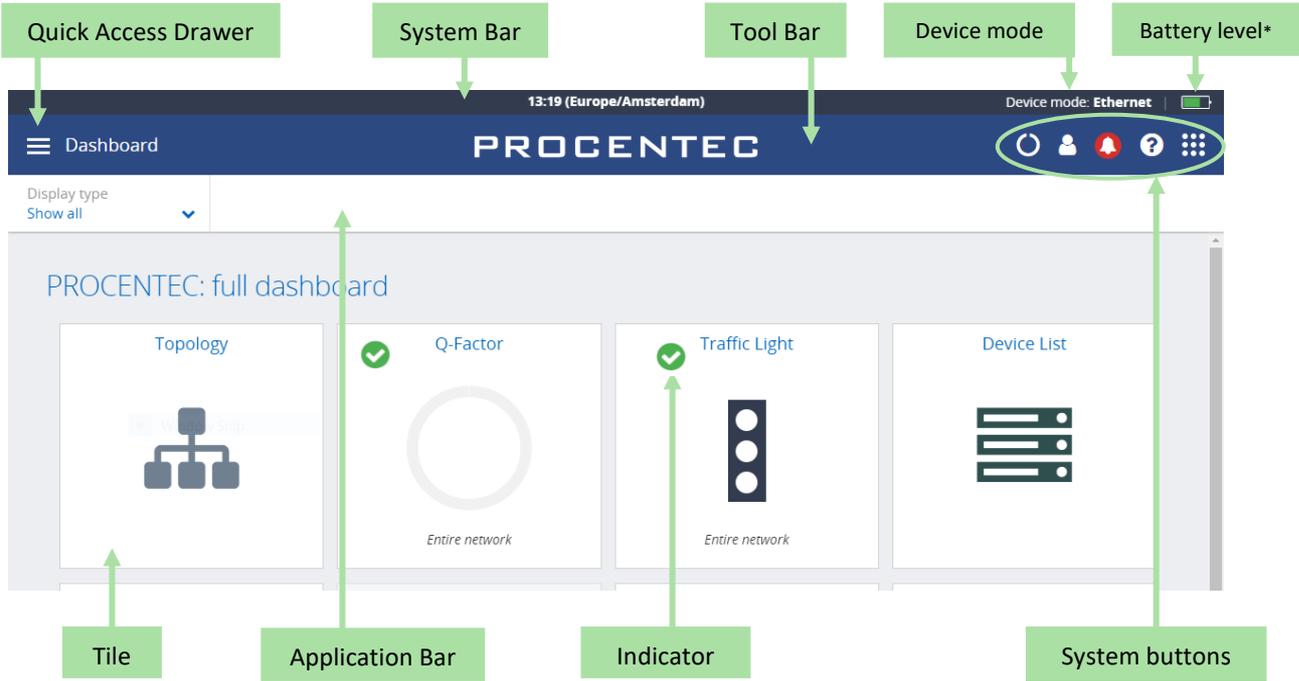


Figure 2 - Terminology used in the web interface

*Note: When using Osiris on a Mercury, a battery indicator icon will be present on the top-right corner of the System Bar. The Atlas does not have this indicator.


Name	Ignored	IP address	MAC address	Up time	Status	Protocol	Last response time	Last incoming load	Last outgoing load	Role
0030DE0CA009		192.168.13.115	00:30:de:0ca:09	36, 01:28:42	Online	ETHERNET/IP	0.378 ms	0.09%	0%	
110-00013A		192.168.13.105	9cb2:06:1f:40:5d	7, 00:08:42	Online	MODBUS/TCP	4.219 ms	0.08%	0.01%	device VP
7006-2GC-EIP		192.168.13.202	a8:74:1d:6e:26:4e	1, 05:13:01	Online	ETHERNET/IP	1.257 ms	0.58%	0.6%	
Ap1_scalance		192.168.13.51	20:87:56:2a:8f:82	102, 22:40:08	Online	PROFINET	0.447 ms	0.14%	0.13%	device SC
Atlas		192.168.12.123	9cb2:06:2b:42:43	6, 03:55:48	Online	unknown	0.398 ms	0.14%	0.06%	Atl
Baseline		192.168.12.118	9cb2:06:2b:40:3b	1, 05:27:05	Online	unknown	1.787 ms	0.23%	0.14%	Atl
bias		192.168.12.1	00:0c:29:d7:88:8b	268, 09:06:46	Online	unknown	0.38 ms	8.42%	66.54%	
centos7armbuilder		192.168.12.100	9e:5c:13:bf:b7:d3	51, 05:51:21	Online	unknown	0.377 ms			
centos7armbuilder2		192.168.12.101	9cb2:06:2b:40:1d	7, 06:31:46	Online	unknown	0.426 ms	0.1%	0%	Atl
Centos7X86-64Builder		192.168.12.4	00:0c:29:13:a6:c4	313, 00:48:54	Online	unknown	0.54 ms			
client-scalance		192.168.13.52	20:87:56:2e:b0:8d	102, 22:39:51	Online	PROFINET	1.638 ms	0.02%	0.12%	device SC
COMbricks Headstation		192.168.13.238	9cb2:06:00:09:a4	0, 00:13:48	Lost	unknown	0.762 ms			Co

Figure 3 - Terminology used in the web interface (continued)

5.2 System Bar

Double-click on the dark blue System Bar (with the time indicator) to access shortcuts to:

- License Manager
- Settings
- Stop Osiris (safely shuts down Osiris and the underlying operating system)
- Restart Osiris

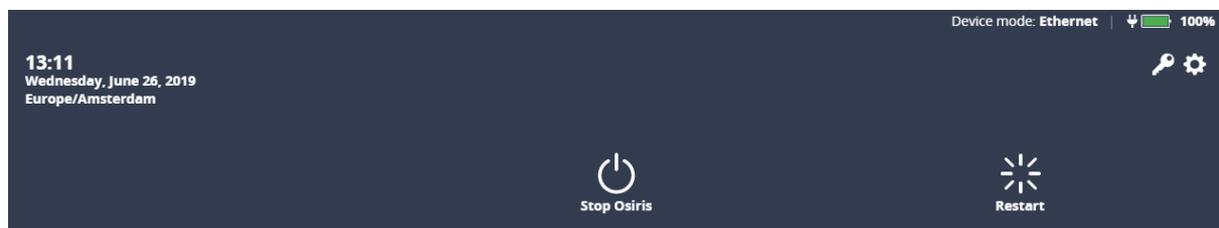

5.3 System buttons

The right upper corner of the Application Bar shows five buttons. These are the system buttons. They are all clickable and will give extra information or functionality.

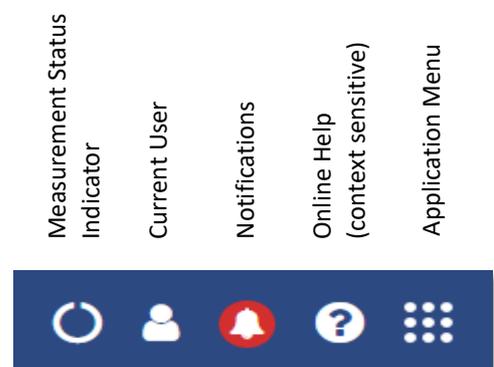


Figure 4 – Explanation of system buttons in web interface

5.4 Measurement Button

When clicking the spinning measurement button, a dropdown menu will show. This dropdown shows how long the measurement is running. The Change measurement settings button allows you to quickly change your settings by sending you to the setup wizard. Thirdly there is a button to clear (measurement) data. When the Clear data button is pressed, a popup will ask the user to confirming clearing the measurement data. When pressing “Yes” all errors and notifications will be deleted.

This will not affect the trending data related to the current measurement, system settings, configuration, custom topology views, or the notifications log file which may be exported.

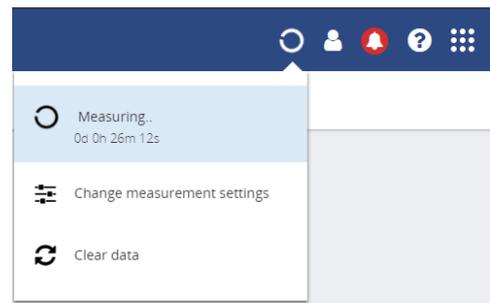


Figure 5 – Measurement button in web interface

5.5 Current User

Clicking the current user button shows the current user and the logout button.

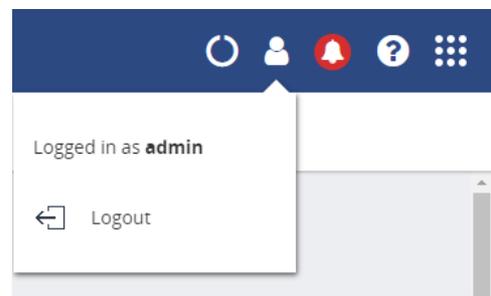


Figure 6 - user in web interface

5.6 Notifications

The notification bell indicates how many notifications are reported. In properly working networks the bell is green. In case there are warning it turns orange. Error conditions on your network lead to a red bell. Clicking the icon will bring up the list

of notifications. There are three types of notifications:



Non-critical user information, such as: ‘Your factory network is now connected’



Warning notification, such as: ‘Ping response time exceeded’



Critical errors and warnings, such as: ‘Error level for Discards exceeded’

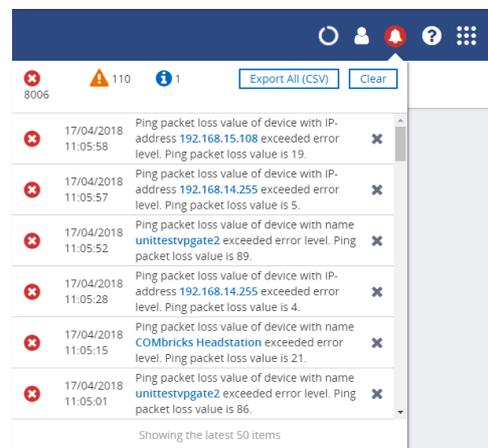


Figure 7 – Notifications in web interface

By clicking ‘Clear’ all the notifications from this list are cleared. Internally the notifications aren’t removed and are therefore still available for CSV export.

By clicking ‘Export All (CSV)’ you can download a full history of all the notifications regardless of any previous clearings of the list. This downloadable file is in CSV format which can be directly opened in spreadsheet software like Microsoft Excel. Errors generated by ignored devices will also be in this list.

5.7 Delphi Help

The Delphi help function provides specific help on the page you are currently viewing. This means that on the dashboard for example, it will show help information for the dashboard. This is done for the Dashboard, Topology, Q-factor, Traffic light, Device list, Trending, Commissioning Wizard, EtherTAP and OPC UA page.

5.8 Application Menu

Within the Application menu there is a function to generate a Report. See paragraph 8.11 about what the generation of the report includes.

The Report generator can be found in the application menu. The report feature allows you to generate a report with all relevant collected data of the network and general information:

- Osiris information
- Q-Factor
- Device List
- Ignored Devices
- Traffic Light
- Firmware Differences
- EtherTAP Message Analysis

Before generating the Report you need to fill in some mandatory details (marked in red). These details will be shown in the Report.

Please note that the Report window is opened in a separate browser tab. Make sure your browser doesn't block opening new tabs. If you use a pop-up blocker, white-list the IP address of your Atlas.

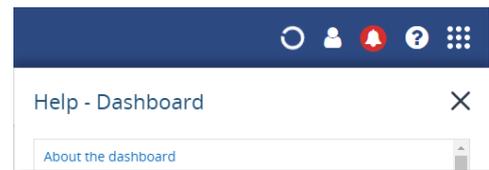


Figure 8 – Help Dashboard in web interface

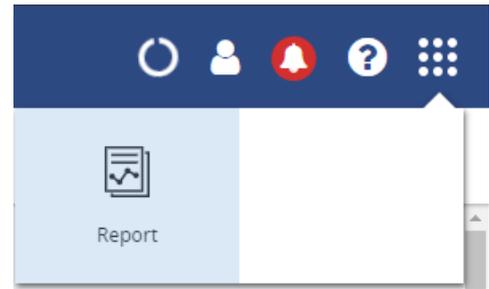


Figure 9 – Generate report in web interface

6. Setup Wizard

The Setup Wizard helps you setting up the Osiris software for use in your networks and is automatically started at first use. It can also be accessed after initial setup by clicking the Setup Wizard tile on the Dashboard. Pressing 'Change measurement settings' from the measurement button will also open the Setup Wizard on Step 2.



Step 1

Select the language. Over time, more interface languages will be released and available for download in the 'Download Software' section on www.procentec.com. Setting a language will take effect after the Setup Wizard has been completed.

Set the correct time zone. The time zone will be used to show the time in the top of the web interface (system bar) and in the reports. Automatic time (NTP) can only be used when Osiris has internet connectivity or when you manually set local time servers in the settings after the Setup Wizard has completed. See paragraph 12.1.2 for more information.

Step 2

Next, fill in the name and the location of the network. This name will be used in the web interface and reports. You can also enter optional contact details for colleagues in need of assistance.

Step 3

Then choose an Office and a Factory network IP address. The Office IP address and the Factory IP address must be set to the correct IP ranges with correct Netmasks. If you do not know these, use the DHCP setting or contact your system administrator and/or the machine programmer for correct settings. Note that these two settings are independent of each other and the networks do not 'see' each other. There is no direct connection between the two ports.

Important: it is required that the office IP range and factory IP range are different from each other, and that their subnet masks do not overlap. Gateway and DNS are not mandatory, only enter one gateway, preferably the one for the office interface. For Mercury: choose an IP address that is different from the IP address set in Windows.

Step 4

The last step asks you to enter one or more IP address scan ranges. It is important to choose scan ranges which include all the devices which you want to monitor. On the other hand, making the scan range unnecessarily large can negatively influence the Topology scan result and scan time. In case there are large gaps between devices on your network, it is advised to separate a large scan range into smaller ranges to exclude these gaps. This will speed up the scanning process.

7. Device mode

Osiris has two modes; a PROFIBUS network analyzer (note: not available on Atlas), and an Industrial Ethernet analyzer. Tap on one of the options to start the preferred mode:



Figure 10 – Device mode selection in web interface

You can see the currently selected device mode in the upper notification bar on the right side.

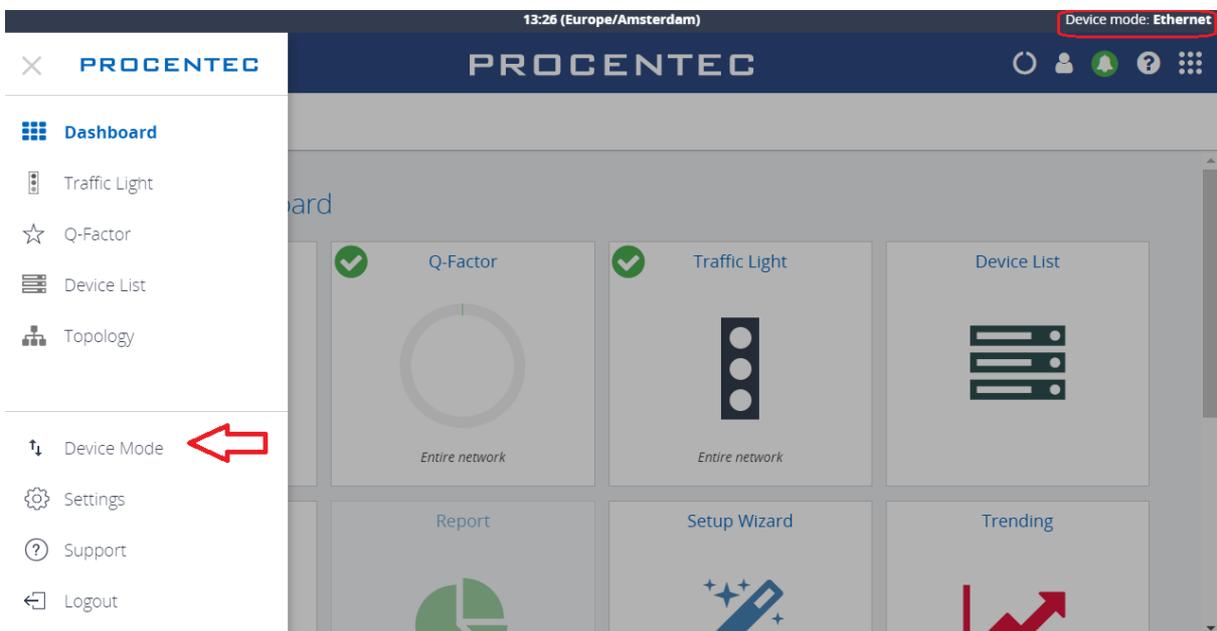


Figure 11 – Device mode in web interface (continued)

If at some point you need to change to another mode, tap the Dashboard button and click 'Device mode'. This will bring you back to the Device Mode selection screen.

For the Industrial Ethernet mode, continue on Chapter 8. For PROFIBUS mode continue on Chapter 11.

8. Device mode: Industrial Ethernet

8.1 Dashboard

The dashboard is a one-stop-shop and overview with access to all available functions through Tiles. Tiles can be a static picture, but some are also dynamic. These dynamic tiles show an online summary of its information. This way you have a quick and intuitive way to access information. Some tiles also have a general status indication in the upper left corner of the tile (green checkmark, orange exclamation or red cross). This is a uniform way, so you can see quickly if there are problems which need attention.

8.1.1 Dashboard organization


The dashboard is a matrix of tiles and can be organized in 3 different ways:

- Show all: All available tiles are shown in a fixed arrangement
- Show recommended: Only tiles are shown which PROCENEC deems most important
- Show customized (see paragraph 8.1.2)

8.1.2 Customize Dashboard

To customize the Dashboard, follow the next steps:

- In the Dashboard, go to the upper left corner and click on 'Display type'. Then choose 'Show customized'.
- On the upper right part, select 'Edit dashboard'.
- An empty tile placeholder(s) will appear, marked with a '+' sign.
- By clicking on the '+' sign a popup window will appear.
- Select the tile you would like to place by clicking on it.
- The popup will close and the tile will be placed.
- During edit mode you can drag and drop to a desired grid location.
- By pressing the 'trashcan' icon in the lower right part of the tile you can delete the tile.
- When all changes have been made, select 'Save changes' in the upper right corner.

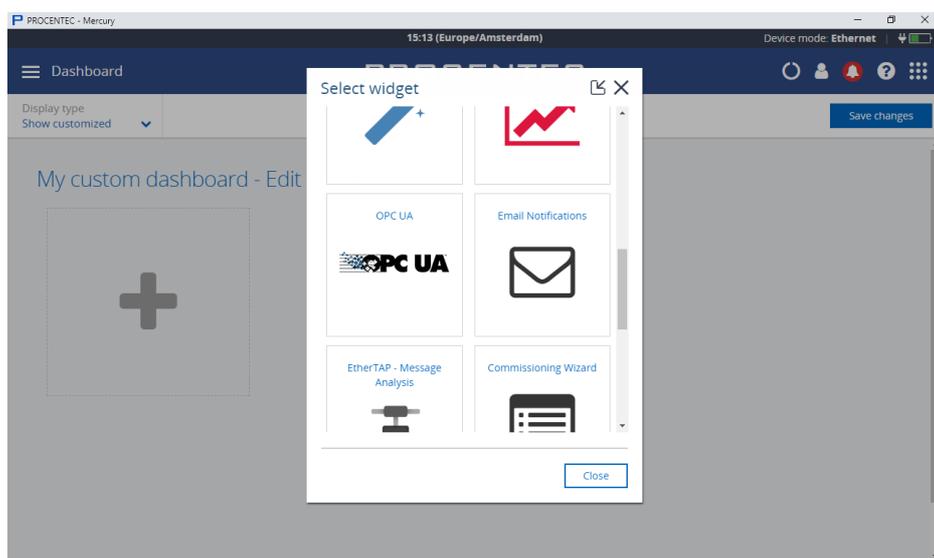


This saved personalized dashboard will remain available after a logout or restart. These settings are stored in a browser session, so this is a personalized setting for a specific user, computer and browser. Opening a customized Dashboard on a different computer or browser will result in a default view.

8.1.3 User administration

Osiris can be protected against unauthorized access or changing of settings. With means of user rights administration you can control the level of authentication a certain user (or group of users) has.

The default password for an account is the same as the username. So the password for the admin account is admin. All letters are lowercase, also for the username.

The default passwords can be changed in the Settings menu. Click on the Quick Drawer Access button , click 'Settings' or double-click on the System Bar (admin only) and click on the  icon. In the 'General' tab you can select 'User' from the menu on the left. Then choose the user from the drop-down list to change the password.

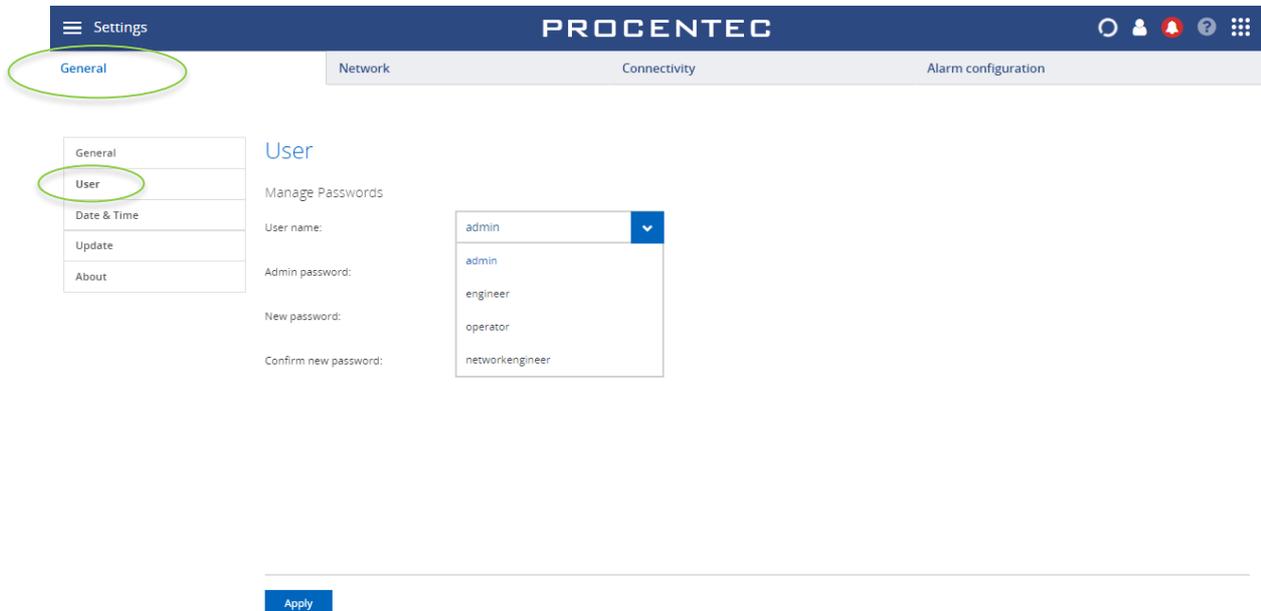

8.1.4 The account 'networkengineer'

This account, added since firmware version 1.1.102, is required for using the PROFINET Features in the Device List (see). It has the same rights as the 'engineer' account, and is additionally allowed to use the PROFINET features.

This account is disabled by default and must be activated by entering a password for the account. Only the admin can do this.

The idea behind this approach is that this feature cannot be used without setting a customized password. The account 'admin' has an easy default password, and if this password is not changed, then anyone with remote access could also use the PROFINET features. This can unknowingly or deliberately stop a running installation.

8.1.5 Default users

There are four default usernames: admin, networkengineer, engineer and operator. They have the following rights, restrictions and capabilities for the Ethernet device mode. All user types have access rights for all the pages inside the PROFIBUS device mode.

Action	admin	networkengineer (disabled by default)	engineer	operator
View the Traffic Light	Yes	Yes	Yes	Yes
View the Notifications	Yes	Yes	Yes	Yes
View the Settings	Yes	Yes	Yes	Yes
View/use the Commissioning Wizard	Yes	Yes	Yes	Yes
View/use the EtherTAP page	Yes	Yes	Yes	Yes
View/use the Email settings	Yes	Yes	Yes	Yes
Clear the Notifications	Yes	Yes	Yes	No
Clear the Measurement Data	Yes	Yes	Yes	No
Customize the Dashboard (add/remove tiles)	Yes	Yes	Yes	No
View/use the Trending page	Yes	Yes	Yes	No
View/use the OPC UA page	Yes	Yes	Yes	No
View/use the Topology page	Yes	Yes	Yes	No
View/use the Q-Factor page	Yes	Yes	Yes	No
View/use the Device List page	Yes	Yes	Yes	No
View/use the VPN page	Yes	Yes	Yes	No
View/use the Commissioning Wizard	Yes	Yes	Yes	No
Use the PROFINET features button	No	Yes	No	No
View/use the 'Factory Reset' button	Yes	No	No	No
View/use the System Bar	Yes	No	No	No
View/use the Setup Wizard	Yes	No	No	No
Edit the users and passwords	Yes	No	No	No
Edit Osiris settings	Yes	No	No	No

8.2 Password best practice

We encourage you to change the default Administrator password after purchase.

- Change the password(s) immediately after installation or at the office before it is transported to the final destination.
- Never share passwords with anyone.
- Always use strong passwords. Avoid: *test*, *123456*, *<your company name>*, *<your first name>*, *Atlas*, *PROCENTEC*, etc.
- Change passwords immediately if they may have been compromised.
- If passwords must be written down, store it in a secure place and destroy it when it is no longer needed.
- Be careful about where passwords are saved on computers. Some dialog boxes, such as those for remote access, present an option to save or remember passwords. Selecting this option poses a potential security threat.

8.3 Starting a measurement

When Osiris has been set up and connected, start a new measurement by clicking on the round progress indicator in the System Buttons area, and click 'Start'.

To indicate the measurement is running, you will now see a spinning progress indicator.

When the measurement has collected enough information, the Topology, Q-factor, Traffic Light and Device List will become available.

Note: Atlas is designed to be a permanent monitoring tool, therefore is not necessary to start the measurement, as it's always running.

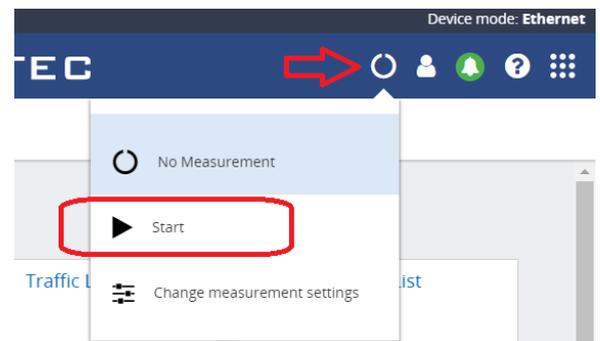


Figure 12 – starting a measurement in web interface

8.4 Topology

The topology is a graphical and hierarchical display of a complete network. This view makes connections between devices become clear very quickly and intuitively. This view also clearly shows dependencies to easily identify/mitigate critical paths in the network, or to identify line-depths.



The underlying mechanism to be able to determine a topology is based on SNMP and, if possible, specific industrial protocol functions (e.g. LLDP for PROFINET) will also be used. Unfortunately, some devices do not (properly) supply topology information. These are connected either to a question mark icon or are placed as stand-alone devices. The devices linked to a question mark icon and then in turn to other devices means the connection information is only partly known. In many of those cases it can also be that non-managed switches are used.

There is a [Reset zoom](#) button in all views to set the Zoom level so that all devices fit in the screen.

8.4.1 Topology View types

There are two default views to choose from: Galaxy and Tree. Next to the default views it is possible to create custom views.

8.4.1.1 Galaxy view

The Galaxy view shows a self-organizing network diagram where switches are shown as central devices. In the Galaxy view user devices can be dragged to other positions. When dragging a device to a new place, the topology will automatically be re-arranged.

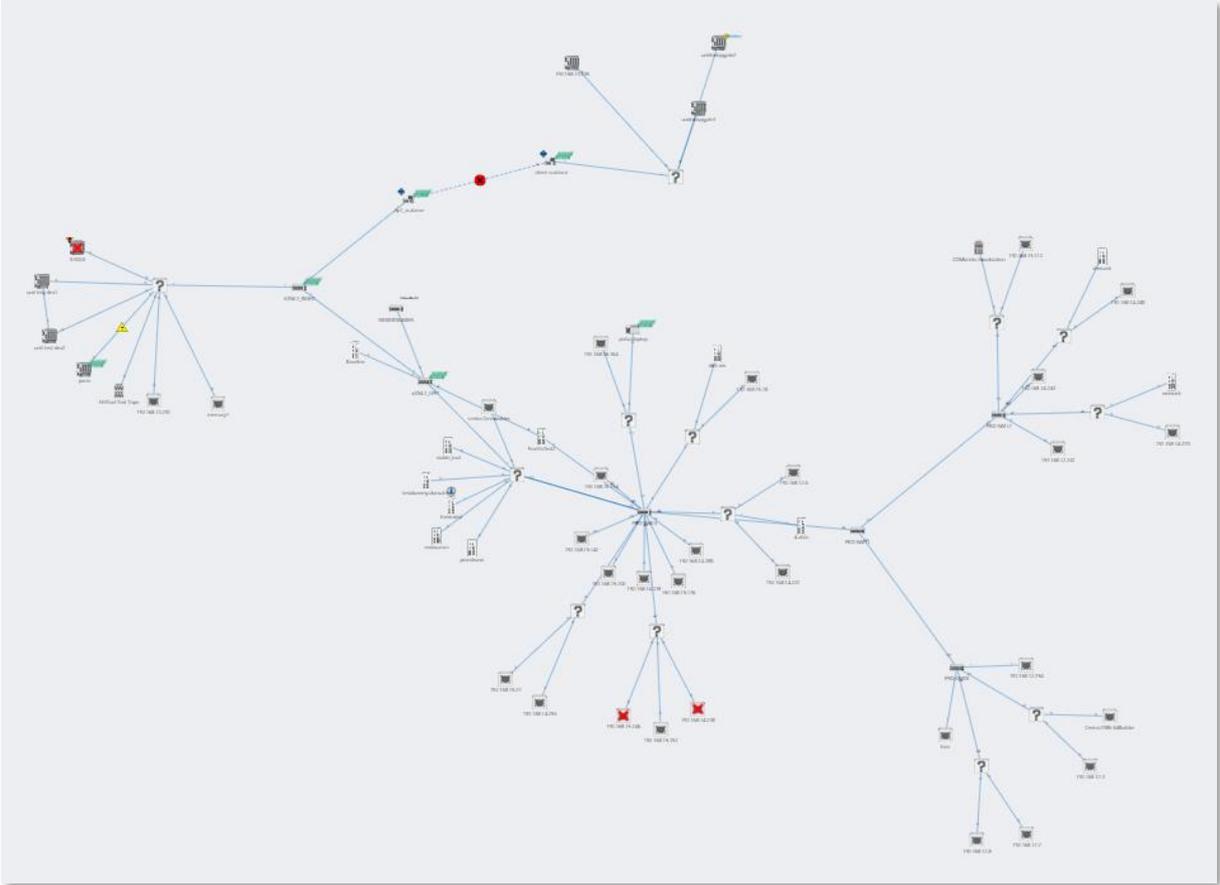


Figure 13 – Galaxy view in web interface

8.4.1.2 Tree view

The tree view shows a self-organizing layered overview using a top-down organization. In the tree view it is possible to click on a device which will show the device details panel. Within this panel there is an extra button to assign a top node. When setting a device as top node, the tree view will be re-organized with the selected device at the top.

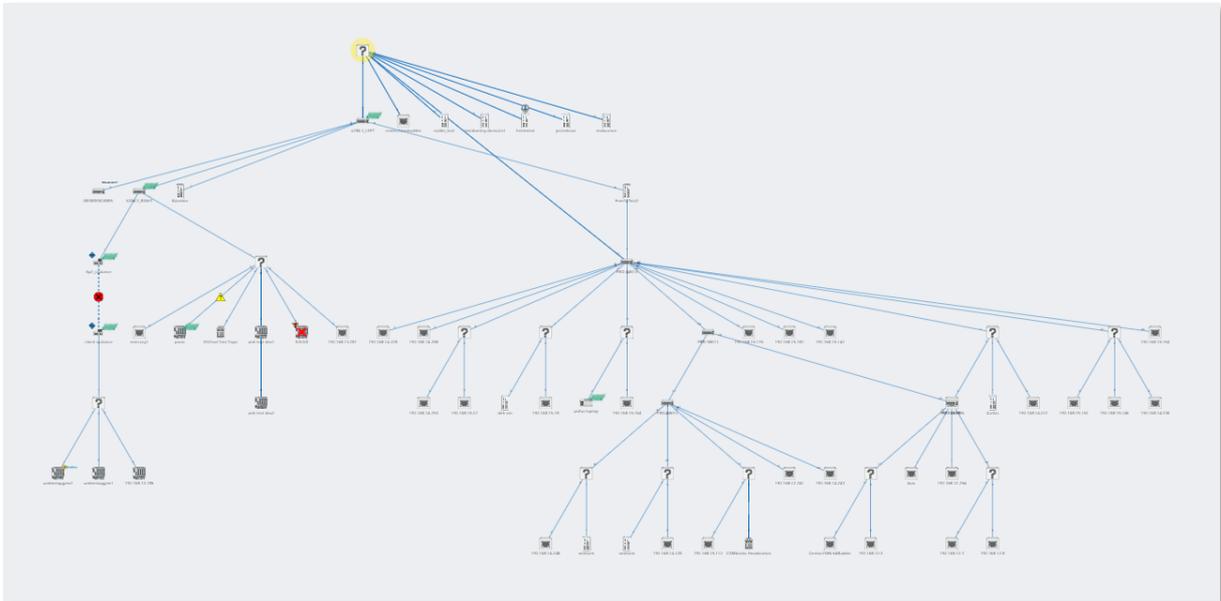


Figure 14 – Tree view in web interface

8.4.1.3 Custom view

From within the galaxy view it is possible to create custom views. Click 'Create view' and assign a name to the view. A grid appears on the background: now all devices have a fixed position which can be changed by dragging them around. The positions will be saved automatically, can be viewed and edited in multiple browsers and are persistent over a restart. Also it is possible to rename or delete a custom view the Delete and Rename buttons.

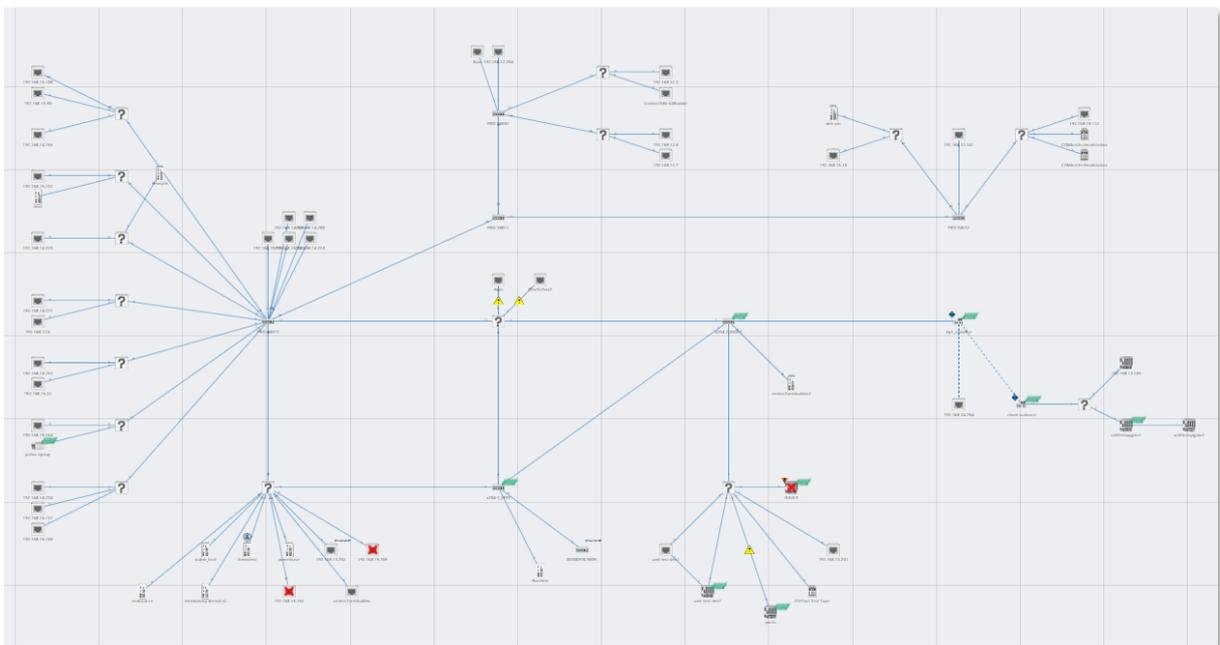


Figure 15 – custom view in web interface

In all views, devices are connected to each other with lines. These connections between devices show how these are connected to each other and how they are co-dependent. In this overview it is much easier to understand that if a device is lost, it will affect the connection to other devices behind it. Lost devices are indicated with a red cross over the device icon.


Link problems between devices are indicated with a red cross on that particular link. The two numbers shown on both ends of the link lines, specify the port number used for this link.

8.4.2 Topology search

To easily find devices in the Topology view, click on the magnifier icon in the top left of the Topology view. This will show an input field, where you can enter a name, IP address or MAC address of the desired device. Autocomplete will help you to quickly find the device you are looking for. When clicked on, the topology zooms in on the requested device and opens the device details.

8.4.3 Device types in the Topology view

The following icons are used for devices in the Topology view.

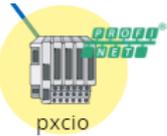Icon	Meaning
	This is your current Atlas, the one you are currently connected to via your browser.
	This is your current Mercury, the one you are currently connected to via your browser.
	The yellow halo indicates the selected node.
	This is another Atlas in the network.
	This is another Mercury in the network.
	This is an I/O controller. The label next to the device indicates the supported industrial protocol.

	<p>This is an I/O device. The label next to the device indicates the supported industrial protocol.</p>
	<p>This is a managed switch.</p>
	<p>This is a Wi-Fi access point.</p>
	<p>This is a Wi-Fi group access point, with two or more devices connected to its copper port(s).</p>
	<p>This is a ComBricks Head Station.</p>
	<p>This is a generic Ethernet node, such as a PC or laptop that does not support SNMP.</p>
	<p>The devices in (and connected to) this group cannot be accurately placed in the Topology. This is because the necessary data to do so cannot be obtained. There are multiple explanations for this problem:</p> <ol style="list-style-type: none"> 1 It is an unmanaged switch. This is a standard switch that does not supply data to determine the topology of the network. 2 It is a device that does not supply correct data. Note: PROFINET devices certified after v2.3 must have all the required data for Topology as defined in the PROFINET standard. This is not mandatory for other Industrial Ethernet devices. 3 It is a device outside of the scan range. The device can be found based on its MAC address but cannot be accessed via an IP address.

8.4.4 Device status indicators in the Topology view

Icon	Meaning
	This indicates that the device is lost. It has been online on the network in the past, but cannot be reached now.
	This device has a different firmware version compared to other detected devices of the same type. It is recommended to set devices to the same firmware version.
	<ol style="list-style-type: none"> The IP address of this device is 0.0.0.0. This indicates it needs to be configured. IP conflict: There is another device on the network with the same IP address. This could make both devices unusable. You are advised to resolve this issue immediately by changing the IP address of one of the devices. This issue may also prevent the correct visualization of the topology within Osiris.
	This indicates that the device is lost. It has been online on the network in the past, but cannot be reached now.

8.4.5 Link indicators in the Topology view

Icon	Meaning
	<ul style="list-style-type: none"> The port load is still acceptable but nearing unacceptable levels of 50% (20% < port load < 50%) The link speed is not 100 Mbps full duplex (for PROFINET devices)
	<ul style="list-style-type: none"> The port load is over 50% (port load > 50%) The devices report different link speeds The existence of InDiscards, OutDiscards, InErrors or OutErrors
1..28	The number on the link is the physical switch port of the device that this cable is connected to.

8.4.6 Protocol indicators in the Topology view

Icon	Meaning
	This is shown for devices that support PROFINET.
	This is shown for devices that support PROFIBUS.
	This is shown for devices that support Modbus TCP.
	This is shown for devices that support Ethernet/IP.

Note: if a device supports multiple protocols, the Protocol indicator icon is not displayed. Supported protocols are shown in the Device details.

8.4.7 Device details

By clicking on a device this item will become emphasized and an info panel will appear on the right-hand side. Depending on the type of device, information is shown in groups:

In the Tree view you will find the button in the top to assign a device as 'Top Node'. With this functionality you can set the highest (top) device in the tree. If the selected device is already marked as Top Node, the button will state 'Top Node' and will be inactive. Otherwise it will state 'Assign Top Node' and can be used to move the selected device to the top.

General

General information is shown for the device. For more information on the various items please check the description of the 'overview' section.

Customize: Ignore device errors

In some cases devices generate errors which you, for different reasons, would like to ignore. Such errors can be suppressed by ignoring a device in the device panel. (see Figure 16). Enable this setting to ignore errors generated by this device based on its MAC address. Ignoring a device will be done at a variety of places within Osiris.

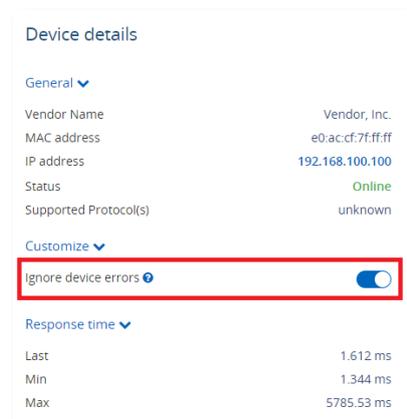


Figure 16 - Ignore device errors

Where	Effects of ignoring device errors
Device details	<ul style="list-style-type: none"> Errors are <u>still visible</u> in the device details except for firmware differences.
Device List	<ul style="list-style-type: none"> When a device is ignored they receive a check in the Ignore column All errors and warnings of the device are hidden
Notifications	<ul style="list-style-type: none"> New errors will not be shown Old errors will be removed from the dropdown under the bell. This potentially means that the bell can go back to green Errors of ignored devices <u>will still show up</u> in CSV export of the Notifications
Q-Factor	<ul style="list-style-type: none"> Devices will be marked as ignored Errors will no longer influence the Q-Factor of the device. The device will always have Q-Factor 5000 and therefore have no influence on the overall Q-Factor of the network
Report	<ul style="list-style-type: none"> The device will appear in the Ignored Device list in the report.
Topology	<ul style="list-style-type: none"> Lost devices are still visible but the usual the red cross which indicates that the device is lost, will be faded Double IP-addresses are ignored Firmware difference are ignored Link errors and warnings will not be shown if you ignore device errors of the device causing the link errors A device with IP-address 0.0.0.0 will generate a warning. When ignoring the errors of such a device, it will not generate errors anymore Devices which don't supply correct SNMP data will show a blue NAMUR icon. When ignoring the errors of such a device, this icon will disappear
Traffic Light	<ul style="list-style-type: none"> Errors will no longer influence the traffic light (both on the web interface as on the physical Atlas itself).

Device errors will still be visible in this Device Details view but will be hidden from the Device List and Topology, and errors related to this device will not influence the Traffic Light or Q-Factor, or be displayed in the notifications log. Ignored devices are labelled in the Q-Factor. Notifications which are generated by the device are stored and downloadable as CSV but are not shown.

Identification and Maintenance

Information about the device itself: the Product ID, vendor name, software and hardware version, order code and serial number. If two devices of the same ID have been found, using different firmware versions, a warning is displayed (see Figure 17).

Response time

The last, min and max ping response times are shown here.

Port load

- In: for each incoming/ingress port the last, min and max port load is shown.
- Out: for each outgoing/egress port the last, min and max port load is shown.
- Warning: some devices report an incorrect link speed (e.g. 10 Mbps instead of 100 Mbps). Since the link speed is used to calculate the load, the reported load can be incorrect. If the reported load is very high, check the link speed.

The screenshot shows a device information panel with the following details:

- Role: device
- Supported Protocol(s): PROFINET
- Identification & Maintenance (expanded)
- Product ID: 0x0a01
- Vendor name: SIEMENS AG
- Software version: V 5.2.1 (with a warning icon)
- Hardware version: 9
- Order code: 6GK5 204-0BA00-2BA3
- Serial number: VPH9202452
- Response time (expanded)
- Last: 1.007 ms

The warning message states: "Attention: Different software versions are being used for devices of the same model on this network." Below the message is a table:

Version	Occurrences
V 5.2.0	1
V 5.2.1	1

Figure 17 - Firmware deviation warning

Link details

By clicking on a link or line between devices an info panel will appear on the right-hand side. Depending on the type of device, information is shown in groups:

Linked devices

Device name, MAC address and port number are shown for both sides of the connection.

Load

For each direction the last and max port load is shown in %.

Warning: some devices report an incorrect link speed (e.g. 10 Mbps instead of 100 Mbps). Since the link speed is used to calculate the load, the reported load can be incorrect. If the reported load is very high, check the link speed.

Link status

- General: the link speed is indicated (10Mbps/100Mbps/1Gbps) together with its operational state (up/down);
- For each direction, in and out, the 'discards', and 'errors' are shown. Discards are the number of telegrams which did not fit in the internal buffer (memory overload) and 'errors' are transmission or CRC errors.

Warning: some devices can report an incorrect link speed (e.g. 10 Mbps instead of 100 Mbps). An indication that this occurs is when two devices in a link report different link speeds. This is not possible in Ethernet connections.

8.5 Q-Factor

The Q-Factor is a number that represents the quality of the network. You can choose if you want to use the 0 to 5000 range, commonly used in the Automotive industry, or a percentage.

A value of 5000 or a percentage of 100 is excellent and 0 is critical or unmeasurable. Additionally, a color coding is used to emphasize the severity. Normally the color should be green, meaning excellent or good. Yellow is subpar but not critical, e.g. attention recommended. Red means a bad, critical or urgent issue.



8.5.1 Multiple Q-Factors

There are multiple Q-Factors in use in the tool:

- A Q-Factor for each network device, which indicates the quality for a single network device. Calculation of this Q-Factor is based on a weight of:
 - Network link load: the bandwidth usage on a certain port of a device, is used to determine the value. In general, the lower the load, the higher the Q-Factor.
 - In/Out errors: the number of errors per port of a device.
 - Ping packet loss: the number of unanswered ping requests.
- A single overall Q-Factor, indicating the quality of a complete network. Currently the overall Q-Factor equals to the lowest Q-Factor of an individual network device.


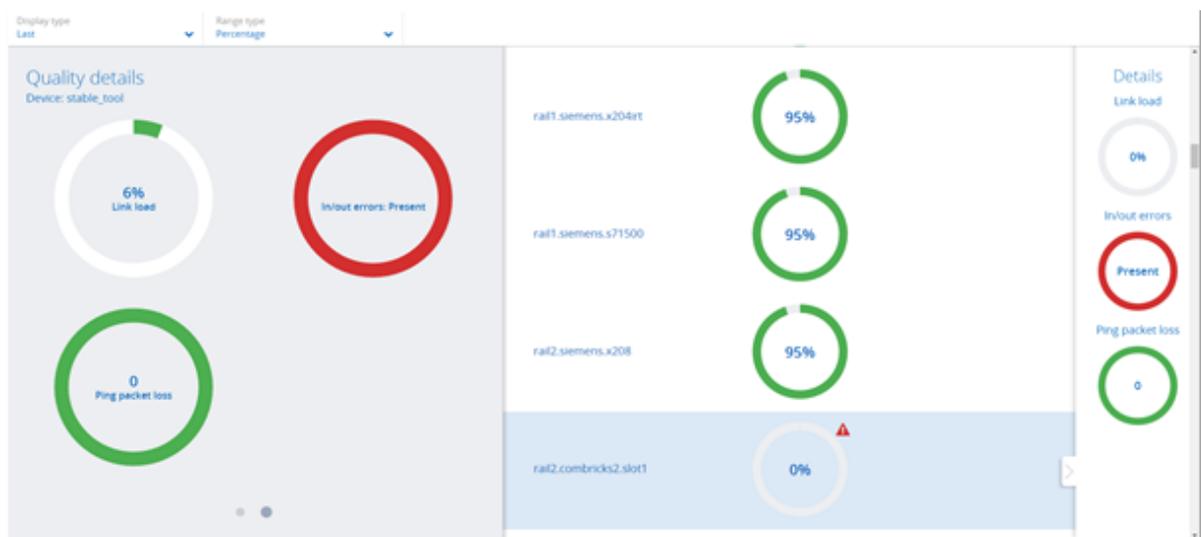


Figure 18 - Multiple Q-Factors: Overall Q-Factor on the left, individual Q-Factors in the middle and on the right

8.6 Traffic Light

The Traffic Light is an overall color coded status to indicate the degree of network status. As it so purposefully describes, the state is in the form of a traffic light. The Network indicator on the front of the Atlas unit (LEDs) corresponds with the traffic light state in the web browser. The Traffic Light can also be read in the live tile in the Dashboard.

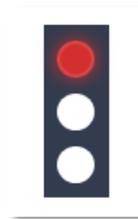

8.6.1 Traffic light state explained

- Red light: a serious problem is present in the network, user attention required.
- Yellow light: a situation is present which is important but not serious, user attention recommended.
- Green light: all seems to be working correctly, no important or critical situation.

8.6.2 Traffic light triggers

The following situations cause the traffic light to turn orange:


- A ping response time between 25 and 50 milliseconds
- The occurrence of PROFINET alarms that are not communication alarms
- PROFINET Jitter higher than 50%
- PROFINET Dropped packets

The following situations cause the traffic light to turn red:

- A ping response time higher than 50 milliseconds
- A device previously seen (e.g. by ping) is not responding anymore
- In or Out discards (the number of telegrams which did not fit in the internal buffer of a switch)
- In or Out Errors (transmission errors or CRC errors)
- The occurrence of PROFINET communication alarms

8.7 Device list

The device list shows a list of all detected network devices. Also, unavailable devices (detected in the past) are listed here. It provides a full overview of all important properties of devices in the network.

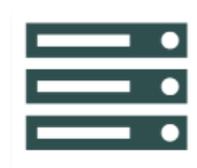

The entire list is downloadable as a CSV file which can be directly opened in spreadsheet software like Microsoft Excel.

8.7.1 Table customization

Generally, the table columns can be customized with the following features:

- The left column is pinned, meaning if the scrollbar is horizontally scrolled the leftmost column does not move.
- The list can be sorted by clicking on the column header (ascending, descending or none).
- Columns can be resized by placing the mouse between columns and then selecting/dragging the splitter.
- Columns can be hidden by selecting the  icon on the far right of the table. A list will drop down in which you can select which columns are to be shown/hidden.

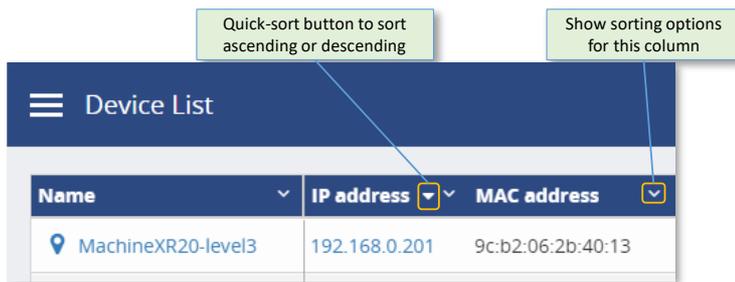


Figure 19 - Sorting

- Certain columns can be filtered (mainly text fields) by clicking on the 'sorting options' button on the right of the column, and then choosing 'Show filter'. Note: these columns can also be optionally pinned left.
- It is also possible to combine two or more filters. Simply enable a filter for each column that you want to filter, for example an IP address filter and a MAC address filter:

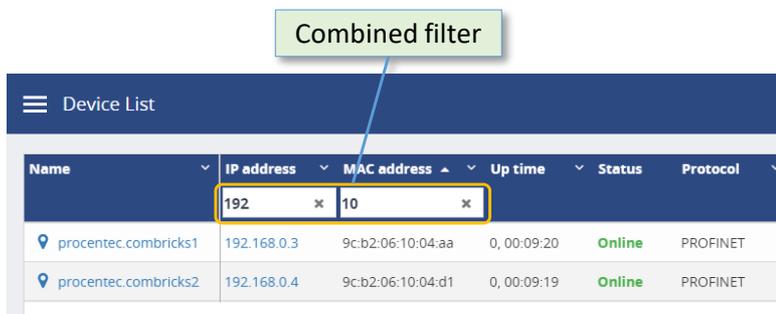


Figure 20 – Combined IP and MAC address filter

8.7.2 Available columns

Column	Description
Name	This name is retrieved from the device if it supports a protocol name identification function (e.g. DCP for PROFINET IO).
IP address	The IP address of the device. It consists of 4 numbers separated by '.' Dots. If no IP protocol is supported, it is left blank. Currently only IPV4 is supported.
MAC address	The unique Media Access Control address for the device. It consists of 6 numbers in hexadecimal format separated by colons.
Status	If a network device has been seen previously and is still being seen it remains Online (green). If it has been seen previously but not anymore lately it changes to 'Lost (red).
Last response time	The most recent reaction time measured by a 'ping' to a device and its response.

Min. response time	The fastest 'ping' reaction time.
Max. response time	The slowest 'ping' reaction time.
Last incoming load	The most recent measured network load (in %) for the incoming/ingress port. If a network device has more than one port the highest load is shown. See note below
Min. incoming load	The lowest measured network load (in %) for the incoming/ingress port. If a network device has more than one port the highest load of all the lowest port values is shown. See note below
Max. incoming load	The highest measured network load (in %) for the incoming/ingress port. If a network device has more than one port the highest load of all the highest port values is shown. See note below
Last outgoing load	The most recent measured network load (in %) for the outgoing/egress port. If a network device has more than one port the highest load is shown. See note below
Min. outgoing load	The lowest measured network load (in %) for the outgoing/egress port. If a network device has more than one port the highest load of all the lowest port values is shown. See note below
Max. outgoing load	The highest measured network load (in %) for the outgoing/egress port. If a network device has more than one port the highest load of all the highest port values is shown. See note below
Netmask	The IP netmask address of the device. It consists of 4 numbers separated by '.' Dots. If no IP protocol is supported, it is left blank. Currently only IPV4 is supported.
Gateway	The IP gateway address of the device. It consists of 4 numbers separated by '.' Dots. If no IP protocol is supported, it is left blank. Currently only IPV4 is supported.
Role	For certain industrial network protocols, a device can have a certain designated role associated with it. For e.g. PROFINET the roles device, controller and supervisor are possible.
Model	For certain industrial network protocols, a device can have a vendor designated model assignment associated with it (e.g. for PROFINET).
Device ID	For certain industrial network protocols, a device can have a certain designated Device ID assignment associated with it (e.g. for PROFINET it helps to define the product code when used in combination with a Vendor ID).

Vendor ID	For certain industrial network protocols, a device can have a certain designated Vendor ID assignment associated with it (e.g. for PROFINET each registered manufacturer has its own number).
Software version	For certain industrial network protocols, the software version can be retrieved (e.g. for PROFINET and Ethernet/IP). This can help to verify that the product has the latest or stable software version.
Hardware version	For certain industrial network protocols, the hardware version can be retrieved (e.g. for PROFINET).
Order ID	For certain industrial network protocols, the order/article number can be retrieved (e.g. for PROFINET). This can help if the product needs to be re-ordered or documented (e.g. when there is a defect, or a spare is needed).
Serial number	For certain industrial network protocols, the serial number can be retrieved (e.g. for PROFINET). A serial number sometimes contains crucial information for a vendor (production date, batch) and for a user as well (tracking/detecting replacements).
Vendor name	The vendor name is either retrieved by looking up the MAC address in a publicly registered MAC/OUI reference list or it can be retrieved by using specific network protocol functions (e.g. I&M0 for PROFINET)
Vendor name (IMO)	Retrieved by using a specific PROFINET IO network protocol function (I&M0 Identification & Maintenance function as defined by PROFIBUS/PROFINET International)
Revision counter	A settings alteration tracking number implemented by some industrial network protocols (e.g. the I&M0 Identification & Maintenance function as defined by PROFIBUS/PROFINET International).
Ethernet/IP Profile	Describes the type of Ethernet/IP device

Note: Some devices report an incorrect link speed (e.g. 10 Mbps instead of 100 Mbps). Since the link speed is used to calculate the load, the reported load can be incorrect. If the reported load is very high, check the link speed in the topology overview.

8.7.3 PROFINET Features

Osiris has built-in control functions specifically for PROFINET-devices. These functions are:

- Flashing the LED of a device
- Change or Clear the device name
- Change or clear the IP settings of a device (IP, netmask and gateway address)
- Perform a complete factory reset of the device



To use these features, a 'PROFINET Features' license is needed, and it is required to be logged in as the 'networkengineer' user. No other user can use these features; see 8.1.4.

In the Device List choose the view 'PROFINET' to see the 'PROFINET Features' button.



8.7.3.1 Flashing the LED of a device

This feature is useful during commissioning of a network. It allows easy and reliable identification of a device. Instead of checking the MAC address on the device itself, you can simply click a device in the Device List and choose 'Flash LED'. It continues to flash until you press the button 'Stop Flashing'.

8.7.3.2 Changing or clearing the name of a device



WARNING: Changing the name of a device during Data Exchange will force it to go offline or out of Data Exchange. This can stop the PLC process!

If a name needs to be changed during the Commissioning phase or after a device exchange for example, the name can either be cleared or changed. There is also an option to store the name in non-volatile memory, to make the change permanent. A controller name cannot be changed.


8.7.3.3 Changing or clearing the IP settings of a device

If an IP setting (IP address, subnetmask or gateway address) needs to be changed during the Commissioning phase or after a device exchange for example, these addresses can either be cleared or changed. There is also an option to store the address in non-volatile memory, to make the change permanent.

Note: changing the IP address is not possible when the device is already in Data Exchange and the IP has been assigned by the IO-Controller.

8.7.3.4 Factory Reset

A device can be reset to factory defaults, for example if it has been tested and goes back into inventory.

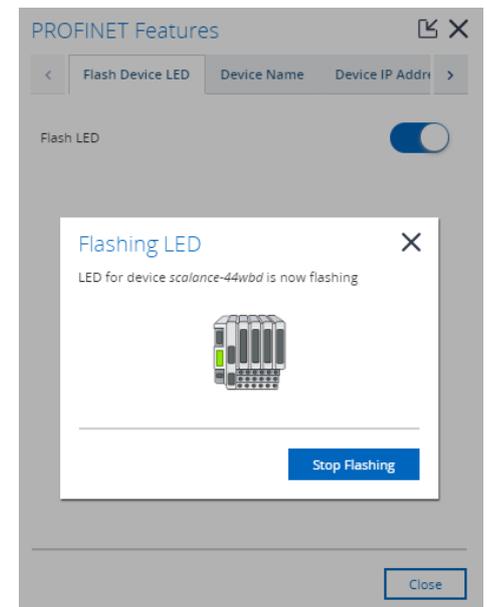

8.8 Link List

As an addition to the Device List and Topology, the Link List gives an overview of all detected connections and the following properties of those links:

- Name of device A and B
- MAC address of device A and B
- Port number of device A and B
- Port load from / to device A and B, last and max
- Link speed
- Link up or down
- In / Out Discards to / from A and B
- In / Out Errors to / from A and B




This list provides a complete and easy to read overview of possible link failures in the network.

Name A	Port Number A	Name B	Port Number B...	Load A to B Max...	Load B to A Max...	Speed	Link	In Discards A to B	In Errors A to B	Out Discr
xtr-236	1	gwd-841	2	0.01%	0.01%	100 Mbps	Up	0	0	0
xtr-236	2	scalance-44wbs	3	0.02%	0.01%	100 Mbps	Up	0	0	0
xdf-245	2	scalance-44wbs	6	0.01%	0.01%	100 Mbps	Up	0	0	0
str-225	2	scalance-23wbs	3	0.01%	0%	100 Mbps	Up	0	0	0
left.plc	1	scalance-44wbs	1	0.01%	0%	100 Mbps	Up	0	0	0
right.plc	?	scalance-23wbs	1	0.04%	0%	100 Mbps	Down	0	0	0
xdf-951	1	xdf-792	2	0%	0.01%	100 Mbps	Up	0	0	0
xdf-951	2	xdf-373	1	0.01%	0.01%	100 Mbps	Up	0	0	0
xdf-821	1	scalance-44wbs	5	0.03%	0.02%	100 Mbps	Up	0	0	0
xdf-821	2	xdf-373	2	0.01%	0.01%	100 Mbps	Up	0	0	0
localhost.localdomain	1	scalance-44wbs	4	0.1%	0.09%	100 Mbps	Up	0	0	0
scalance-23wbs	4	scalance-44wbs	7	0.03%	0.01%	100 Mbps	Up	0	0	0

The table is adjustable, by clicking on the small menu button  on the right. It is also possible to drag the columns wider or narrower (in the title bar of the table), so that the screen can display more information.

8.9 ComBricks Integration

Osiris can serve as a monitoring tool for one or many ComBricks sets. It can be used to report any type of problem on PROFIBUS-level. The ComBricks measures the physical cable or checks the telegrams, and all measurement values are sent over a TCP-stream (port 80 only) to the Osiris platform. For more information on ComBricks see www.procentec.com/combricks.

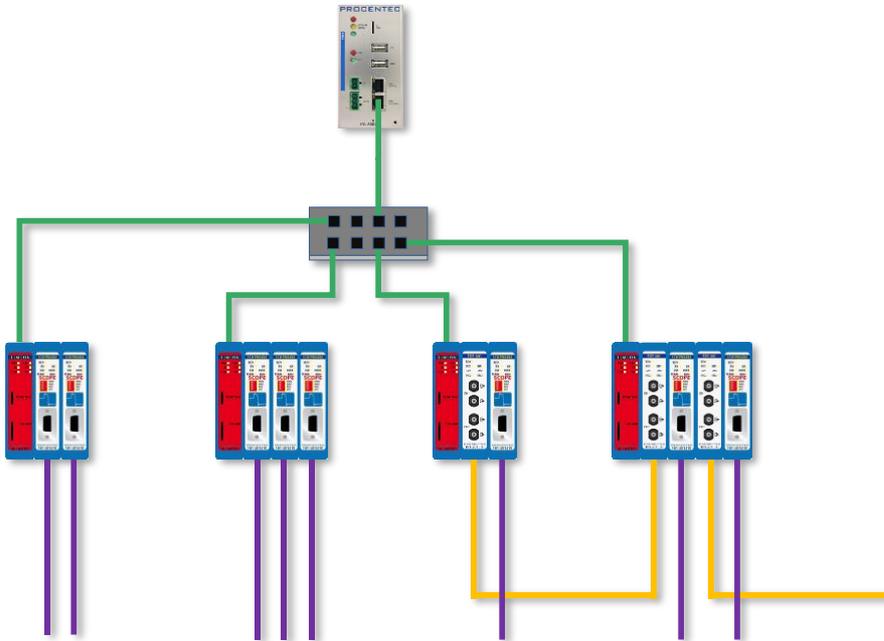

One Atlas monitoring four different ComBricks

8.9.1 Setting up ComBricks integration

Setting up the communication between Osiris and one or more ComBricks is very easy. Simply make sure that the ComBricks Head Station is connected with an Ethernet cable in the same Ethernet network as Osiris, and that the Head Station IP address is within the Monitoring range (see 12.2.1 how to set up the Network Monitoring range). The rest will be handled automatically by Osiris. The only license requirement is a 1B or a 1C license in the ComBricks. **Please note:** this feature only works when the ComBricks Web server is on the default port 80. Currently no other ports are supported.

8.9.2 Overview

The ComBricks tile on the Dashboard gives access to all the discovered ComBricks sets within the Monitoring range of Osiris. A brief status is provided on all found ComBricks sets in the Overview menu item:

Name	IP Address	Serial	Status	Protocol Status	Bar Graph Status	Idle Level Status
ComBricks Head Station	192.168.6.122	4887	Online			
ComBricks Head Station	192.168.6.145	4886	Online	Error	In Range	Too Low

Network	Baudrate	Protocol Status	Masters	Slaves
Network 1	1.5Mbps	Error	1	5
Network 2	1.5Mbps	Ok	1	0
Network 3	No baudrate	Unknown	0	0
Network 4	No baudrate	Unknown	0	0


Module	Network	Type	Bar Graph	Idle Level
Module 1	Network 1	DP	In Range	Too Low

Click a row to view more details, which will unfold on the right side of the screen.


This screen contains some basic identification information of the ComBricks, such as IP and MAC address and serial number. It also shows the networks baudrates, communication status, and number of detected masters and slaves. If the ComBricks set has one or more Scope modules, it will also show an interpretation of the Bar Graph level and Idle level.

8.9.3 Live List and Statistics

The next menu item, Live List & Statistics, shows the Live List and all details of the slaves on protocol level.

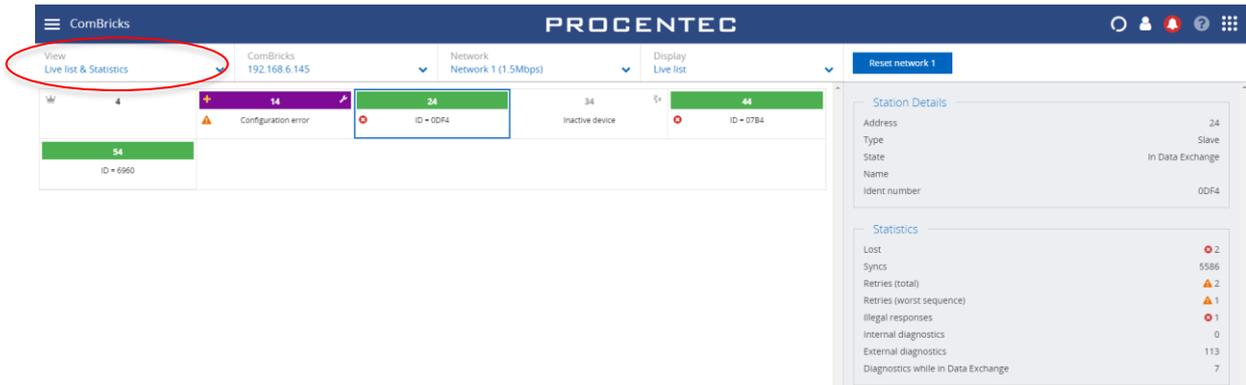

Clicking a slave shows the communication details and statistics.




The other drop-down lists let you choose between different ComBricks sets or different networks. The last drop-down list 'Display' changes the information in the Live List from Ident numbers (if any have been read) to one of the following statistics:

- Lost
- Syncs
- Retries (total)
- Retries (worst sequence)
- Illegal responses
- Internal diagnostics
- External diagnostics
- Diagnostics while in Data Exchange

There is also a 'Reset network x' button, to reset statistics of that network. The window on the right lets you choose which items to reset; Live List stations, Ident numbers and / or station statistics.

Note: Resetting the items in Osiris will also reset these in the ComBricks.

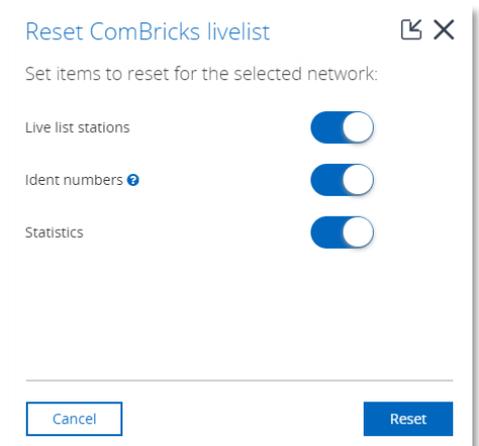

8.9.4 Bar Graph

The Bar Graph shows all devices (slaves and masters) connected to a Scope module, and displays the signal strength (amplitude) of those devices in a bar.

The bar has upper and lower limit indicators, which indicate the highest and lowest sampled amplitude.

The red line, which indicates the threshold for an alarm, can be moved up and down in the ComBricks Scope settings page.

The ComBricks unit, module and image type can be chosen from the drop-down lists.




The 'Reset module x' button can be used to clear all Bar Graph data from that module. Resetting the Bar Graph in Osiris will also reset it in the ComBricks.

8.9.5 Scope Images

The Scope Images menu item shows all devices (slaves and masters) connected to a Scope module, and displays the signals of those devices. This makes it easy to perform remote troubleshooting.

All devices on a module show in the same window.

The ComBricks unit, module and image type (Last, Min and Max) can be chosen from the drop-down lists.

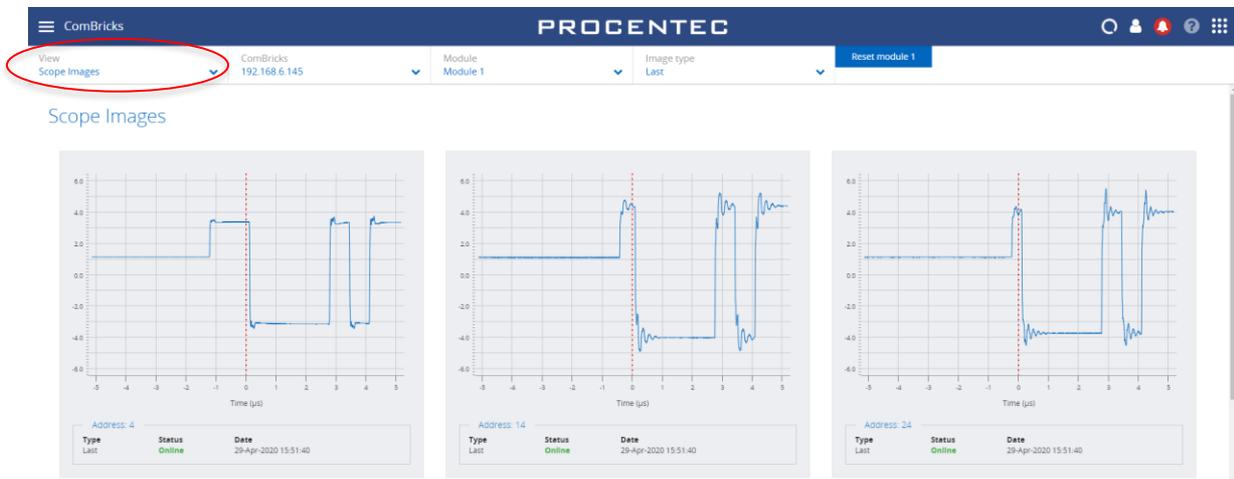

8.9.6 Message recordings

The Message Recordings menu shows a list of all captured message files in the ComBricks. These are recordings of messages during a certain event. It is the same list as in 'Message Recording' in the ComBricks webpage.


File Name	Message Count	Trigger	File Size	Date & Time
001316_Nw1_11_ptc	1000 / 1000	Retries	27 KB	29-Apr-2020 15:22:48
001316_Nw1_10_ptc	1000 / 1000	Retries	27 KB	29-Apr-2020 15:22:14
001316_Nw1_9_ptc	1000 / 1000	Illegal responses	26 KB	29-Apr-2020 15:17:26
001316_Nw1_8_ptc	80 / 1000	Retries	14 KB	29-Apr-2020 15:17:20
001316_Nw1_7_ptc	95 / 1000	Retries	16 KB	29-Apr-2020 15:17:18
001316_Nw1_6_ptc	1001 / 1000	Retries	27 KB	29-Apr-2020 15:17:14
001316_Nw1_5_ptc	1001 / 1000	Retries	26 KB	29-Apr-2020 15:12:38

The 'Reset network x' lets you clear all these message files in Osiris, and you can choose if these should also be removed from the ComBricks itself.

8.10 Trending

The Trending feature visualizes the historical data of the Q-Factor. Every 5 minutes the Q-Factor is recorded. The minimum and maximum values of the Q-Factor during these 5 minutes are also recorded.

When you see a decline in the trend, it is safe to say the quality of the network is going down. The steepness of the trend determines if you could schedule maintenance or if you need to act as soon as possible. The steeper the trend becomes, the quicker you are required to act.

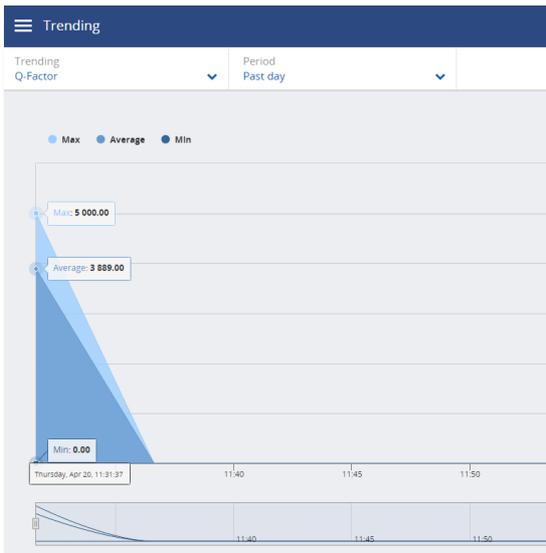

The trend also provides insight into what has happened in the past. This could provide clues on where to look at and what to do next to prevent it from happening again.

The legend of Trending shows the following items:

- Max: The maximum value of Q-Factor of the network found during the chosen period
- Average: The average value of Q-Factor during a period
- Min: The minimum value of Q-Factor of the network found during the chosen period

It is possible to select which of these values you want to have displayed in Trending by clicking on the respective legend items.

8.11 Report

The generation of the report can be found in the application menu. The report feature allows you to generate a report with all relevant collected data of the network and general information:

- Osiris information
- Q-Factor
- Device List
- Ignored Devices
- Traffic Light
- Firmware Differences
- TAP Analysis



Before generating the Report you need to fill in some mandatory details (marked in red). These details will be shown in the Report.

A screenshot of a web application dialog box titled "Generate report". The dialog has a close button (X) in the top right corner. It contains a "General information" section with five input fields: "Location", "Company name", "Engineer name", "Network name", and "Remarks". The first four fields have red borders, indicating they are mandatory. At the bottom, there are two buttons: "Generate report" (blue) and "Cancel" (white with blue border).

Please note that the Report window is opened in a separate browser tab. Make sure your browser doesn't block opening new tabs. If you use a pop-up blocker, white-list the IP address of your Atlas.

8.12 OPC UA

OPC UA has been selected as the foundation of Industry 4.0 and it allows for easy integration with SCADA systems.



The OPC UA server functionality in Osiris is switched off by default.


On the OPC UA page you will see the address to connect a client to Osiris and a button to start the server. Once the OPC UA server is started the button will change into 'Stop server'. This means the OPC UA server is active.

When a connection has been established, the following information can be discovered:

- Full Device List, same as in the webserver (since version 1.1.93)
- Device information (about the Mercury or Atlas)
- Traffic Light – entire network
- Q-Factor – entire network
- Measurement Status
- ComBricks Measurement data

It is possible to use encrypted connections and certificates (since version 1.1.93).


It is possible to select which OPC port to use (since version 1.1.105).

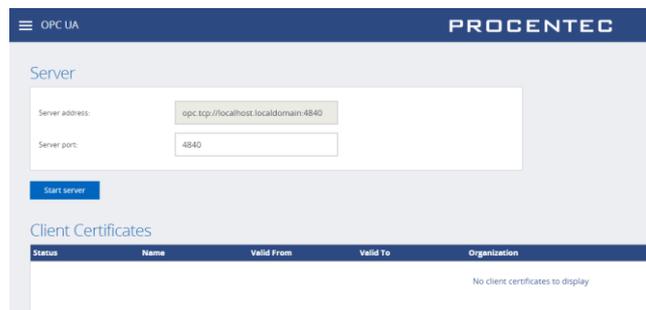

Below is an example made with UaExpert, which can be obtained from <https://www.unified-automation.com/>.

Before you begin, make sure the OPC UA server is started in Osiris. To start it, choose a port number (or leave it to the default port 4840) and then click the 'Start server' button.

Then open UaExpert and add a OPC UA server, according to the procedure displayed below:

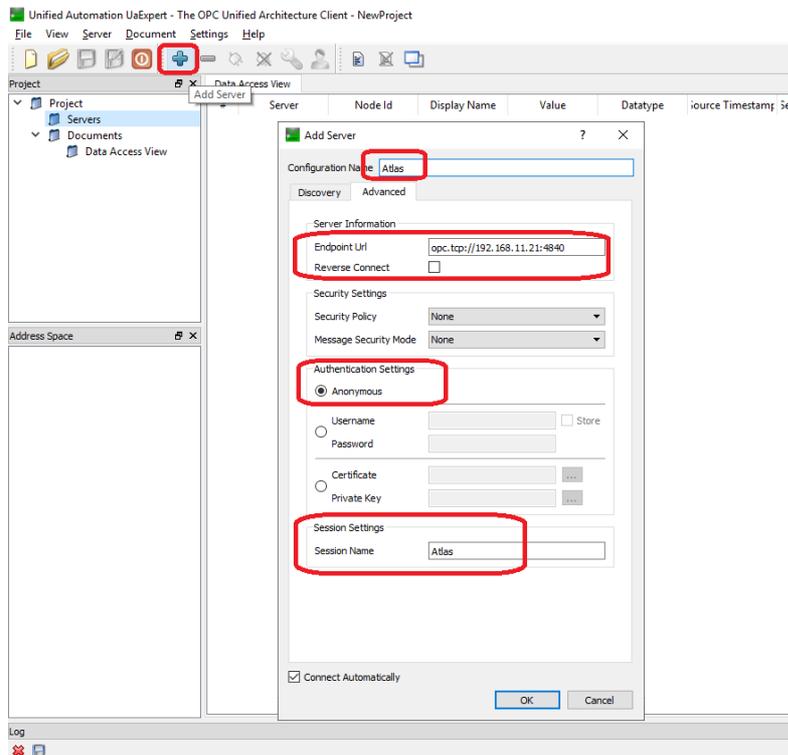

When the connection has been successfully established, you can add tags to the Data Access view by dragging and dropping the green tags on the left to the main window. Below is an example of ComBricks data tags (in blue) and some PROFINET Device data tags (in green).

#	Server	Node Id	Display Name	Value	Server Timestamp	Statuscode
1	Osiris	NS3 String ComBricksDevice_9cb2:06:00:13:16_BarGraphStatus	BarGraphStatus	tooLow	11:23:32.319	Good
2	Osiris	NS3 String ComBricksDevice_9cb2:06:00:13:16_IdleLevelStatus	IdleLevelStatus	ok	11:23:36.703	Good
3	Osiris	NS3 String ComBricksDevice_9cb2:06:00:13:16_ProfibusCommunicationStatus	ProfibusCommunicationStatus	error	11:23:37.840	Good
4	Osiris	NS3 String Device_28:63:36:6b:80:a5_IpAddress	IpAddress	192.168.6.52	11:34:22.051	Good
5	Osiris	NS3 String Device_28:63:36:6b:80:a5_LastActivity	LastActivity	07/05/2020 11:40:36	11:40:37.315	Good
6	Osiris	NS3 String Device_28:63:36:6b:80:a5_MacAddress	MacAddress	28:63:36:6b:80:a5	11:34:22.051	Good
7	Osiris	NS3 String Device_28:63:36:6b:80:a5_Name	Name	ptk-w.1eft.et200s	11:34:22.051	Good
8	Osiris	NS3 String Device_28:63:36:6b:80:a5_Online	Online	true	11:34:22.051	Good
9	Osiris	NS3 String Device_28:63:36:6b:80:a5_UpTime	UpTime	0, 00:22:56	11:40:01.788	Good
10	Osiris	NS3 String Device_28:63:36:6b:80:a5_VendorName	VendorName	Siemens AG	11:34:22.052	Good
11	Osiris	NS3 String Device_28:63:36:6b:80:a5_ResponseTime_Last	Last	1.294	11:40:37.316	Good
12	Osiris	NS3 String Device_28:63:36:6b:80:a5_ResponseTime_Max	Max	27.578	11:34:22.052	Good
13	Osiris	NS3 String Device_28:63:36:6b:80:a5_ResponseTime_Min	Min	1.027	11:34:22.052	Good
14	Osiris	NS3 String Device_28:63:36:6b:80:a5IM0_HardwareVersion	HardwareVersion	8	11:34:22.052	Good
15	Osiris	NS3 String Device_28:63:36:6b:80:a5IM0_OrderCode	OrderCode	6ES7 151-3AA23-0AB0	11:34:22.052	Good
16	Osiris	NS3 String Device_28:63:36:6b:80:a5IM0_SerialNumber	SerialNumber	S C-HNA540072016	11:34:22.053	Good
17	Osiris	NS3 String Device_28:63:36:6b:80:a5IM0_SoftwareVersion	SoftwareVersion	V 7.0.5	11:34:22.053	Good


8.13 MQTT

Osiris supports the MQTT connectivity protocol, which is very efficient in the sense that bandwidth usage is limited. It transports the following data from Osiris to an MQTT-broker:



- Device List (same as in the webservice)
- Traffic Light
- Q-Factor
- Measurement status
- Device status (of Atlas or Mercury)

The default port to connect to is 1883.

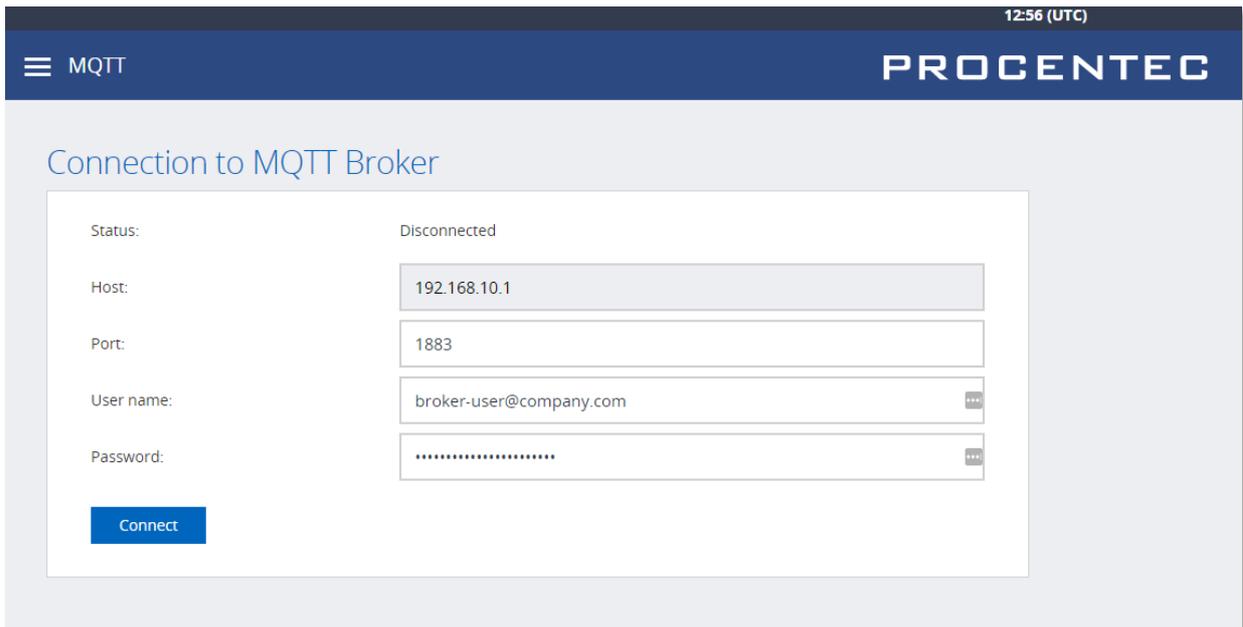

The following MQTT topics are available for subscription:

Topic	Description
/osiris/general/deviceinfo	General information regarding Osiris
/osiris/measurement/status	Status of the measurement
/osiris/measurement/ethernet/trafficlight	Status of the traffic light
/osiris/measurement/ethernet/qfactor	Q-Factor values
/osiris/measurement/ethernet/devices	Device list information

Osiris automatically subscribes to the following topic:

Topic	Description
/osiris/control/republish	When receiving data in this topic, Osiris will republish all its data to their respective MQTT Topics. Message can either be empty or have an empty JSON object. That depends on the MQTT library used by the client.

8.14 E-mail Notifications

The E-mail Notifications tile is a shortcut to the Email settings. See paragraph 12.3 for more information.



8.15 IXON VPN service (Atlas only)

A VPN (Virtual Private Network) service makes it possible to connect to a system or network with a secure connection, remotely. As long as both devices are connected to the internet they can securely communicate over the VPN.



PROCENTEC has a partnership with IXON, a secure VPN services provider. You can benefit of the integration of IXON VPN in PROCENTEC products. Currently this service is limited to Atlas only.

Atlas is equipped with IXON VPN Service. This makes it possible to view and use the Atlas web interface from outside the company network. Every function you are used to use in the local network also works via the remote connection of the VPN. A dedicated tile is present by default on the dashboard of Osiris in order to access VPN functionality.

To make the VPN Service available make sure you have:

- An Atlas with firmware 1.1.70 or higher
- An internet connection
- An IXON Cloud account (a one-time fee for each Atlas applies)

You can register a new IXON Cloud account on <https://connect.ixon.cloud/>.

8.15.1 Configure a VPN Service on your device

These are the steps to follow to configure your Atlas PROCENTEC device (First make sure that your PROCENTEC license allows you to use the IXON VPN in Atlas. If not, proceed to a license change as explained in paragraph 0):

1. Log in into the Atlas web interface. You should see a tile on the dashboard called "IXON VPN". Click on it.
2. You land on a page where you monitor the VPN functionality. Initially the Atlas is not registered in the IXON Service. Thus you will see your status as : "Not registered".
3. Click on "Register" button and enter the validation Company ID that IXON gave you.

Once you have accepted the terms and conditions, the registration form will open. A representation of the registration form is shown in the image below.

A screenshot of a web form titled "Register IXON VPN" with a close button (X) in the top right corner. The form contains a text input field labeled "Company ID:". Below the field is a blue information icon followed by the text: "Note: the company ID is provided by IXON. Please create an account at [ixon.cloud](https://connect.ixon.cloud/) to obtain your company ID." At the bottom of the form, there are two buttons: "Cancel" and "Apply".

This Company ID is assigned to your IXON Cloud account. This can be found on <https://connect.ixon.cloud/> under your company settings (encircled in red).


Enter the Company ID into the registration form on the Atlas and press Apply to create the connection to the VPN Service. This could take up to a minute.

If the connection to IXON has successfully been established, the following view will be shown on the VPN page of the web interface:



This view contains an overview of the current connection to IXON. This overview above contains the following data:

- Agent ID: This is the ID of the device that is visible in the IXON Cloud webpage.
- Company ID: This is the Company ID entered for registration.
- Company Name: This name is your company.
- Status: Shows whether the service is Disconnected, Connected or Connecting to the IXON VPN service.

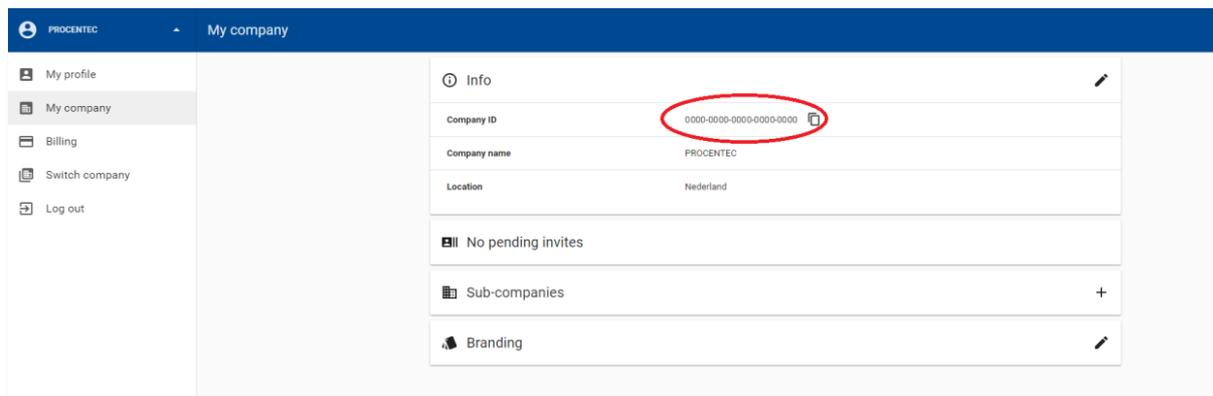

The two buttons are for controlling the connection to IXON. These actions can also be performed from the IXON Cloud webpage.

- Disconnect: Disconnects from the VPN service, this will not delete the device in your device list of your IXON Cloud account.
- Connect: Connect to the VPN service.
- Unregister: This will completely remove the device and all its settings in your IXON Cloud account.


8.15.2 How to use IXON VPN

After the configuration of your device, you can access it remotely via internet. From your distant computer, open the browser, go to IXON login page <https://connect.ixon.cloud/login> and log in.

On the IXON webpage, on the left side is the "Devices" list. You will see the list of devices that you have configured to run IXON VPN. Select the device you want to connect to (which should have a green circle next to his name if the device has been configured and is up and running). You have to specify a name for the device and activate it.

After this device is named and activated, you can select it, and see all its characteristics in a panel on the right.


Click the "SERVICES" section.

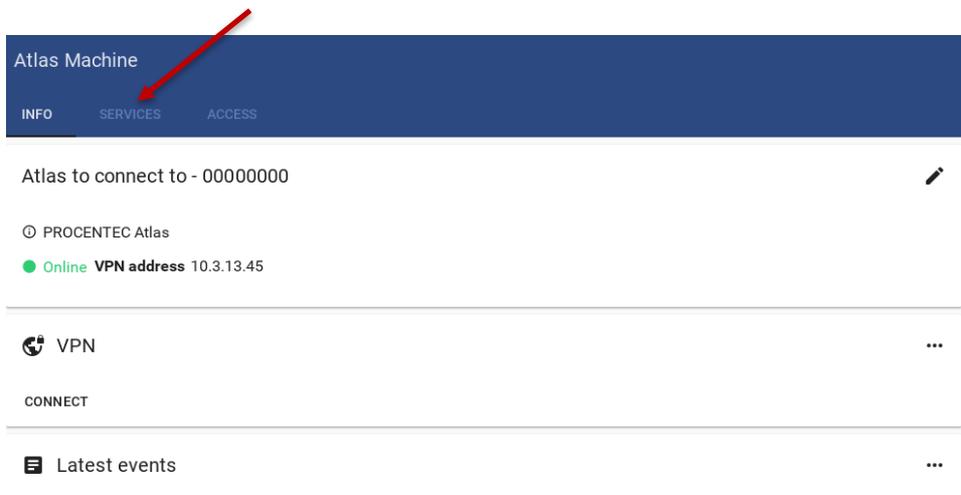


Edit a new service, by clicking the pen icon.



Then add a new service:

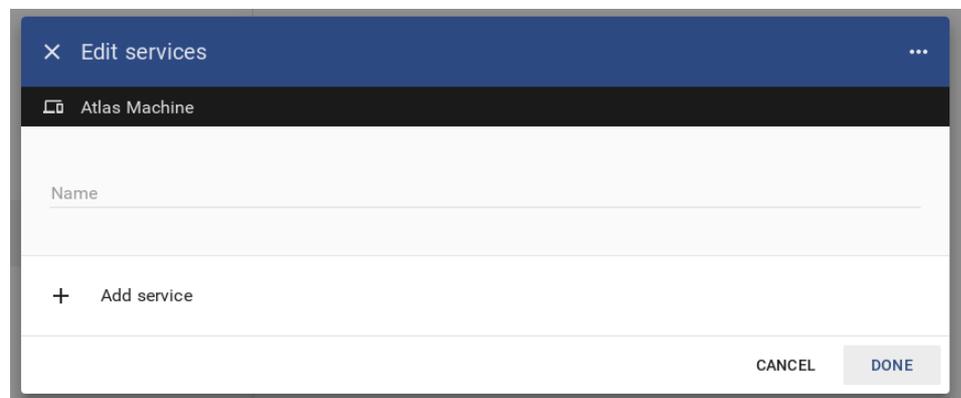

And create a new HTTP connection by selecting HTTP SERVER:

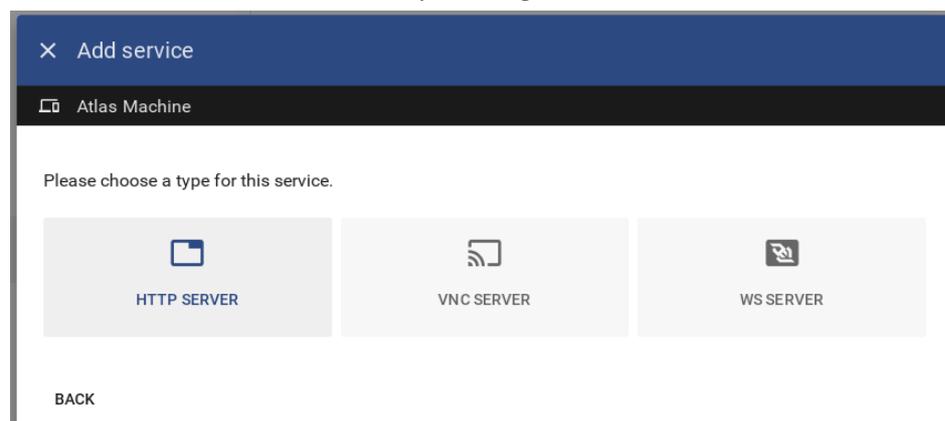

Select the HTTPS secured option:

×

 Add service

Add the new service.

Now, below the VPN section in the INFO tab, you can click on the “HTTP SERVER” button and you will be redirected by your browser to your remote device, via the IXON website.

Atlas Machine

INFO SERVICES ACCESS

Atlas to connect to - 00000000

PROCENTEC Atlas

Online VPN address 10.3.13.45

VPN

CONNECT

HTTP SERVER

Latest events

9. Commissioning Wizard

The PROCENEC Commissioning Wizard is a series of automated checks to see if the network is in compliance with the guidelines of the used protocol. The checks are based on the PROFINET Commissioning Guidelines v1.36, Ethernet/IP Commissioning Guideline v1.00 and PROCENEC's expertise on PROFINET and Ethernet/IP networks.

Each item can be confirmed as successful or it can be declined after the checks have been performed. When the wizard has finished, an optional report can be generated.

9.1.1 Starting the Commissioning Wizard

Make sure a measurement is already running before starting the Commissioning Wizard; the wizard cannot run without a measurement. Also make sure to have a valid license for the protocol you want to run the wizard.

When starting the Wizard, you need to select the protocol that you wish to run the Commissioning Wizard on, and also a mode. Two modes can be selected, Quickscan and Commissioning. These modes are described in the paragraphs below.

9.1.2 Quickscan

Quickscan will perform only automatic checks. No user interaction is required. Performed checks:

Check	PROFINET	Ethernet/IP
Double IP addresses	✓	✓
Firmware differences	✓	✓
Discarded packets	✓	✓
Network load	✓	✓
ARP requests	✓	✓
DCP multicasts	✓	✗
IGMP multicasts	✗	✓
Device names	✓	✗

The Quickscan will result in a summary of scanned items, and a button to generate a report:

PROFINET: Quickscan Results

These are the results of the PROFINET commissioning checks which were completed automatically.

- ✔ No double IP addresses ?
- ✘ Firmware differences found ?
- ✔ No discarded packets detected ?
- ✔ Network load below 50% ?
- ✘ ARP requests identified ?
- ✘ DCP multicasts limit exceeded ?
- ✔ PROFINET device names are valid ?

Cancel

Skip to Report

Back

Next

9.1.3 Commissioning

Checks the network without the need for an EtherTAP. It will perform all the checks of the Quickscan and will also perform a:

Check	PROFINET	Ethernet/IP
Topology check	✔	✔
Device details check	✔	✔
Device count check	✔	✔

At the end of the wizard you can press 'Generate Report' to create an automated report of all checked items. This is an HTML based report and can be directly printed from the browser or exported to PDF (you need to install a PDF generator first). You can also save as an HTML page.

This Report also contains a section called 'Visual Inspection' with items that can be manually filled in later.

10. EtherTAP

10.1.1 EtherTAP – Message Analysis

The EtherTAP – Message Analysis feature allows you to do deep analysis of network traffic by placing an EtherTAP between devices exchanging traffic (usually between a Controller and the first switch).



To make tapping available make sure you have:

- A correct license
- An EtherTAP placed between two devices communicating (between a Controller and the first switch).
- A running measurement

10.1.2 Supported EtherTAP types

The supported EtherTAP types are:

- EtherTAP 10/100 (Product code 513-00011A)
- EtherTAP 1G (Product code 513-00021A)

The product number can be found on the back of the EtherTAP as depicted in the image below. Other TAPs cannot be used.



10.1.3 How to start using the EtherTAP

The EtherTAP must be connected with the supplied USB3 cable. A USB2 cable cannot be used. The USB3 cable can be connected to any port of the Atlas or to the USB 3.0 port of Mercury (on the right side). Note: do not use USB 2.0 port on Mercury.



For Mercury and Osiris as a Software: Only plug in the EtherTAP USB cable after Osiris has completed booting. Otherwise the EtherTAP will not be recognized correctly.

The two RJ45 ports of the EtherTAP must be connected as follows: one cable between the Controller and the EtherTAP, and one cable between the first switch and the EtherTAP. This switch port should not be a mirror port.

Installing the EtherTAP means that you need to disconnect the Controller, and all the network communication will stop! Make sure this is done only with permission.

NOTE: the RJ45 connector of the scanning port of the Atlas or Mercury must also be connected. If this is done correctly, you should see a tile in the Dashboard with the message 'TAP **connected**'. The tile already shows a general status of the network. Click the tile to open the EtherTAP information page.

Tapping is divided in PROFINET-specific data, Ethernet/IP specific data and generic Ethernet data. The top-left drop-down bar lets you choose the protocols.

10.2 PROFINET analysis

10.2.1 Network overview and device details

The Tapping for PROFINET requires a specific license.

The PROFINET overview page lets you read out four types of data:

- 1. The cycle time per device**

PROFINET devices send data on a very periodic basis, these are called cycle times. Cycle times are defined in milliseconds.

- 2. Positive and negative message jitter as a percentage of the cycle time**

Jitter is the deviation of a message from the intended cycle time. Example: if a device sends a message every 4ms, then a delay of an additional 4ms leads to a jitter of 100%. In case the message is 1ms early then a jitter of 25% is being reported. Both messages which are early and late are reported in absolute percentages.


- 3. The number of Dropped Packets**

Dropped packets are PROFINET messages which were missing in the communication cycle. Healthy PROFINET networks should never drop messages, too many consecutive dropped packets can cause the stop of the network.

- 4. The number of Alarms**


PROFINET alarms are specific error messages sent by the controller or the devices using the PROFINET protocol.

The image below shows the complete overview of all devices in the network, with the details described above:

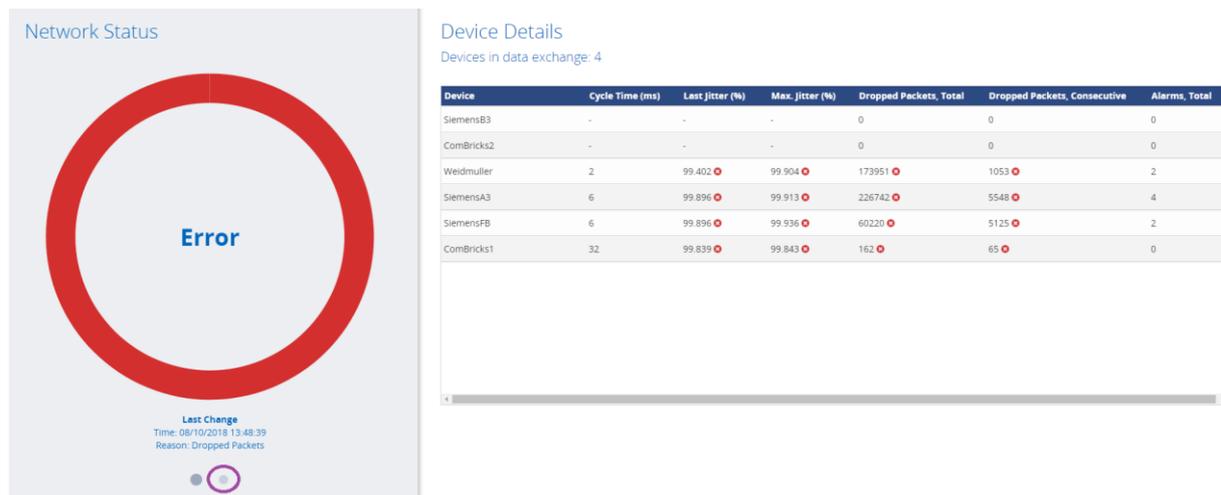

In case of errors, the large circle turns red as shown in the image. The right pane is a list of PROFINET statistics and errors per device.


By clicking the gray dot (encircled in purple) the left panel shows more details about the network:

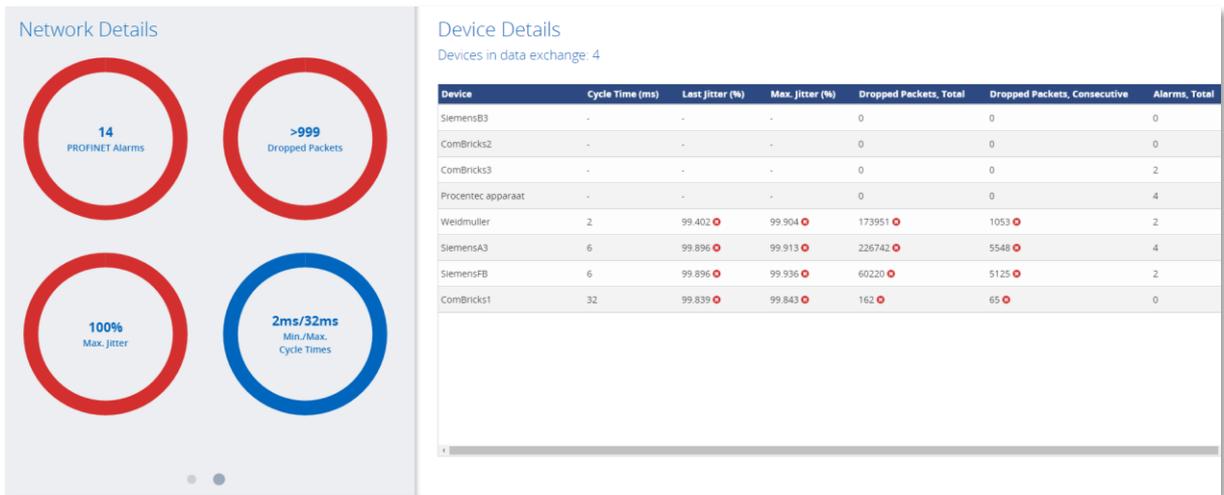

By clicking on one of the circles you can filter which columns are shown in the table on the right.

10.2.2 Alarms

Clicking the 'View' pulldown menu lets you switch to the PROFINET alarms overview:

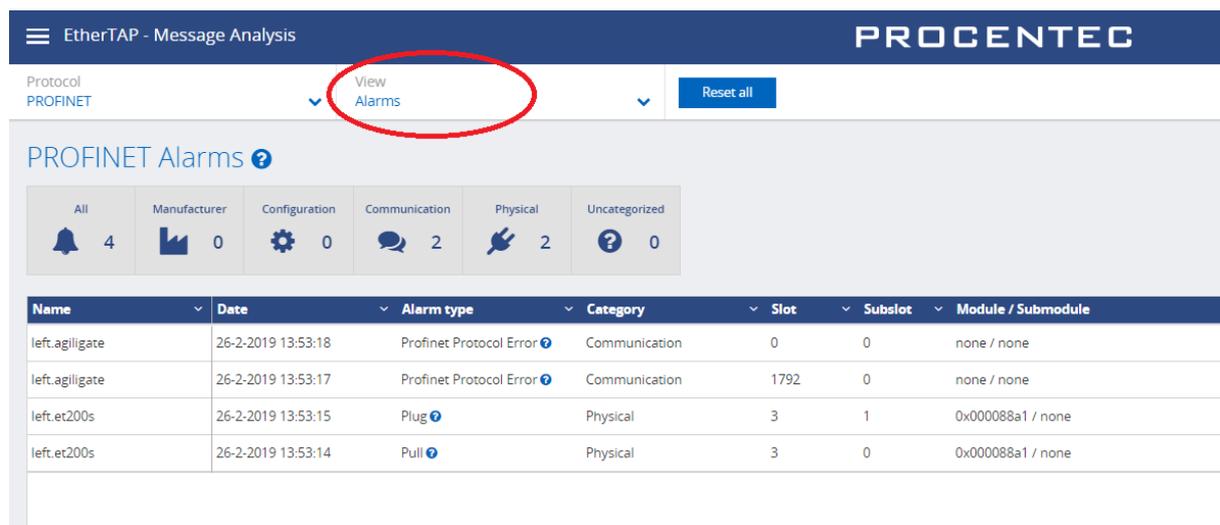

This view gives specific information about different types of PROFINET Alarms. By clicking the icons in the gray bar you can filter different types of alarms.

You can click on the question mark near the Alarm type in order to get extra information about the alarm from Delphi.

10.2.3 Message Recording

Osiris records Ethernet packets when something is wrong in the network. Recording is done in the .pcapng format, which allows easy opening in Wireshark.

Three triggers (events) can be used to record a message file:

- PROFINET Alarms
- Jitter too high
- Dropped PROFINET packets

Protocol PROFINET View Message Recording Reset all EtherTAP | Status: Connected | Type: EtherTAP 100M

Message Recording ?

Triggers

Profinet Alarms Max. Jitter Dropped Packets

Files

Used 8/100 allowed message recordings

Name	Date and time	Type	Download	Delete
left.et200s	26-2-2019 13:53:14	Profinet Alarms		
left.plc	15-2-2019 16:33:11	Profinet Alarms		
left.et200s	15-2-2019 16:32:20	Profinet Alarms		
left.plc	15-2-2019 16:31:41	Profinet Alarms		
left.plc	15-2-2019 16:29:48	Profinet Alarms		
left.plc	15-2-2019 16:28:41	Profinet Alarms		
left.plc	15-2-2019 16:23:34	Profinet Alarms		
left.plc	15-2-2019 16:21:31	Profinet Alarms		

[Delete](#)

In this overview you can see the filename and a recorded date and time, the event that triggered the recording, and a button to download or delete the recorded file.

It is possible to store up to 100 .pcapng files in Osiris. After 100 files the recording of messages will stop until the files are deleted. The number of recorded messages is shown in the top right corner of the screen.

10.3 Ethernet/IP analysis

10.3.1 Network overview and details

The Tapping for Ethernet/IP requires a specific license.

The Ethernet/IP overview page lets you read out six types of data:

1. **Connection ID**
Every implicit CIP connection has a unique Identifier.
2. **I/O**
The data of an implicit CIP connection can be inputs or outputs.
3. **The packet interval per device (API)**
Ethernet/IP devices send data on a very periodic basis, these are called packets intervals and are defined in milliseconds.
4. **Positive and negative message jitter as a percentage of the packet interval**
Jitter is the deviation of a message from the intended packet interval. Example: if a device sends a message every 4ms, then a delay of an additional 4ms leads to a jitter of 100%. In case the message is 1ms early then a jitter of 25% is being reported. Both messages which are early and late are reported in absolute percentages.

5. The number of Dropped Packets

Dropped packets are Ethernet/IP messages which were missing in the communication cycle. Healthy Ethernet/IP networks should never drop messages, too many consecutive dropped packets can cause the stop of the network.

6. The status of Connections (active/dead)

Dead connections can be due to the loss of too many consecutive messages, a device has been switched off or the scanner/adaptor closed the connection (i.e. new configuration, inhibit a module, etc.)

The image below shows the complete overview of all devices in the network, with the details described above:

The screenshot shows the EtherTAP Message Analysis interface. The left panel, titled "Ethernet/IP Status", displays a large red circle with the word "Error" in the center. Below the circle, it indicates "Last Change Time: 1-7-2019 11:03:13 Reason: Dead Connection". The right panel, titled "Connection Details", shows a table of 12 connections with various statistics.

IP Address	Connection ID	I/O	Status	API (ms)	Last Jitter (%)	Max. Jitter (%)	Dropped Packets, Total	Dropped Packets, Consecutive
192.168.13.20	0x00a408f	In	Active	60.0	1.8	4.2	0	0
192.168.13.20	0x80c30001	Out	Active	58.0	0.0	0.0	0	0
192.168.13.45	0x5692b734	Out	Dead	300.0	0.0	0.0	0	0
192.168.13.45	0x5692b735	In	Dead	311.7	309.6	309.6	0	0
192.168.13.45	0x5694406c	Out	Active	300.0	0.0	0.0	0	0
192.168.13.45	0x5694406d	In	Active	302.4	0.9	292.4	0	0
192.168.13.46	0x002a4091	In	Active	10.0	0.3	1.1	0	0
192.168.13.46	0x003a4094	In	Active	30.0	0.0	0.4	0	0
192.168.13.46	0x004a4095	In	Active	40.0	0.0	0.2	0	0
192.168.13.46	0x56938a2f	Out	Active	10.0	0.0	0.0	0	0
192.168.13.46	0x569396ff	Out	Active	30.0	0.0	0.0	0	0
192.168.13.46	0x56939700	Out	Active	500.0	0.0	0.0	0	0

In case of errors, the large circle turns red as shown in the image. The right pane is a list of Ethernet/IP connections with statistics and errors.

By clicking the gray dot (encircled in purple) the left panel shows more details about the network:

The screenshot shows the EtherTAP Message Analysis interface with the left panel displaying "Network Details". It features four circular gauges: "0 Dropped Packets" (green), "10.0ms/ 500.0ms Min./Max. Actual Packet Interval" (blue), "310% Max. Jitter" (orange), and "1 Dead Connections" (red). A purple circle highlights a gray dot at the bottom of the gauges. The right panel, "Connection Details", shows the same table of connections as in the previous screenshot.


By clicking on one of the circles you can filter which columns are shown in the table on the right.

10.3.2 Message Recording

Osiris records Ethernet packets when something is wrong in the network. Recording is done in the .pcapng format, which allows easy opening in Wireshark.

Three triggers (events) can be used to record a message file:

- Jitter too high
- Dropped Ethernet/IP packets
- Dead connections

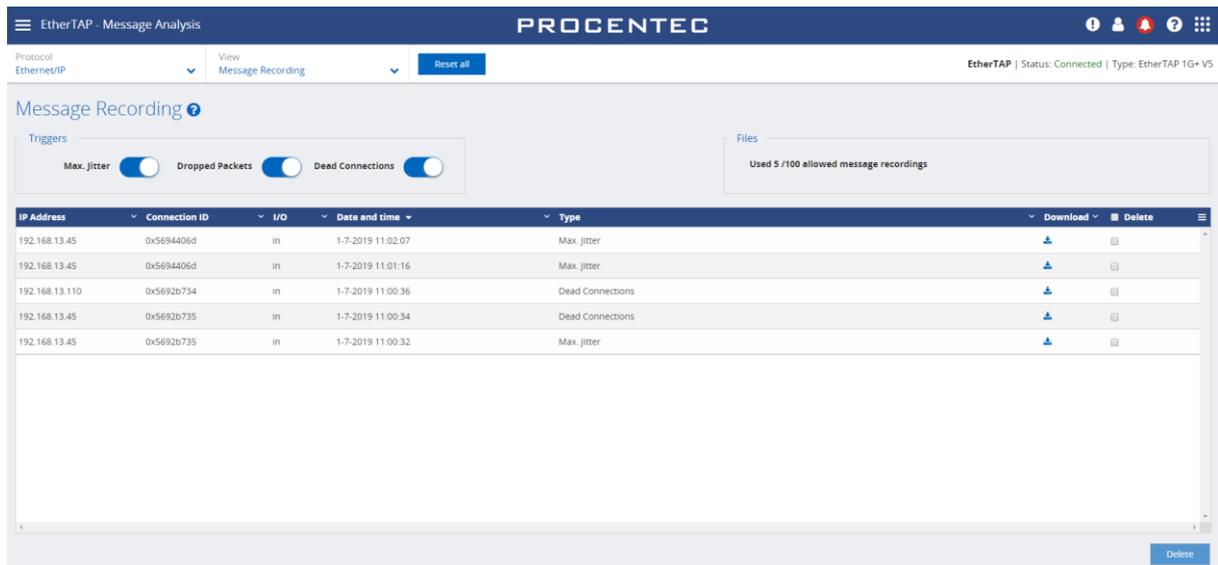

IP Address	Connection ID	I/O	Date and time	Type	Download	Delete
192.168.13.45	0x5694406d	in	1-7-2019 11:02:07	Max. jitter	Download	Delete
192.168.13.45	0x5694406d	in	1-7-2019 11:01:16	Max. jitter	Download	Delete
192.168.13.110	0x5692b734	in	1-7-2019 11:00:36	Dead Connections	Download	Delete
192.168.13.45	0x5692b735	in	1-7-2019 11:00:34	Dead Connections	Download	Delete
192.168.13.45	0x5692b735	in	1-7-2019 11:00:32	Max. jitter	Download	Delete

In this overview you can see the IP address of the involved device, the Connection ID, the I/O type of the connection, a recorded date and time, the event that triggered the recording, the file name, and a button to download or delete the recorded file.

It is possible to store up to 100 .pcapng files in Osiris. After 100 files the recording of messages will stop until the files are deleted. The number of recorded messages is shown in the top right corner of the screen.

10.4 Ethernet analysis

10.4.1 Overview


Select 'Ethernet' as the protocol in the top-left drop-down bar to view the Ethernet statistics.

These statistics are collected by the EtherTAP of the link it is currently monitoring.

Here is possible to analyze the amount of Network load and communication errors happening on the Ethernet link with the timestamp of the last change.

The EtherTAP has a Port A and Port B, which are separately listed, each with their individual statistics.


Click the blue Question Mark '?' sign for detailed information about the shown statistics.

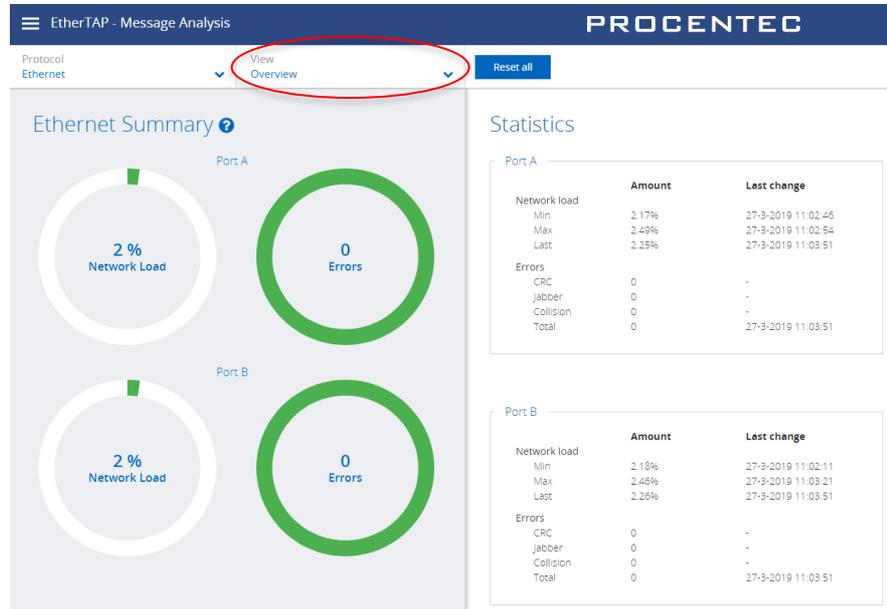

10.4.2 Trending


The information displayed in the previous chapter can also be displayed in a trending graph. This makes it clear to see when problems occurred, or when load was abnormally high or low.

The Min, Max and average load can be enabled for each port. Trending is keeping in memory the last 2h of communication, and a new sample is added every second. For detailed information please refer to the Delphi Help, by clicking on the question mark '?' sign.

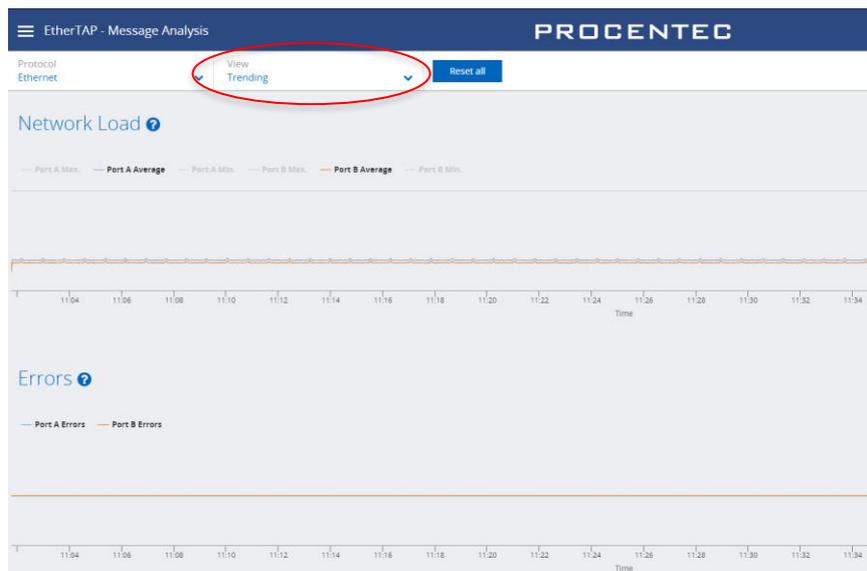

11. Device mode: PROFIBUS (Not available on Atlas)

To begin using Osiris in PROFIBUS mode, first make sure to connect a ProfiCore Ultra to one of the USB ports of the Mercury. When the Mercury, PC or laptop has been set up and connected, start a new measurement by clicking on the round progress indicator in the System Buttons area, and click 'Start'.

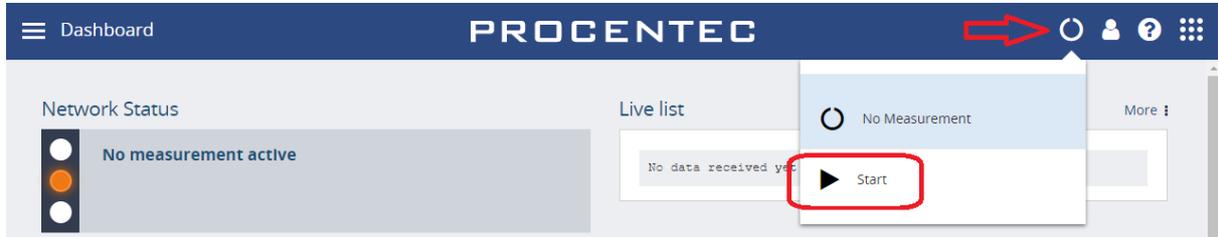

To indicate the measurement is running, you will now see a spinning progress indicator.

For each menu item, the Delphi Help can be viewed by pressing the  button.

11.1 Dashboard

The Dashboard gives a clear overview of the Network status of the network (Traffic Light style), a Live list, and a Network summary of all collected data.

11.1.1 Network status

The Network Status indicator or Traffic Light will turn yellow or red if problems or errors occur. The errors that have occurred can be found in the 'Device errors' tab.

When the PROFIBUS network is running without any problems, the Traffic Light will be green. In the following situations the color of the traffic light will change:


Warning/event	Traffic light state
Idle voltage low (0,9 V to 0,3 V)	●
Critical diagnosis (Ext-diag)	●
Configuration error	●
Parameter error	●
Risk margin low (60 to 40)	●
Slave amplitude low (just above limit 2.5 V)	●
Repeats	●
Syncs	●
Idle voltage below limit (< 0,3 V)	●
Risk margin below limit (< 40)	●
Slave amplitude below limit (< 2,5 V)	●
Slave edge steepness below limit (< 1/16 tBit)	●
Illegals	●
Slave lost	●

11.1.1.1 Network summary

The Network summary gives a clear overview of currently detected network settings, statistics and measurements:

Network summary item	Meaning
Baudrate	The detected bus speed of this PROFIBUS network.
HSA	The Highest Station Address, the highest possible master node in this network.
Masters	Number of detected masters.
Slaves	Number of detected slaves.
In Data Exchange	Number of detected slaves in Data Exchange with a master.
Tslot	The maximum allowed response time for a slave.
MinTSDR	The required waiting time for a slave before it can respond. (only visible when a parameter message has been sent by the master)
MaxTSDR	The maximum time for a slave before it times out.
Tid1	Idle time; the minimum waiting time for the master before it can send a new message.
Watchdog	The safety time-out for a slave. (only visible when a parameter message has been sent by the master)
Actual idle voltage	The voltage on the bus when no node is sending.
Min idle voltage	The lowest recorded idle voltage on the bus when no node is sending.
Max idle voltage	The highest recorded idle voltage on the bus when no node is sending.

The Live List below the Network Summary is explained in detail in paragraph 11.1.1.2. To get to the LiveList, click upper left menu button.

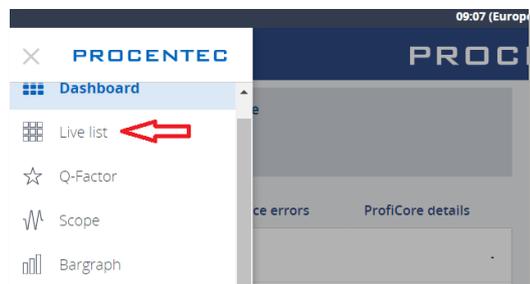

11.1.1.2 Live list

The live List in the Dashboard shows all the nodes that are present on the bus. Masters have a small crown icon, slaves have colored backgrounds if they are communicating. Below is a full list of possible indications:

Live List indication	Meaning
	Active master.
	Slave in data exchange with a master, no ident number captured.

	Slave in data exchange with a master, ident number captured.
	Idle slave, not assigned to any master.
	Slave configured, but not reachable by the master.
	This slave has been incorrectly parameterized by the master. Possibly a wrong address or a wrong GSD has been used.
	This slave has been incorrectly configured by the master, or the hardware modules in the slave are not correct.

Above the Live List is a button to control the device statistics of the Live List. The Device Statistics button default setting shows the slave model name, if the Ident number has been captured. This only occurs during master or slave startup, or when diagnostic messages are sent from the slave. Another prerequisite is that the GSD file is listed in the library of the Mercury. For more information on this, see paragraph 11.1.6.

The Live List can be 'paused' by switching the 'Auto Update' button to off. No changes will be visible.

11.1.1.3 Info Panel

Under the Live List is the Info Panel. This does not show any information if the network is running without problems. You can click on an address to see the details and any recorded problems, divided over four tabs; General, Diagnostics, Parameter and Configuration. These are shown on the following pages.

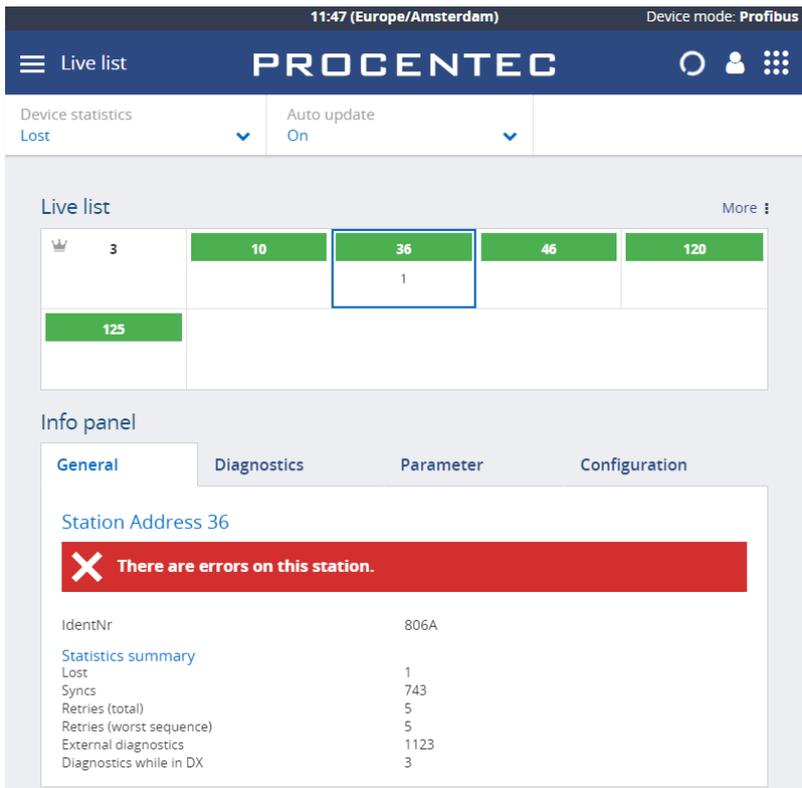


Figure 21 - General errors of the selected station.

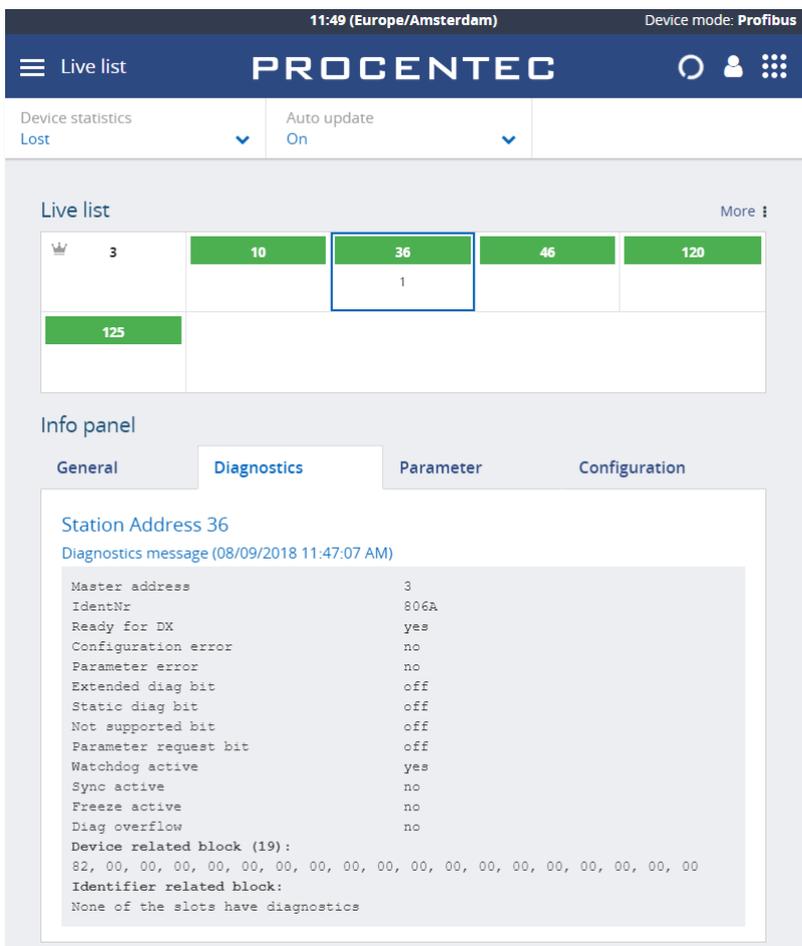


Figure 22 - Diagnostic information from the selected station.

11.1.2 Q-Factor

The Q-Factor is a number that represents the quality of the network.

A value of 5000 is excellent and 0 is critical or unmeasurable. Additionally, a color coding is used to emphasize the severity. Normally the color should be green, meaning excellent or good. Orange is below average but not critical, e.g. attention recommended. Red means a bad, critical or urgent issue.

There are multiple Q-Factors in use in the tool:

- A Q-Factor for each network device, which indicates the quality for a single device. Calculation of this Q-Factor is based on a weight of:
 - Measured voltage, or amplitude
 - Edge steepness
 - Risk margin
- A single overall Q-Factor, indicating the quality of a complete network. Currently the overall Q-Factor equals to the lowest Q-Factor of an individual network device.

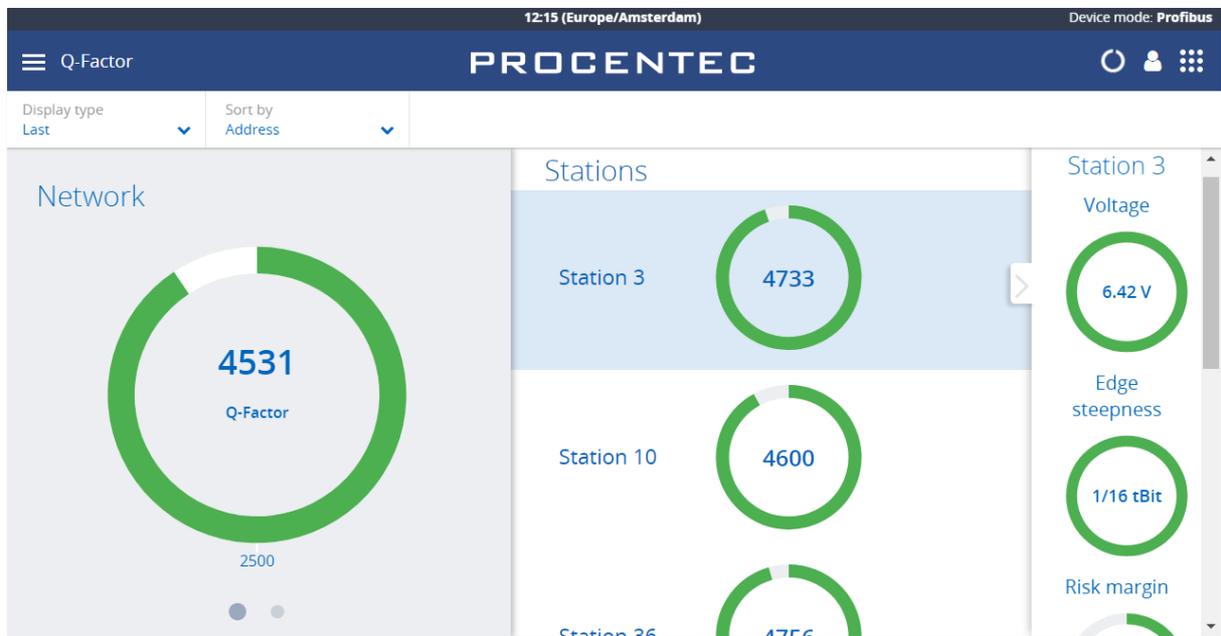


Figure 25 – The Q-Factor

The buttons on top can be used to view the last, best or worst values. Swiping the main Q-factor to the left shows a more detailed Q-factor. Clicking a station Q-factor brings up a detailed measurement column on the right.

11.1.3 Scope

The Scope view shows a detailed live oscilloscope waveform of a specific device, and is one of the most important items to check during commissioning or troubleshooting because it gives an accurate view of the health of the network.

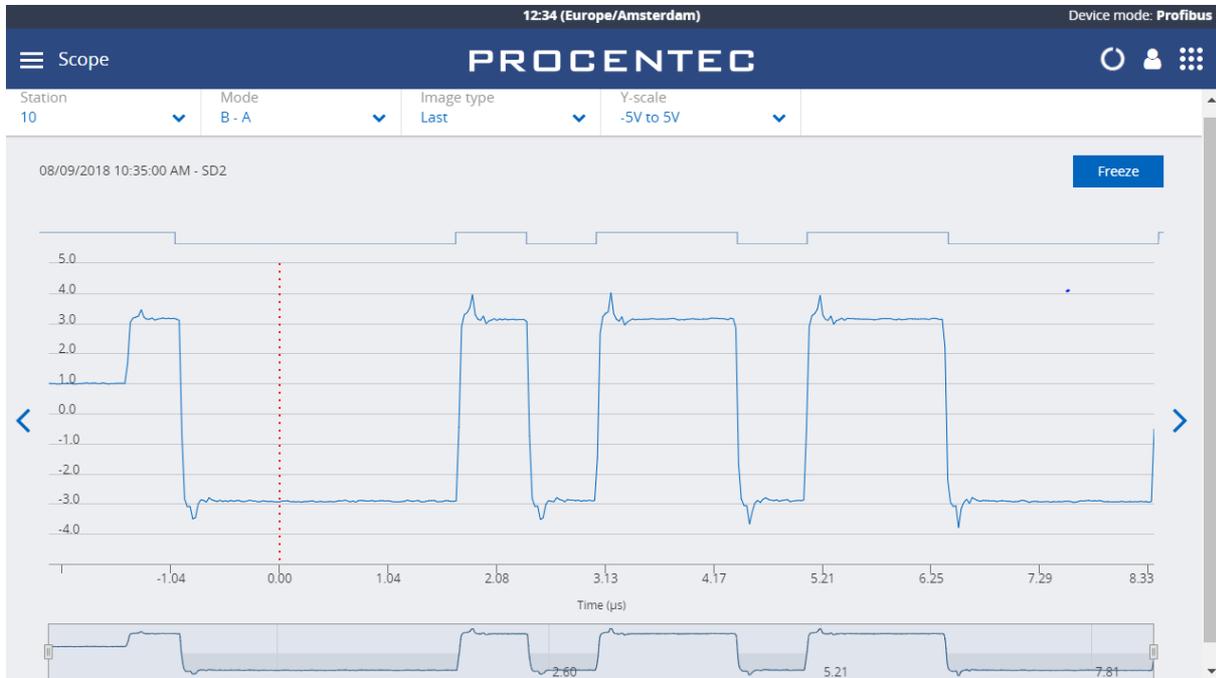


Figure 26 – Normal oscilloscope image of device 10

Use the Station selector in the top left to choose another device or use the '<' and '>' on the left and right to easily cycle through all available addresses.

The 'Mode' button lets you switch between B-A differential mode, the A or B line separately, or both A and B simultaneously. This is useful when troubleshooting a wire break, short circuit with shield or poor connection of one of the wires.

The 'Image type' button allows you to see the last, lowest (minimum) or highest (maximum) measured value. These values are stored in memory from the beginning of the measurement. Leaving the Mercury running for a longer period of time gives a good indication of the lowest / worst oscilloscope signal.

There is also an 'Error' image, this shows the last detected corrupt frame. This only works if the mode is set to 'Error' at the time of the error, so it cannot detect error signals in the background.

Above the oscilloscope image there is a digital representation of the measured signal. This can help determining if there are actual problems with the signal.

Below the oscilloscope image there is a timeline that can be used to scroll left and right in a scope image. Use two fingers to 'pinch' the screen on the oscilloscope line, which zooms in or out. Move the timeline with one finger to scroll.

There is a 'Freeze' button on the top right to stop the screen, to be able to analyze a specific signal.

11.1.4 Bargraph

The Bar graph illustrates the average signal strength from all available devices. It is a helpful utility to get an impression of the overall signal quality of the network.



Figure 27 - Good bargraph levels

The average amplitude should be around 5 V. When there are bus problems the Bar graph will display different voltage levels and the color of the bars will change.

Each bar has a Min and Max level, indicated with blue lines on the bars. These indicate the highest and lowest measured amplitudes, corresponding with the Min and Max levels in the oscilloscope images.

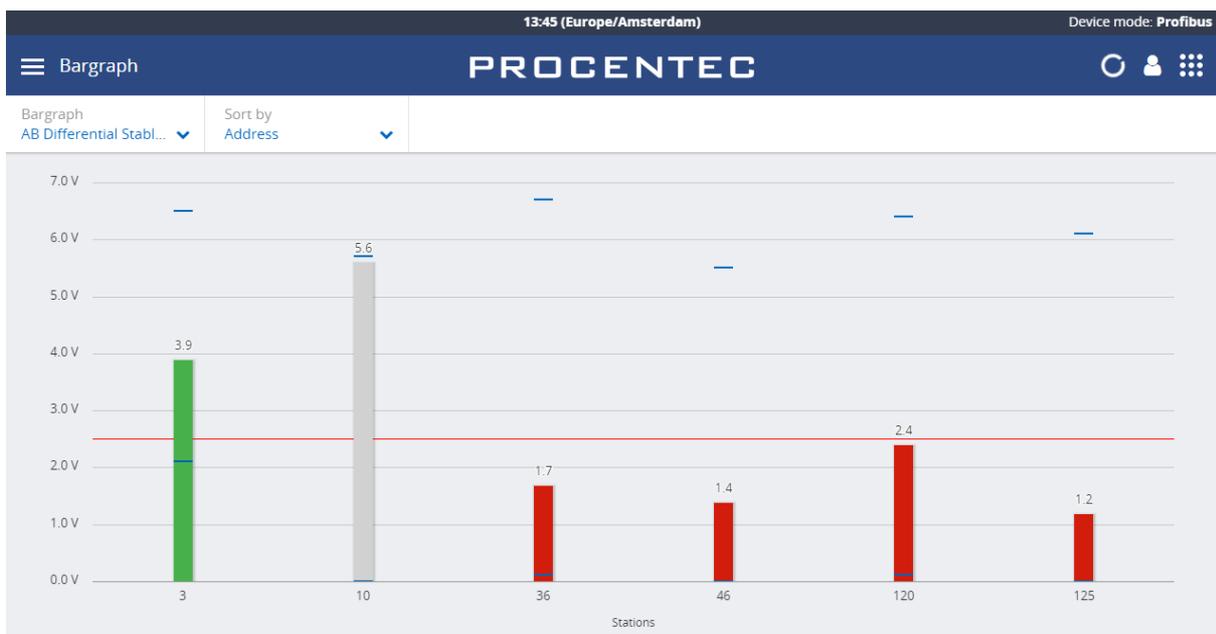


Figure 28 - Inactive and low bars

Column	Description	Units
	An ACK message does not contain addresses, so this field will be empty.	
Msg Type	The Msg Type column specifies the higher level DP, DP-V1 and DP-V2 messages.	
Service	The Service column specifies the type of service of a message. The information is extracted from the FC byte when available (only valid for SD1,SD2 or SD3 messages).	
Type	The Type column indicates a request or response message.	<ul style="list-style-type: none"> • Req • Res
Frame	The 'Frame' specifies the frame type of the message.	<ul style="list-style-type: none"> • SD1 • SD2 • SD3 • SD4 • ACK
FC	Frame Control byte of the message.	Hex
Timestamp	The timestamp is calculated on the basis of a starting moment the user has defined and subsequent messages add to a delta-bittime to this beginning. This means that the timestamp internally consists of 2 parts: the time/date and the delta-bittimes that have passed.	
SAPs	The SAPs column specifies the source and destination SAP of the message. Requests: Source SAP -> Destination SAP Responses: Destination SAP <- Source SAP	Decimal
Length	The Length column specifies length of the user data of a message (only valid for SD2 and SD3 messages and does not include SAPs).	Decimal
Data	The Data column contains the USER DATA or Outputs and Inputs of messages.	Hex
Station	Model name of the device. Can only be displayed if the ident number was captured and the GSD is known (paragraph 11.1.6)	

11.1.6 GSD Management

Mercury features a GSD library with all relevant information from PROFIBUS slaves, such as the device capabilities, device name, manufacturer, version, diagnostic information and possible configurations. This information is used in other parts of the Mercury.

Press the Upload button to select a folder containing GSD files.

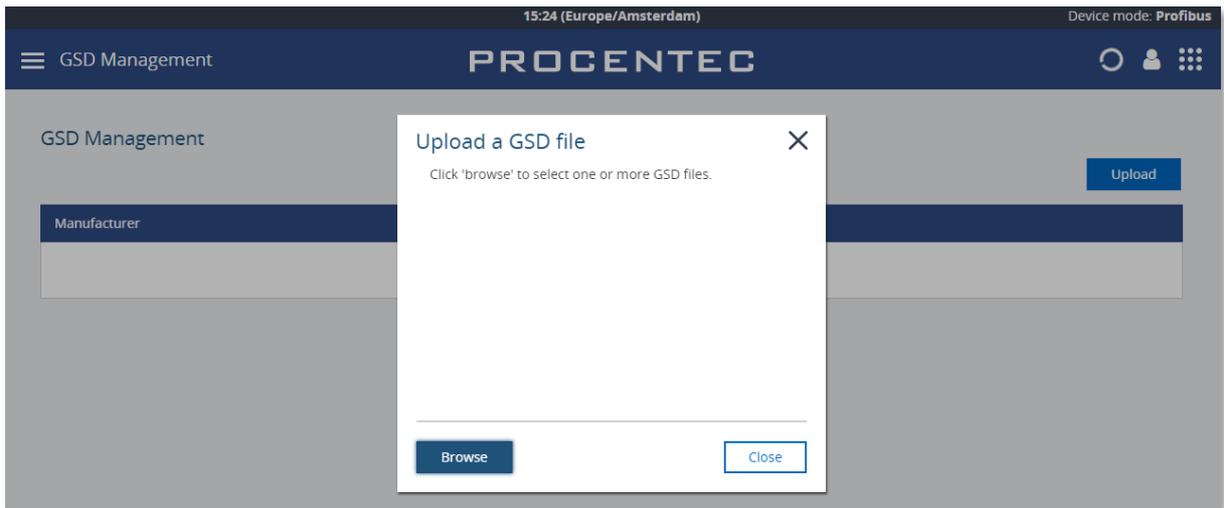


Figure 29 - Click Browse to select a folder containing GSD files..


Then click 'Upload' to copy all the selected GSD files to the Mercury. Depending on the number of files, this can take some time. The Mercury automatically makes a library of all GSD files.

The GSD files are then sorted on Manufacturer name and the information in the GSDs is available in the other features of Mercury.

12. Settings

Most of the Osiris settings can be changed manually instead of using the Setup Wizard. Click the Settings tile on the Dashboard, or use the Menu button and select 'Settings'.

12.1 General

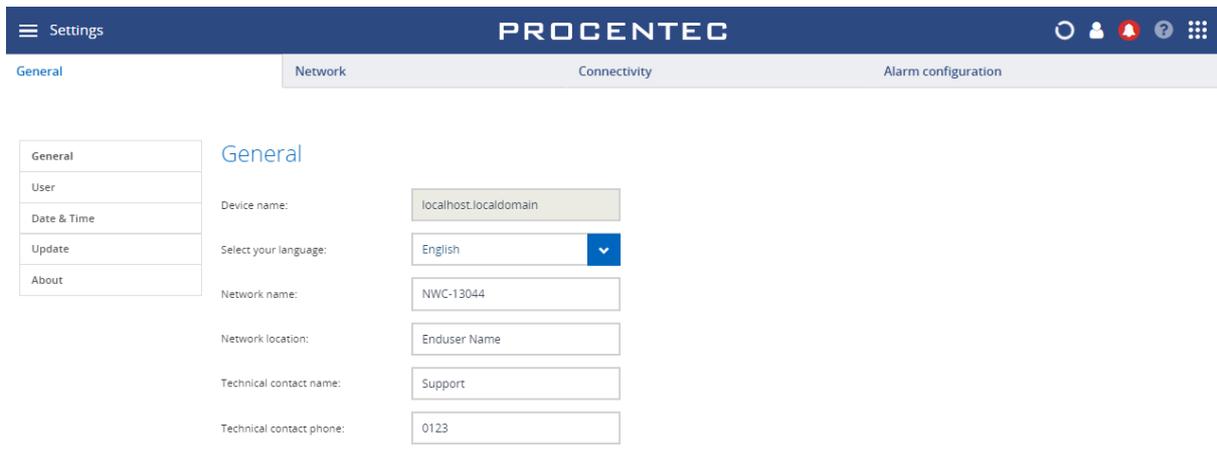

The screenshot shows the PROCENTEC Settings interface. The top navigation bar includes a menu icon, the text 'Settings', the PROCENTEC logo, and several utility icons. Below the navigation bar, there are four tabs: 'General' (selected), 'Network', 'Connectivity', and 'Alarm configuration'. On the left side of the 'General' tab, there is a vertical menu with options: 'General', 'User', 'Date & Time', 'Update', and 'About'. The main content area is titled 'General' and contains the following fields:


Device name:	localhost.localdomain
Select your language:	English
Network name:	NWC-13044
Network location:	Enduser Name
Technical contact name:	Support
Technical contact phone:	0123

The General settings page shows the following items:

- The Device name: this is the hostname of device. It cannot be changed.
- Select your language: the interface language.
- The Network name is displayed on the dashboard.

12.1.1 User

The User menu item allows Administrators to assign new passwords to the standard users (administrator, networkengineer, engineer, operator). Before assigning a new password, the administrator first needs to enter his own current password, and subsequently the new password and a confirmation of the new password. More information can be found in paragraph 8.1.3.

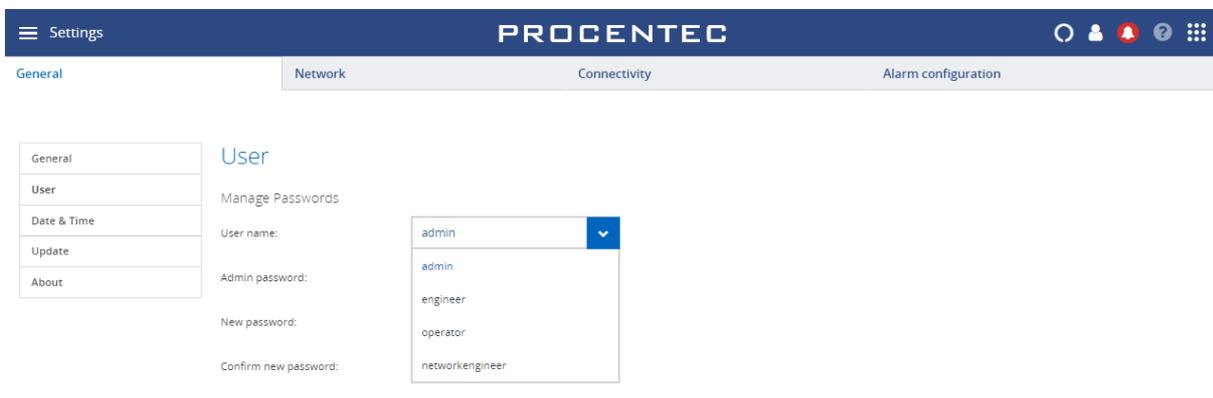

The screenshot shows the PROCENTEC Settings interface with the 'User' tab selected. The top navigation bar and tabs are the same as in the previous screenshot. The vertical menu on the left now has 'User' selected. The main content area is titled 'User' and contains the following fields:

Manage Passwords	
User name:	admin
Admin password:	admin
New password:	engineer
Confirm new password:	operator

12.1.2

12.1.2 Date & time

The Timezone selection field allows you to select the time zone of the physical location.



Atlas only: When choosing automatic time, Osiris will try to connect to one of the given NTP servers which require internet connectivity. In case you have a local NTP server(s) then you can remove and replace these defaults servers.

In case you do not want to use automatic time, you can turn it off and manually set the time.

Note: Mercury and Osiris on laptop or PC will use the Windows time. Adjust the time in the Windows host to apply changes in Osiris too.

12.1.3 Updates

New firmware can be downloaded from the [PROCENEC](https://www.procentec.com) website and uploaded in the Updates menu item. More instructions about updating can be found in chapter 13.


12.1.4 About

The About menu item features the following:

- The current version
- Factory reset (see 14.3).
- Licenses: an overview of the current licenses for specific features. See 12.1.5 and 12.1.6.
- Third-party licenses: a list of third party open source licenses.

12.1.5 License Manager

Features of the Osiris are license based. There is a License Manager to see which features are enabled, or to upload a new license. The license manager can be reached via the 'Atlas/Mercury licenses' button within the About menu item on the Settings page. Another way of opening the License Manager is to double-click or drag down the dark blue bar on top (admin only). In the right upper corner there is an icon of a key which opens the License Manager.

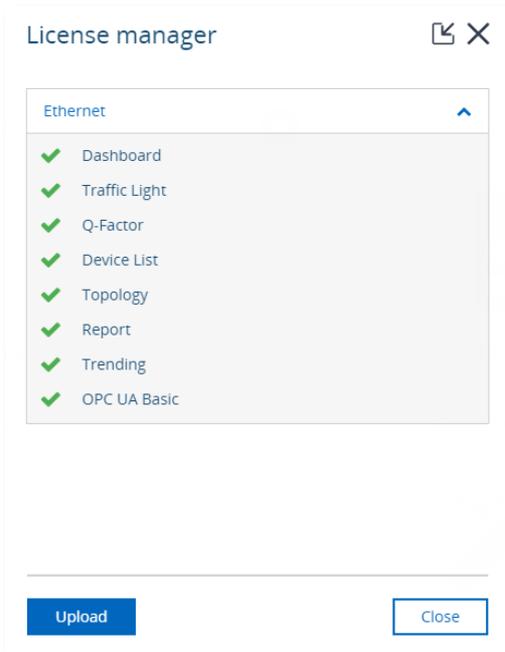


The upload license button will enable to select a new license file (see also 12.1.6). During the upload of a new license file, the file is checked. If the file is not valid the old license will be restored and an error will be shown.

12.1.6 How to upload a new license file


Before you can upload a new license, first make sure you obtain one. To do this, get in contact with your local distributor where you purchased the device, and keep your serial number ready. The serial number of the Atlas can be found at the side of the unit, or check the 'Device name' of the General tab of the settings.

The serial number of the Mercury and Osiris as a Software are based on two keys: the license serial number and the license ticket number (both can be found in the top of Osiris Control window). It can be downloaded automatically by Osiris if it has a working Internet connection. To do this, right-click the Osiris icon in the Windows system tray and choose 'License information'. It will pop up the window shown on the right. Click 'Check for license updates' and the new license will be installed automatically.

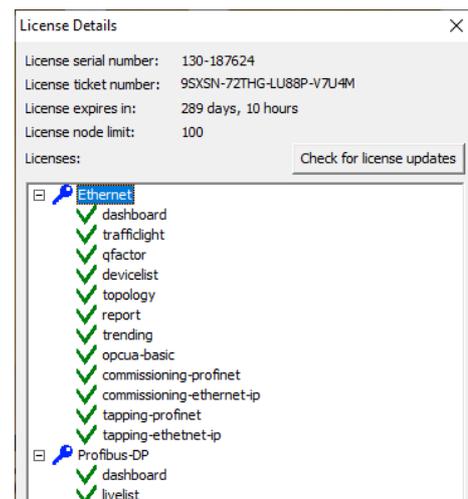



For Atlas, follow this procedure:

- Open the License manager, this can be done in two ways:
 - Double click or drag down the dark blue top bar containing the time. Click on the key icon located at the right side.
 - From within the Settings page go to the 'About' menu item. Click on the 'Osiris licenses' button.

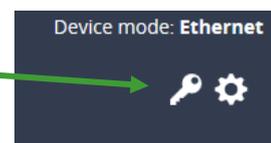

- Click the “Upload” button
- Click the folder icon
- Browse to and open your new license file
- Click the “Upload” button
- When you press the Upload button the system will check if your license is valid. If this check fails then please make sure you upload the license to the correct device (check the serial number). If this keeps failing, please contact PROCENTEC.
- When the correct license is uploaded you will be automatically logged out. After logging in again, your new license will take effect.

In the License manager you can now check which new features are enabled.

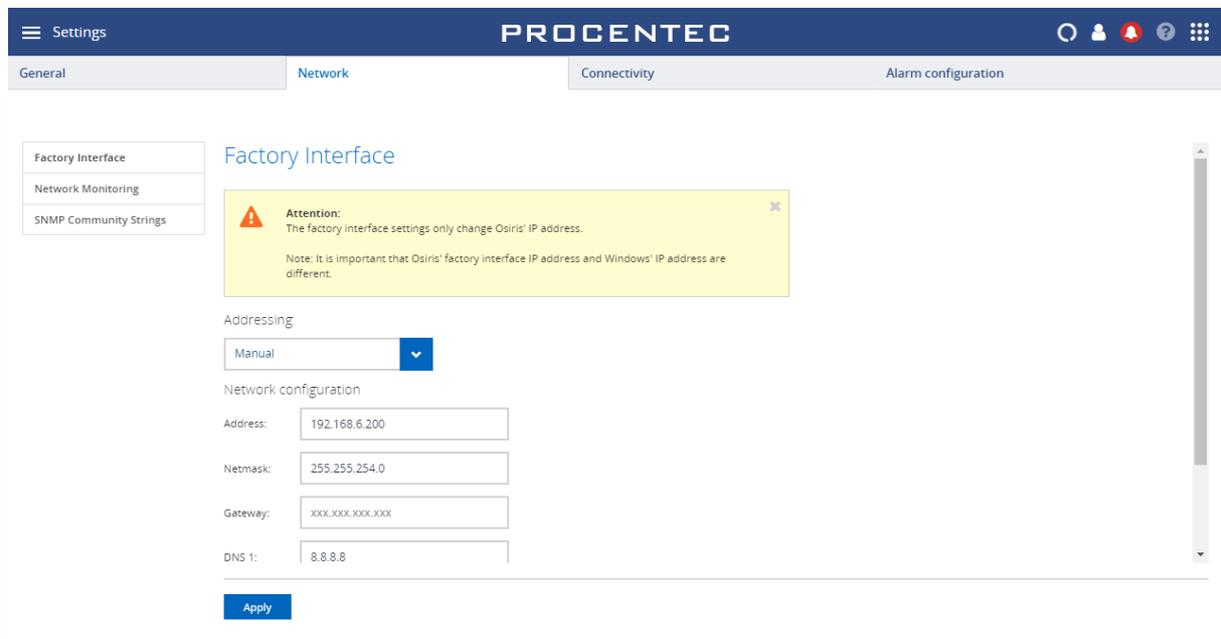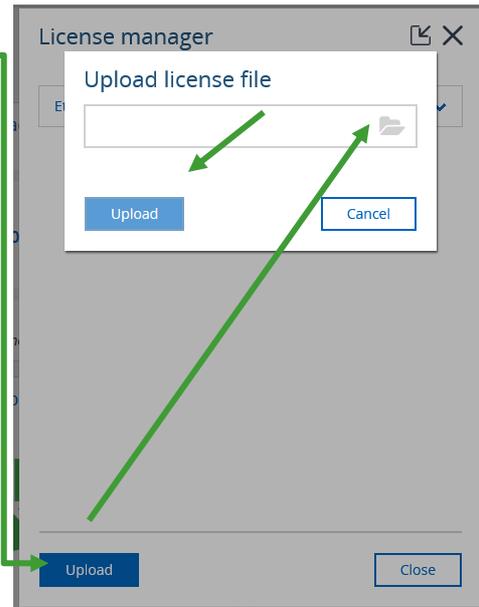

12.2 Network: Office (Atlas only) & Factory interface

The Factory and Office interface can be configured manually or automatically using DHCP.

In case you configure the interface manually and you would like to make use of automatic time (via the internet) you should enter the Gateway and DNS servers. Make sure to only enter one Gateway; do not use gateways in both interfaces.


Note: make sure that the Office and Factory interface are set to different IP ranges. Having both interfaces configured in the same IP range will cause Atlas to not work properly.

If you are using a Mercury or PC-license, the ‘Office’ interface is not available.

12.2.1 Network Monitoring

In this menu item you can specify up to ten IP address ranges of devices you would like to scan. Each scan range must be given a name. The order of scan ranges is irrelevant.

If there are large gaps between devices on your network, it is advised to separate a large scan range into multiple smaller ranges. This will speed up the scanning process.

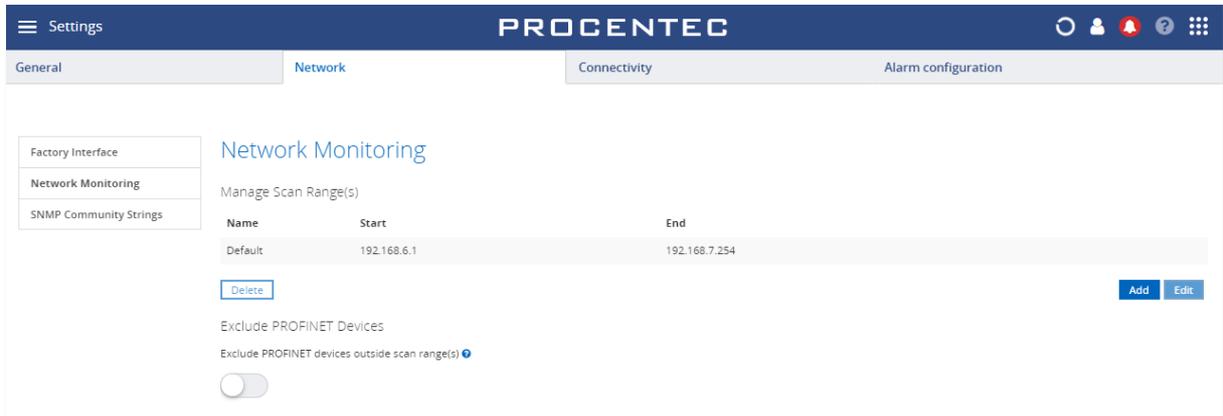

The network monitoring is performed on the Factory network interface, so it is important that the entire specified IP address ranges are reachable by Osiris through its Factory interface. To do this make sure your scan ranges falls within the subnet of the Factory interface.


If your IP/subnet configuration is not correct for the specified scan ranges, a notification pop-up will appear.

You can delete or edit a scan range by clicking it first and then click Delete or Edit respectively.

Devices which are not within the scan range can be excluded from appearing in the Device list, Topology, Commissioning Wizard and EtherTAP by enabling the 'Exclude PROFINET Devices' slider. These devices are typically PROFINET devices that respond to DCP broadcasts, even when they are outside the scan range.

12.2.2 SNMP Communities

The SNMP Community String is similar to a user ID or password that allows access to the statistics of a switch or device. If the correct community string is provided, the device responds with the requested information. If the community string is incorrect, the device will discard the request and does not respond. This results in missing information and a wrong Topology where devices are centered around a ? icon.

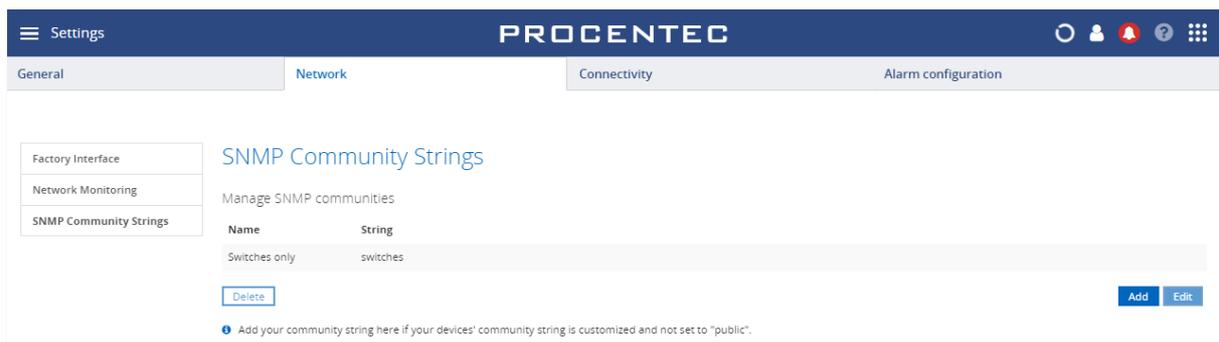


If the Community String in the switch(es) is not 'public', you can change it to another string here.

12.3 Other Connectivity

12.3.1 E-Mail

Osiris allows you to be alerted by e-mail about changes in the properties of your network and/or devices (this is configurable in the Alarm Configuration tab, see 12.4):

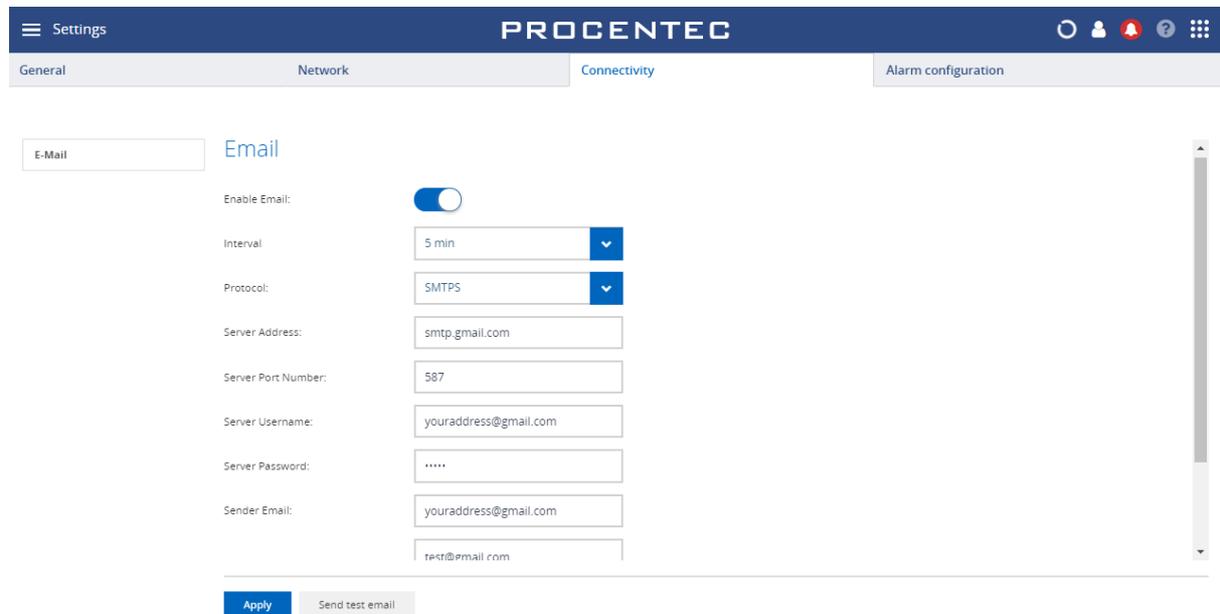


The screenshot shows the 'Email' configuration page in the Osiris web interface. The page is titled 'Email' and has a toggle for 'Enable Email' which is turned on. Below this are several input fields: 'Interval' (5 min), 'Protocol' (SMTPS), 'Server Address' (smtp.gmail.com), 'Server Port Number' (587), 'Server Username' (youraddress@gmail.com), 'Server Password' (masked with dots), and 'Sender Email' (youraddress@gmail.com). At the bottom, there are two buttons: 'Apply' and 'Send test email'.

The e-mail settings menu item allows you to specify an SMTPS (secure) or SMTP (not secure) server, login credentials and a list of recipients which will be used for the delivery of the alerts. The interval is the minimum number of minutes between two e-mail alerts.

Before you save your settings, you are advised to test them first by clicking the **Send test email** button. All the recipients will receive this test e-mail.

12.3.2 Google Gmail-account

Use the settings in the image above for Gmail accounts. Then go into your Google account to allow the Atlas to send emails (this is disabled in Gmail by default, and must explicitly be enabled). Search in your account for 'Less secure app access' and enable this feature.

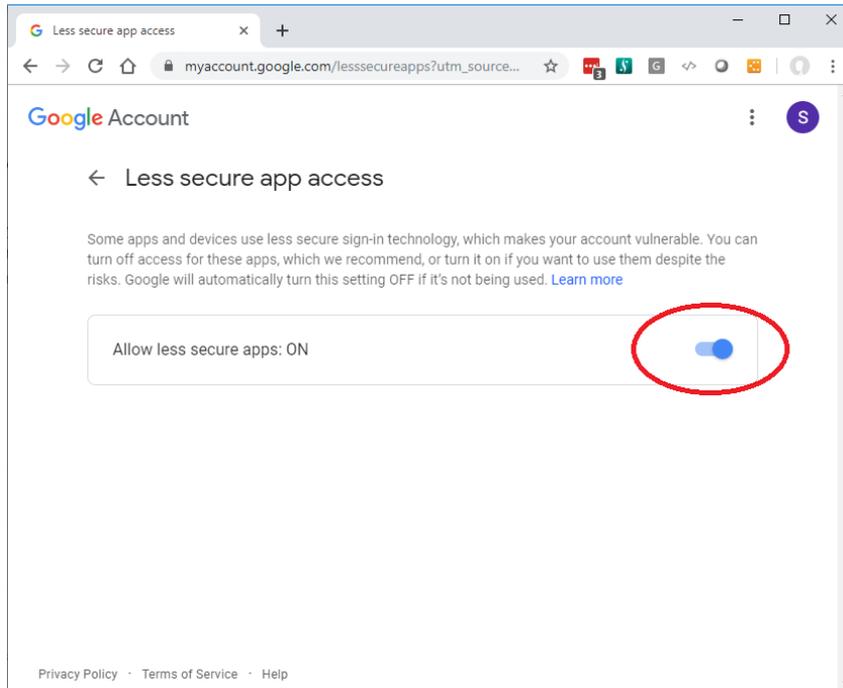


12.3.3 Relay (Atlas only)

A unique feature of the Atlas is the Alarm Relay (indicated as RL on the front of the housing). The behaviour can be adjusted in the Alarm Configuration tab of the Settings, see 12.4. The Relay switches from ON (it is a Normally Closed contact) to OFF after successful startup. It switches ON whenever one of the following events occurs:


- Ping packet response warning or error
- Ping packet loss detected
- Lost device detected
- In or out errors detected
- In or out discards detected
- Alarms or Dead Connections (PROFINET or Ethernet/IP)
- Max. Jitter reached (PROFINET and Ethernet/IP)
- Dropped packets detected (PROFINET and Ethernet/IP)

When the Relay has been triggered by an event, you can easily switch it off in the Measurement menu (round spinning icon in the Icon bar), there is a 'Reset relay' menu item.

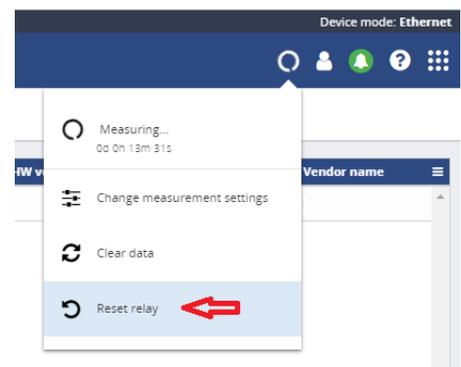

12.4 Alarm configuration


The Alarm configuration screen lets you configure warnings, errors, notifications, Traffic Light, emails, and the Relay (Atlas only) in a flexible way. All items can be enabled or disabled, and thresholds can be changed to suit your desired level of alarms.

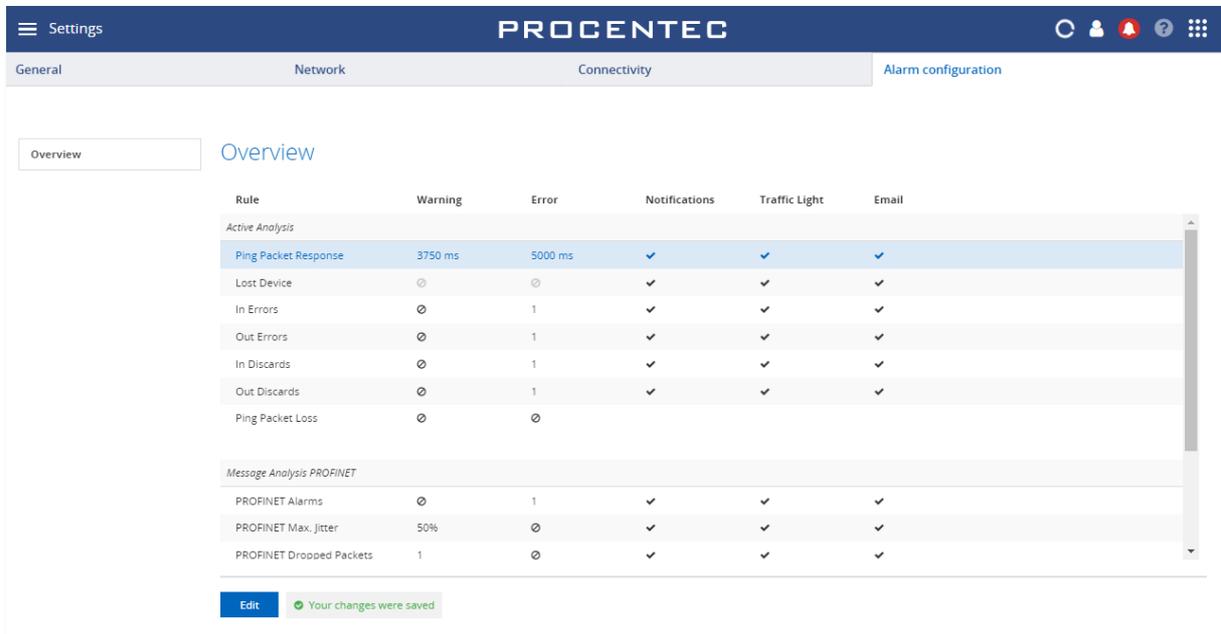

The screenshot shows the 'Alarm configuration' screen in the PROCENTEC settings. The interface includes a navigation bar with 'Settings', 'PROCENTEC', and user icons. Below the navigation bar are tabs for 'General', 'Network', 'Connectivity', and 'Alarm configuration'. The 'Alarm configuration' tab is active, showing an 'Overview' section with a table of rules. The table has columns for 'Rule', 'Warning', 'Error', 'Notifications', 'Traffic Light', and 'Email'. The rules are categorized into 'Active Analysis' and 'Message Analysis PROFINET'. A green notification at the bottom says 'Your changes were saved'.

Rule	Warning	Error	Notifications	Traffic Light	Email
Active Analysis					
Ping Packet Response	3750 ms	5000 ms	✓	✓	✓
Lost Device	⊘	⊘	✓	✓	✓
In Errors	⊘	1	✓	✓	✓
Out Errors	⊘	1	✓	✓	✓
In Discards	⊘	1	✓	✓	✓
Out Discards	⊘	1	✓	✓	✓
Ping Packet Loss	⊘	⊘			
Message Analysis PROFINET					
PROFINET Alarms	⊘	1	✓	✓	✓
PROFINET Max. Jitter	50%	⊘	✓	✓	✓
PROFINET Dropped Packets	1	⊘	✓	✓	✓

To change a line, select it and click the 'Edit' button in the bottom of the window. In the example below, the Ping Packet Loss alarms have all been disabled:

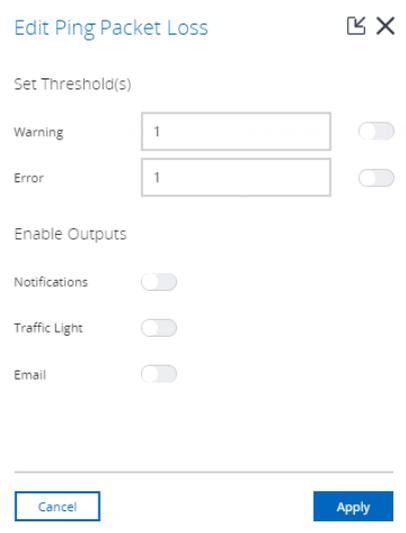


The screenshot shows the 'Edit Ping Packet Loss' dialog box. It has a title bar with a close button. The dialog is divided into sections: 'Set Threshold(s)' with input fields for 'Warning' (value 1) and 'Error' (value 1), each with a toggle switch; 'Enable Outputs' with toggle switches for 'Notifications', 'Traffic Light', and 'Email'. At the bottom are 'Cancel' and 'Apply' buttons.

Use the switch buttons to enable or disable the types of alarms.

The Atlas has an additional switch button for every event to disable the Relay alarm.

12.5 System (Atlas only)

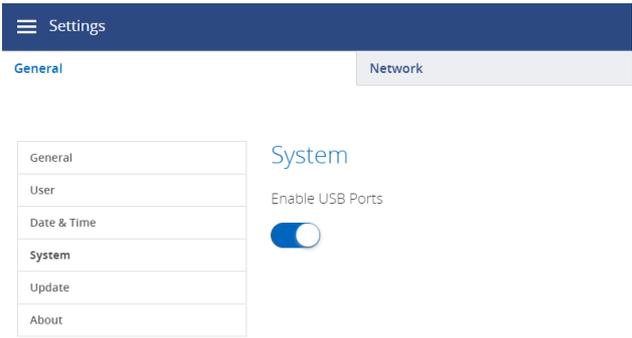

Note: This option is only available in Atlas.

The menu item 'System' under the General tab allows you to disable the USB ports for security reasons or company policy compliance.

13. Updating the firmware

Osiris, the application running on Atlas/Mercury will be regularly updated by PROCEN TEC. Such an update may include the addition of new valuable features for users, fixes for issues encountered in the field or updates to the underlying operating system.

Whenever an update becomes available it will be announced on the website of PROCEN TEC and by means of our newsletter. PROCEN TEC will provide details regarding the update and indicate whether or not the update is regarded as being a critical update.

Before reporting a bug, please update your Atlas/Mercury to the latest version and check if the problem is still happening.

To start with the update process its first important to see what the current version is and if it can be updated.


WARNING: IT IS IMPORTANT TO FOLLOW THE UPDATE PROCEDURE STEP BY STEP. A WRONG UPDATE PROCEDURE CAN LEAD TO A NON-FUNCTIONING DEVICE.

Administrators can update the firmware by uploading it using the 'Update' menu in the General Settings tab. The process of updating the firmware is detailed in the following steps.

13.1 How to find your current version

To find the current Osiris version, check the login screen:

On the bottom of the screen you should see the name PROCEN TEC. Underneath it you will find the current version number. You can ignore the fourth number.

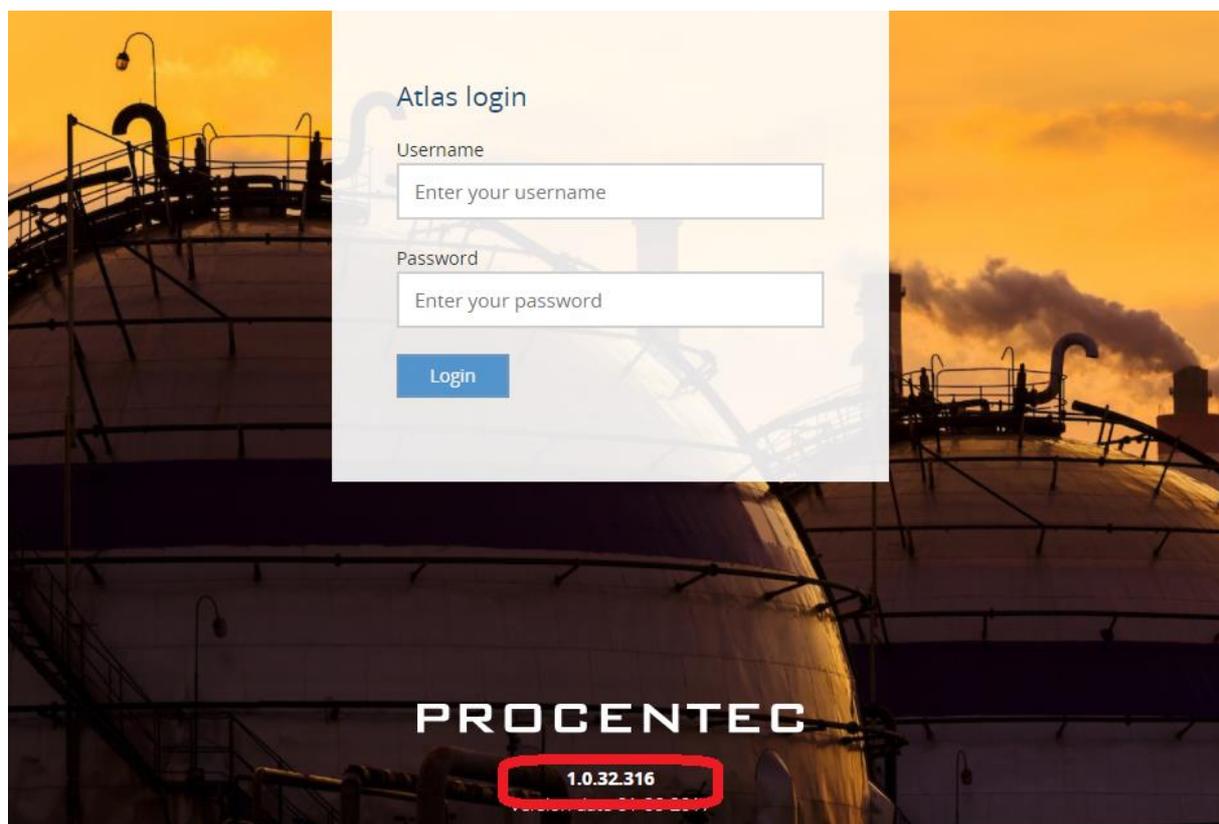

13.2 How to update

For Atlas version newer than 1.0.32, follow instructions at paragraph **Updating Atlas (> 1.0.32)**.


For Mercury, follow instructions at paragraph **Updating Mercury**.

For Atlas version 1.0.32: follow instructions at paragraph **Updating Atlas Version 1.0.32**.


13.3 Updating Atlas (> 1.0.32)

Update via web interface:


1. Log-in in Osiris with the Admin account (only admin can update the firmware).

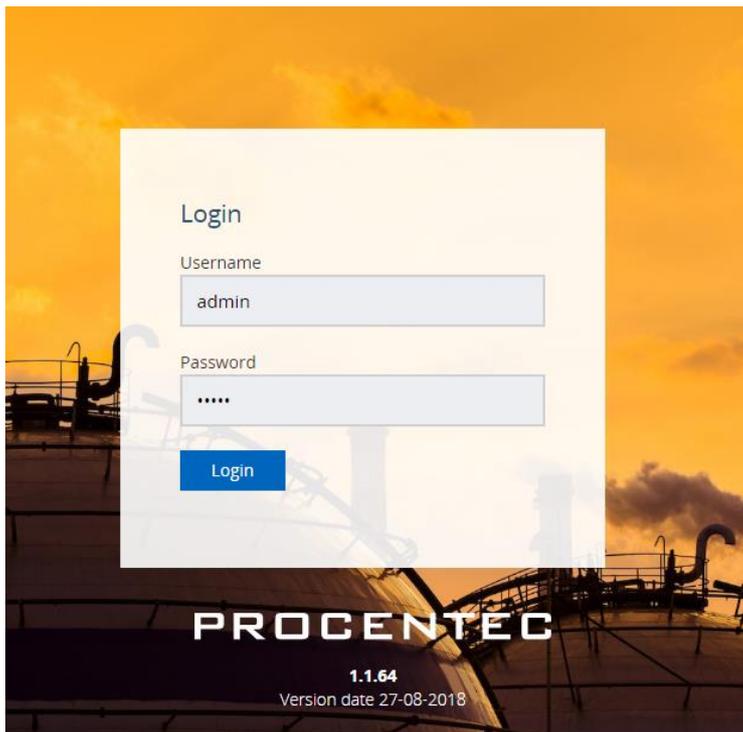



2. Go to Settings > Updates

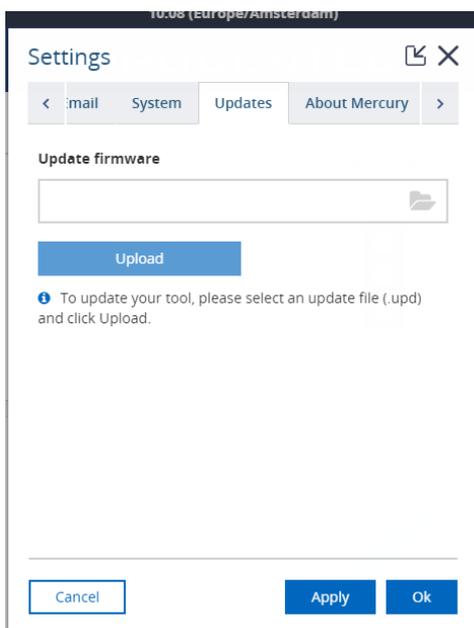



3. Select the update file .upd
Atlas and Mercury updates have different .upd files, use the specific Atlas update file!
4. Press upload
5. Wait until the file is uploaded – this usually takes about 10 minutes. If it is still loading after an hour please try again.
6. When the update is loaded, a green message will appear, press OK

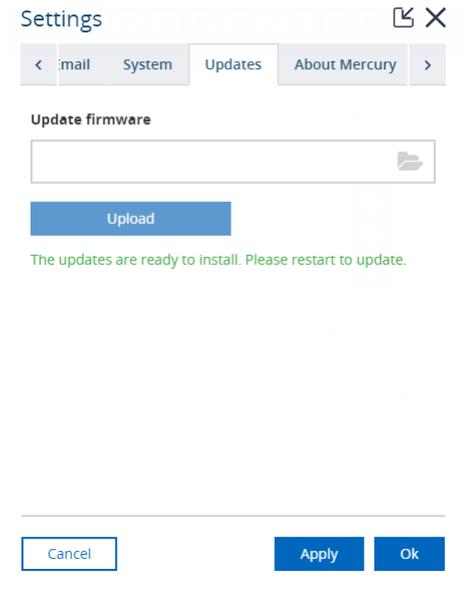

7. A reboot button on the system clock will appear. Click on **Restart to Update** and click on yes on the popup.

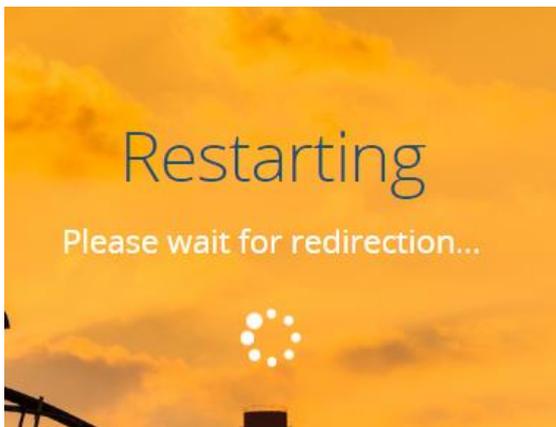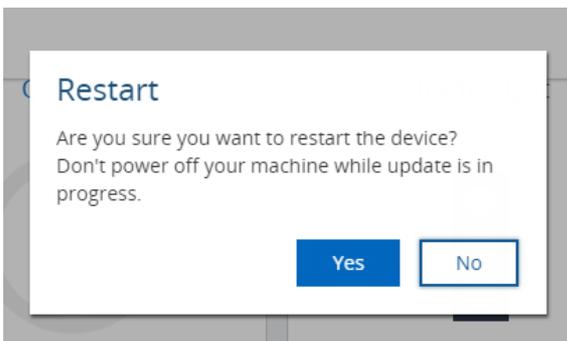

8. Wait until Osiris code is back online! This can take up to one hour, the entire OS and the software will be updated. **DO NOT POWER OFF THE ATLAS. POWERING OFF WILL DAMAGE THE UPDATE AND THE ATLAS.**
9. Once the update is done you will see the login page. Log in and go to settings, where you should see the newest version. If it still shows the previous version, try to refresh the page:

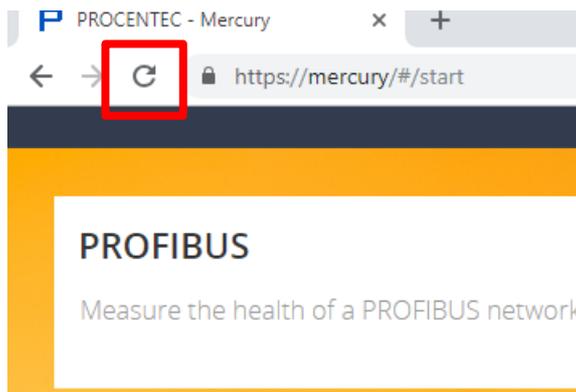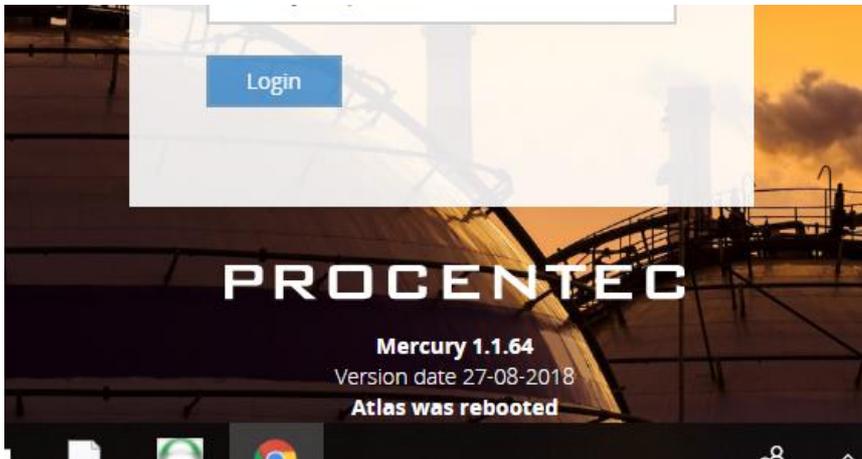



Your Atlas is now updated, enjoy the new functionalities!

13.4 Updating Mercury and Osiris as a Software on PC


For these versions of Mercury the update of the firmware is done via software.

Note: it is important to update the OsirisControl application before updating Osiris.

1. Download the latest firmware for Mercury from the PROCENTEC website.
support.procentec.com
Please note: the firmware update file for Mercury is a different file than for Atlas.
2. Connect Mercury to the power supply and turn it on
3. **Make sure that the battery is fully charged and the sleep mode of Windows is completely disabled. If Windows is switched off or goes in sleep mode during update the entire device can be compromised.**
4. Check that you don't have any pending Windows update. **Note: pending Windows updates can cause Osiris to not start.**
5. Launch the OsirisControl installer. A new version of OsirisControl will be installed on the Mercury.

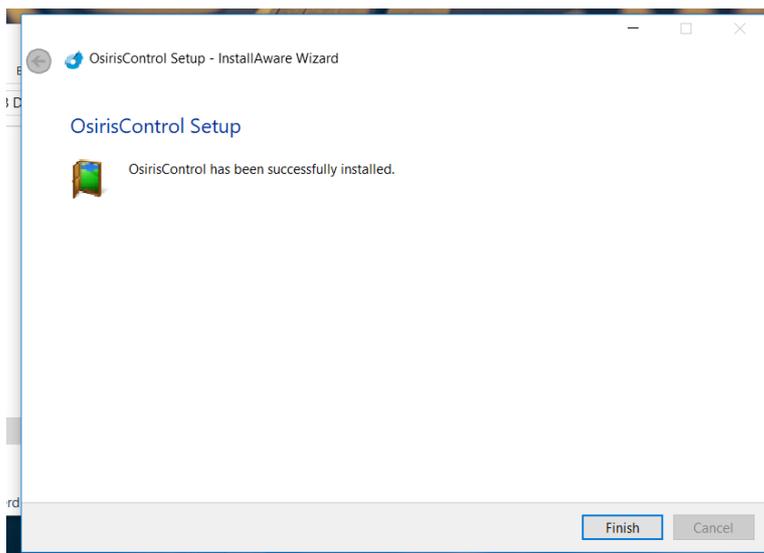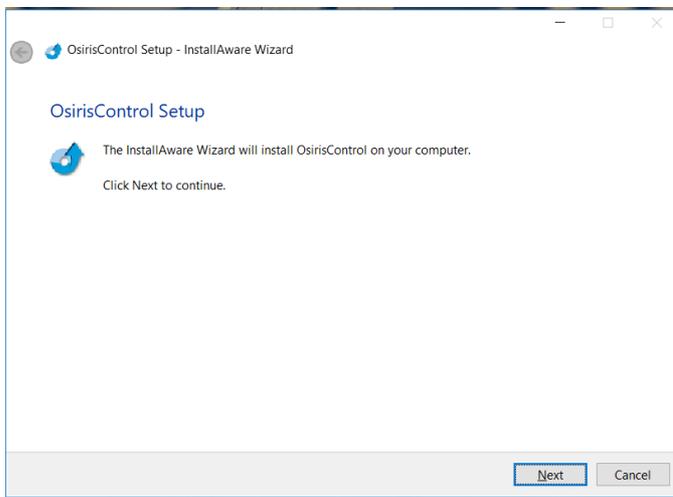


6. Launch OsirisControl, on the top left corner you should see V1.05 or higher.

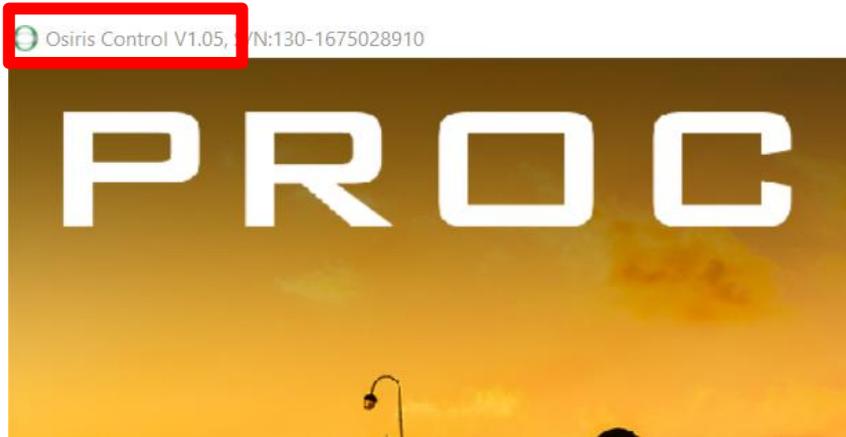

If you get a Timeout error then press retry and wait again.


7. Log in in Osiris with the Admin account (only the admin can update the firmware).

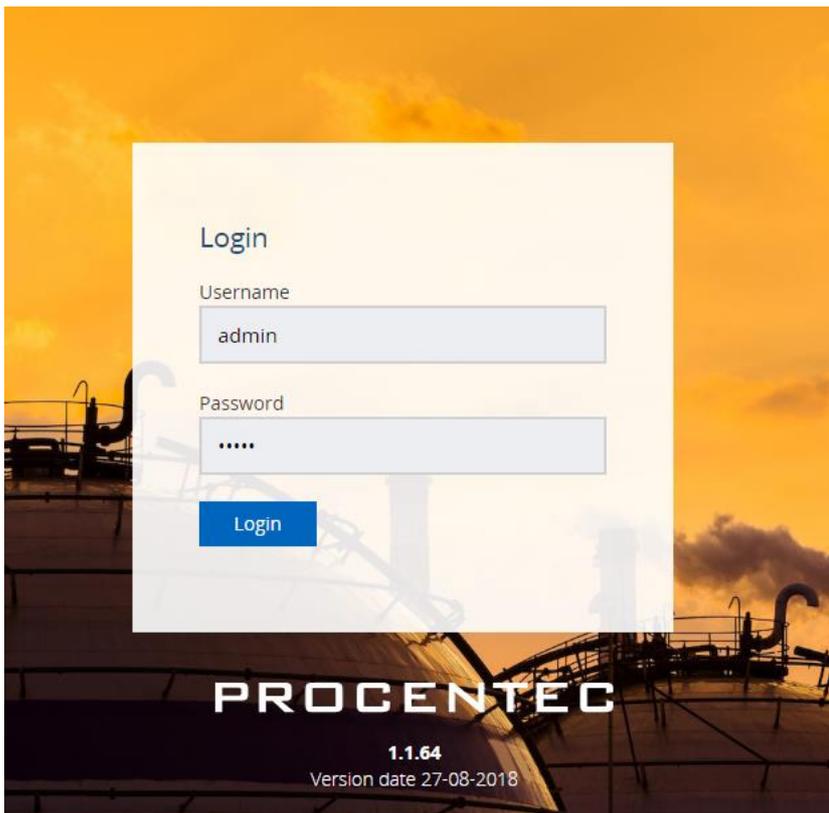

8. Go to Ethernet Measurement > Settings > Updates




9. Select the update file .upd

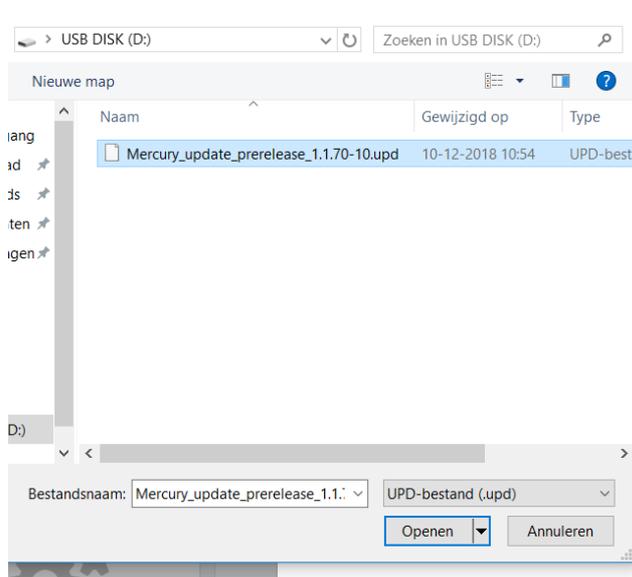


10. Press upload.

11. Wait until the file is uploaded – this usually takes about 10 minutes. If it is still loading after an hour please try again.

12. When the update is loaded, a green message will appear. Press OK.

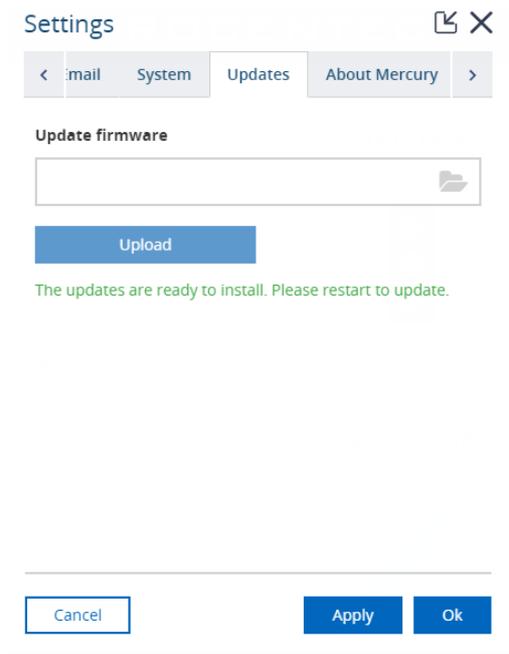



13. A reboot button on the system clock will appear. Click on **Restart to Update** and click on yes on the popup.

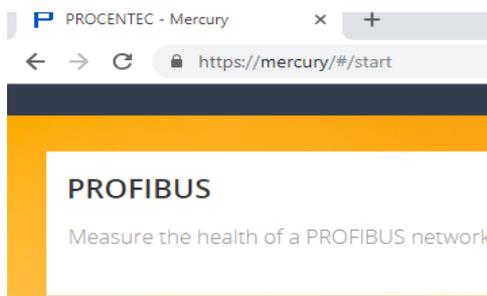

14. Wait until Osiris code is back online. This can take up to one hour, the entire OS and the software will be updated. **DO NOT STOP OSIRIS OR SHUT DOWN WINDOWS; this will damage the update.**



15. Once the update is done you will see the login page. Log in and go to settings, where you should see the newest version. If it still shows the previous version, try to refresh the page.

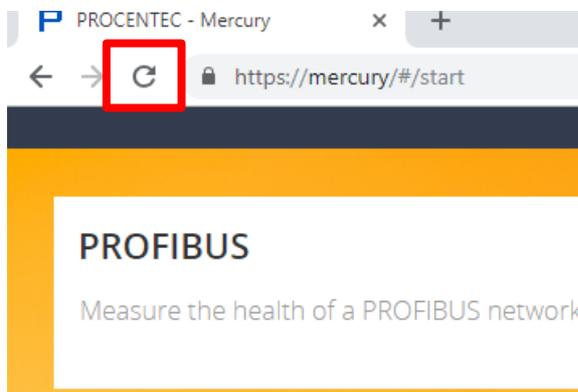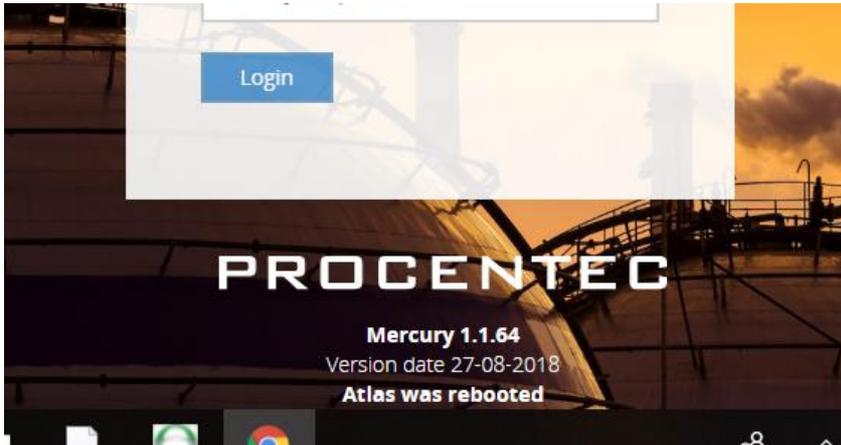

Your Mercury is now updated, enjoy the new functionalities!

13.5 Updating Atlas Version 1.0.32

For this version of Atlas the update of the firmware is only possible by means of a USB-stick. The process of updating the firmware is detailed in the following steps:



1. Download the latest firmware for Atlas from the PROCEN TEC website.
support.procentec.com
2. Copy the downloaded firmware package onto a USB-stick.
Note: make sure the USB-stick is formatted according to the FAT filesystem.
3. Insert the USB-stick into a USB port of Atlas.
4. Wait at least 20 seconds and then remove the USB-stick.
5. Wait 10 seconds and then insert the USB-stick again into the same USB port of Atlas as used at step 3.
6. Wait 3 minutes and then remove the USB-stick.
7. Log in as administrator, double click the top bar and then press the restart button.
8. Now wait until the RDY led turns on.
!!! IT WILL TAKE ±60 MINUTES TO COMPLETE THE UPDATE PROCESS. DO NOT UNPLUG THE POWER SUPPLY DURING THE UPDATE PROCESS !!!
9. Check the version number again.
Note: for version 1.0.35 it will show the number 1.0.34.417

14. Resetting Osiris to factory defaults

If Osiris becomes unreachable due to any reason, you can reset the device to factory settings.

Warning: this will reset all settings, clear all measurement data and will restore both the network interfaces to their initial IP address (Factory: 192.168.0.10; Office: 192.168.1.10)

14.1 On Atlas

The Atlas has a reset button at the front, as shown in Figure 30 . You can use a small object, such as an unfolded paperclip, to reach the button behind the small hole in the front. Press it for 10 seconds during operation and then release it. Do NOT press too hard; the button requires little pressure. After 10 seconds, the device will start a factory reset which will take approximately 2 minutes.

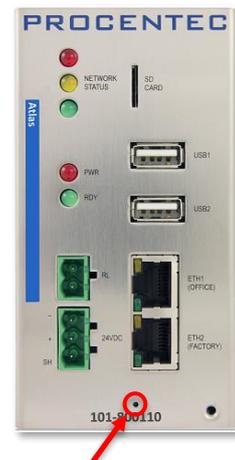



Figure 30 - Factory reset button

After the reset, it will reboot and be reachable on the default IP addresses again. You need to fill out the Setup Wizard before the Atlas can continue normal operation again. Until that time, the yellow traffic light and the green RDY LED will blink.

14.2 On Mercury or PC


Osiris on Mercury or PC can be reset to factory defaults. First, make sure the OsirisControl application is running. Then press the Windows logo button  below the screen. This will bring up the Windows taskbar and system tray.

Click the UP arrow in the system tray once, then press on the Osiris icon for about 1 second. A small menu appears, then click 'Factory Reset'.

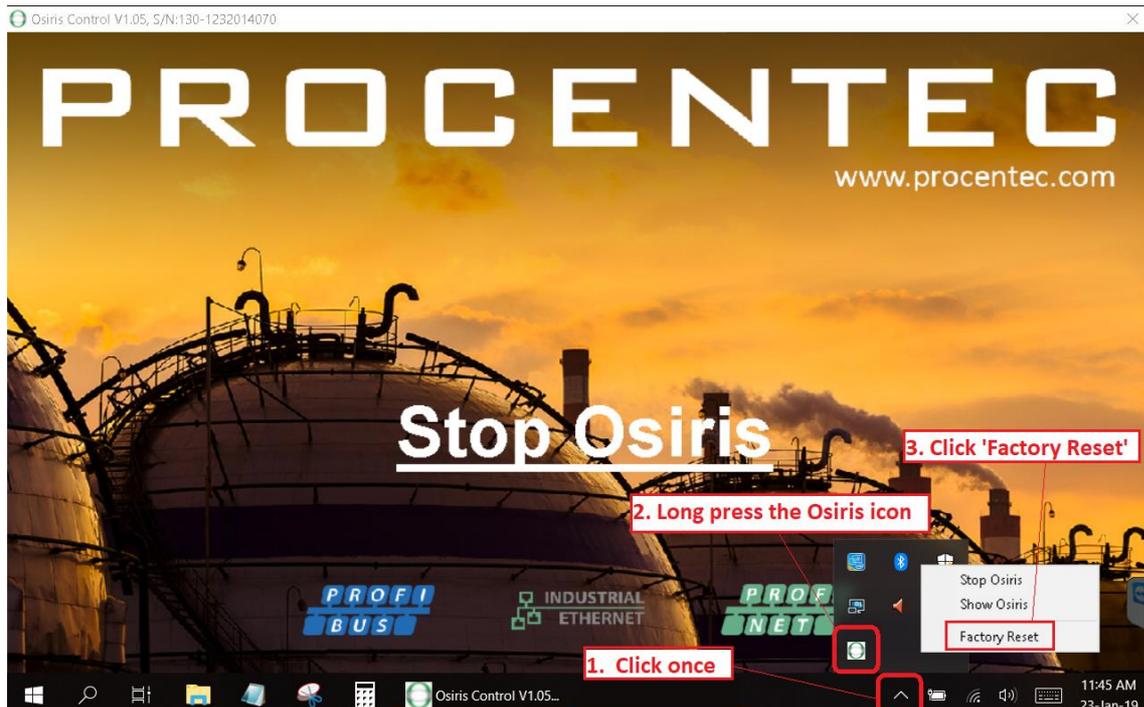

14.3 Using the Settings in the web interface

The other way to factory reset the device is through the web interface. In the 'Settings' page, go to the first tab 'General'. In this tab, click 'About' in the left menu. You can find a button 'Factory reset'. Clicking this button will bring up a confirmation window, where you can confirm the factory reset. The device will start a reload procedure that will take approximately 2 minutes.

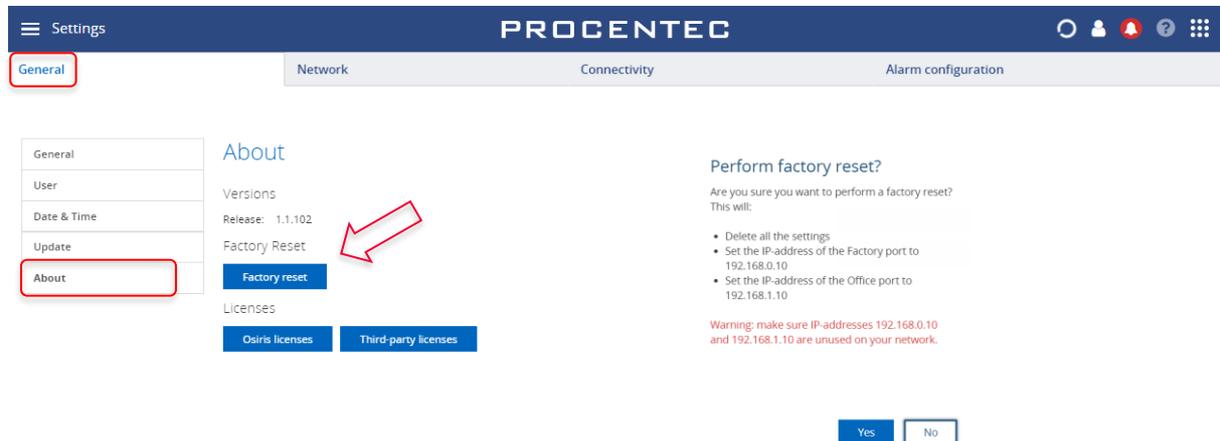

The screenshot shows the PROCENTEC web interface. The top navigation bar includes 'Settings', 'PROCENTEC', and user icons. Below the navigation bar, there are tabs for 'General', 'Network', 'Connectivity', and 'Alarm configuration'. The 'General' tab is selected. On the left, a sidebar menu lists 'General', 'User', 'Date & Time', 'Update', and 'About'. The 'About' menu item is highlighted with a red box. The main content area shows the 'About' page with a 'Factory Reset' button highlighted by a red arrow. A confirmation dialog titled 'Perform factory reset?' is displayed, asking 'Are you sure you want to perform a factory reset?' and listing the actions: 'Delete all the settings', 'Set the IP-address of the Factory port to 192.168.0.10', and 'Set the IP-address of the Office port to 192.168.1.10'. A warning message states: 'Warning: make sure IP-addresses 192.168.0.10 and 192.168.1.10 are unused on your network.' At the bottom of the dialog are 'Yes' and 'No' buttons.

After the reset, it will reboot and be reachable on the default IP addresses again. You need to fill out the Setup Wizard before Osiris can continue normal operation again. Until that time, the yellow traffic light and the green RDY LED will blink on Atlas.



Warning: Do not re-install Windows or format the tablet. This will cause Osiris not to start. If problems arise, first check our FAQs on the website.

15. Firewall settings

Osiris uses the following network ports.

Port number/protocol	Description	Office interface (Atlas only)	Factory interface
80/TCP	HTTP	Used to redirect to HTTPS.	
137/UDP	NetBIOS	To report the hostname to Windows machines.	
161/UDP	SNMP	To report status information to external devices.	To collect topology data from the devices on the factory network.
443/TCP	HTTPS	Used for the web interface.	
502/TCP (OUT)	ModBus/TCP	Closed	Used to find devices supporting Modbus/TCP.
4840/TCP	OPC UA	Only used when the OPC UA service is started.	
5353/UDP	MDNS/Avahi	To report the hostname to Apple machines.	
34964/UDP (OUT)	PROFINET-I&M/RPC	Closed	Used to collect PROFINET specific information.
44819/UDP (OUT)	EtherNet/IP	Closed	Used to find devices supporting EtherNet/IP.

16. Technical specifications Atlas

Technical Data - Atlas in general	
Dimensions, weight and mounting	
Dimensions D x W x H (mm)	120 x 65 x 120 (width without side cover: 58 mm)
Weight	680 grams
DIN-rail	35 mm (minimal 65 mm wide)
Ambient conditions	
Operating temperature	-20° .. +60° Celsius  “WARNING, HOT HOUSING. When in use at an ambient temperature higher than 55°C or 131°F, the housing of the Atlas will be hot. Do not touch the housing!”
Storage temperature	- 20° .. +85° Celsius
Relative air humidity	Maximum 98%
Ingress protection	IP 20 (DIN 40 050)
Power supply	
Pluggable power supply connector	Pin - : 0 V Pin + : +24 VDC Pin SH : Shield
Nominal power supply voltage	12 .. 24 VDC
Absolute maximum rated voltage	9 .. 32 VDC
Nominal power use	4.5 W
Maximum power use	20 W
Current consumption (12VDC)	Max. 1.4A
Reverse polarity protection	Yes
Redundant power supply	No
Wire diameter	<2.5 mm ²
	<u>Installation notes:</u> The device shall be powered with a correct power supply: <ul style="list-style-type: none"> • For North America the power supply shall be listed and meet the requirements for class 2 • For the rest of the world the power supply shall meet the requirements for limited power sources as defined in IEC/EN 60950-1 cl. 2.5 Possible power supplies: Phoenix STEP-PS series Traco power TCL series XP-power DNR120-480 series
Ethernet	
Connector (Factory and Office)	RJ-45
Maximum cable length	100 m
Link speed	10/100/1000 Mbps
MAC address	Range: 9C:B2:06:2B:40:00 - 9C:B2:06:2D:3F:FF
Supported protocols	OPC UA, PROFINET (detect only), PROFINET I&M0, Modbus TCP (detect only), Ethernet/IP (detect only)
Protocols used	ARP, ICMP, DCP, SNMP, PROFINET I&M0

Default IP address after reset/purchase	Factory: 192.168.0.10
Default login / password	Office: 192.168.1.10 admin / admin
Connections	Up to 20 concurrent web clients
Relay contact	
Resistance	100 .. 150 mΩ (including plug)
UL maximum contact rating	max. 10W 24VDC, 400mA
SD card	
Supported types	SD and SDHC
Size	Maximum 32 GB
USB ports	
Type	USB 2.0
Maximum output power	500 mA per port
Others	
MTBF	To be defined

17. Technical specifications Mercury

Technical Data - Mercury in general	
Mobile Computing Platform	
Manufacturer, type	Panasonic FZ-M1
Processor	Intel® Core™ i5-7Y57 vPro™ processor
Operating System	Windows 10 Pro
RAM	4 GB (Max. 8 GB)
Graphic Chip	Intel® HD Graphics 615
Camera	Front: 2 MPixel Rear: 8 Mpixel with autofocus and LED flash
Storage	128 GB Solid State Drive (Serial ATA)
LCD	7" sunlight-viewable WXGA Active Matrix (TFT) IPS LCD
Touchscreen	10 finger capacitive multi-touchscreen
Bluetooth	Version 4.1 + EDR Class 1
WLAN	Intel® Dual Band Wireless-AC 8265
USB ports	USB 3.0 (1x) USB 2.0 (1x)
Expansion slot	Micro SD/SDXC Memory Card
Dimensions, weight and mounting	
Dimensions D x W x H (mm)	203 x 18 x 132 mm
Weight	540 grams
DIN-rail	No, handheld (handstrap and stylus supplied)
Ambient conditions	
Operating temperature	-29° .. +60° Celsius
Storage temperature	- 51° .. +71° Celsius
Relative air humidity	Maximum 98%
Ingress protection	IP 65 (MIL STD 810G and IEC 60529)
Gravity drop resistance test	180 cm
Power supply	
Power supply	Supplied in box. Rated IP 20
Input	100 – 240 VAC 1.5 A – 0.8 A
Output	16 VDC 3.75 A 3.76
Plug	Middle = + Outer ring = -
Battery	Lithium-Ion (7.2 V, 3220 mAh)
Ethernet	
Connector	RJ-45
Maximum cable length	100 m
Link speed	10/100/1000 Mbps

Supported protocols	OPC UA, PROFINET (detect only), PROFINET I&M0, Modbus TCP (detect only), Ethernet/IP (detect only)
Protocols used	ARP, ICMP, DCP, SNMP, PROFINET I&M0
Default IP address after reset/purchase	Factory: 192.168.0.10
Default login / password	admin / admin

18. Order codes

Component	Order code	Remarks
Atlas	101-800110	Atlas main unit including mounting materials
ATLAS: PROFINET Permanent Monitoring Kit 100	101-800210	1 x Atlas (101-800110), 1 x EtherTAP: PROFINET Analysis License, (101-700204) , 1 x EtherTAP 10/100 (513-00011A), 1 x TAP Din Rail Mount (UTA 107)
Mercury IE Reliability Solution FZ-M1	101-820220	Panasonic ToughPAD FZ-M1 with Intel Core 5 Processor 4GB of RAM - 128GB SSD, Wifi ONLY, Bluetooth, 1x USB 3.0, 1 X USB 2.0, 1 X RJ45 LAN Port, 1 X SD Card, Front & Rear Camera with stylus pen & standard. Windows 10. Handstrap- 3 year warranty including 5 day pick up and return repair service. WITH OSIRIS STANDARD LICENSE (101-700100)
Mercury IE Reliability Solution FZ-M1	101-821220	PROCENTEC Mercury Standard Kit Includes 1 x Mercury Rugged Tablet (101-820220) , 1 x 360 degree strap (101-820221) , 1 x Carrying Case (101-820222) , 1 x RJ45 to RJ45 3 Meter Cable (123-637GRR3) , 1 x RJ45 to M12 3 Meter Cable (123-642EMR3) , 1 x PROFICORE USB Cable (60010003) OSIRIS Software Standard Package (101-700100) pre-installed and tested.
Mercury IE Reliability Solution FZ-M1	101-822220	PROCENTEC Mercury Plus Kit Includes 1 x Mercury Rugged Tablet (101-820220) , 1 x 360 degree strap (101-820221) , 1 x Carrying Case (101-820222) , 1 x RJ45 to RJ45 3 Meter Cable (123-637GRR3) , 1 x RJ45 to M12 3 Meter Cable (123-642EMR3) , 1 x PROFICORE USB Cable (60010003), 1 X ProfiCore Ultra 2 (10020), 1 X ProfiCore TAP Connectors (13020)

		OSIRIS Software Standard Package (101-700100) pre-installed and tested.
Mercury IE Reliability Solution FZ-M1	101-823220	<p>PROCENTEC Mercury PRO Kit Includes</p> <p>1 x Mercury Rugged Tablet (101-820220) , 1 x 360 degree strap (101-820221) , 1 x Carrying Case (101-820222) , 1 x RJ45 to RJ45 3 Meter Cable (123-637GRR3) , 1 x RJ45 to M12 3 Meter Cable (123-642EMR3) , 1 x PROFICORE USB Cable (60010003), 1 X ProfiCore Ultra 2 (10020), 1 X ProfiCore TAP Connectors (13020), 1 X ProfiTrace 2 Software (22020), 1 x ProfiTrace SCOPE ware (23010), 1 X ProfiCaptain (22020), 1 x Netilities (39020)</p> <p>OSIRIS Software Standard Package (101-700100) pre-installed and tested.</p>
Mercury: PROFINET Troubleshooting Kit 100	101-824220	<p>1 x Mercury (101-800110), 1 x PN Commissioning Wizard (101-700201), 1 x EtherTAP: PROFINET Analysis License (101-700204) , 1 x EtherTAP 10/100 (513-00011A), 1 x Netilities (39020), 1 x TAP Din Rail Mount (uta 107), 1 x RJ45 to RJ45 3 meter Cable (123-637GRR3), 1 x RJ45 to M12 3 meter Cable (123-642EMR3), 1 x 360 degree hand strap (101-820221), 1 x Carrying Case (101- 820222), 1 x Osiris Software (101-700100)</p> <p>OSIRIS Software Standard Package (101-700100) pre-installed and tested.</p>
Accessories	Order code	Remarks
Mercury: Optional Panasonic DC Car Charger 12V-32V / 80W	101-820321	Mercury Optional DC powered Car Charing unit for Panasonic Tough PAD 12V-32V/80W
Mercury: Optional Desktop Cradle: Full Version	101-820322	Mercury Optional Desktop Cradle Full Version with: 2 x USB 2.0, 1 x VGA, 1 x HDMI, 1 x LAN RJ45, 1 x Serial

Mercury: Optional Desktop Cradle: Lite Version	101-820323	Mercury Optional Desktop Cradle Lite Version with: 2 x USB 2.0 & 1 x LAN RJ45
Mercury: Optional 4 Bay Battery Charger	101-820324	Mercury Optional 4-Bay Battery Charger (ac adapter is not included. CF-AA5713AG or CF-AA6502A2 is required)
Mercury: Optional EU Plug: AC Charger 220V	101-820325	Mercury Optional Cable for AC Charger that has 220V EU Plug
Mercury: Optional 2-Cell Li-ION Battery	101-820326	Mercury Optional Cell Li-ION Battery for FZ-M1
Mercury: Optional Capacitive Stylus PEN FZ-M1	101-820327	Mercury Optional Capacitive stylus pen for FZ-M1
Mercury: Optional Cleaning Cloths	101-820328	Mercury Optional Cloths (tissue) to clean Touchscreen MOQ
Mercury: Optional Protective Screen Films	101-820329	Mercury Optional Protective Film for FZ-M1
Mercury: Power Plug: Australian	101-820330	Mercury Optional replacement power plug: Australian
Mercury: Power Plug: China	101-820331	Mercury Optional replacement power plug: China
Mercury: Power Plug: India/South Africa	101-820332	Mercury Optional replacement power plug: India/South Africa
Mercury: Power Plug: Brazil	101-820333	Mercury Optional replacement power plug: Brazil
Mercury: Power Plug: Italian	101-820334	Mercury Optional replacement power plug: Italian
Mercury: Power Plug: U.K.	101-820335	Mercury Optional replacement power plug: U.K

Mercury: Power Plug: US	101-820336	Mercury Optional replacement power plug: US
Osiris as a Software (on Windows 10)	101-710100	Osiris PC/Laptop

certificatie

QualityMasters hereby declares that

Procentec B.V.
Wateringen

has a management system that meets the requirements of the standard

NEN-EN-ISO 9001:2015

for the scope

Providing training courses, technical support, product development, product sales and the exploitation of the test laboratory.

Date of original approval	10-02-2003
Date of issue	14-12-2018
Valid until	10-02-2022
Certificate number	NL 6957-uk

On behalf of QualityMasters,



N.B. The failure to meet the conditions as set forth in the certification agreement, or non-compliance with the given standard and/or guidelines, may lead to the suspension or cancellation of the certificate.
This certificate remains the property of QualityMasters Certificering B.V., Nieuwland Parc 157, 3351 LJ Papendrecht.



Iso9001 certificate

20. Sales offices and distributors

HEADQUARTERS

PROCENTEC
Vlasmarkt 1
3011 PW, Rotterdam
Netherlands

T: +31-(0)174-671800
F: +31-(0)174-671801
E: info@procentec.com
I: www.procentec.com

ARGENTINA

eFALCOM
Alcorta 2411
B1744 - Moreno
Buenos Aires
Argentina

T: +54 237 46 31 151
F: +54 237 46 31 150
E: santiago.falcomer@efalcom.com
I: www.efalcom.com.ar

AUSTRALIA

IS Systems Pty Limited
14 Laverick Ave.,
Tomago
NSW, Australia, 2322

T: +61 2 4964 8548
F: +61 2 4964 8877
E: fritz.woller@issystems.com.au
I: www.issystems.com.au

Emerson Automation Solutions
356 Chisholm Rd.
Auburn
NSW, Australia, 2144

T: +61 2 97952845
F: +61 2 4423 3232
E: dilraj.singh@emerson.com
I: www.emerson.com

BELGIUM and LUXEMBOURG

Bintz Technics N.V.
Brixtonlaan 23
B-1930 Zaventem
Belgium

T: +32 2 720 49 16
F: +32 2 720 37 50
E: bloemen@bintz.be
I: www.bintz.be

BRAZIL

Westcon Instrument. Indl Ltda
Rual Alvaro Rodrigues, 257
São Paulo - SP
Brazil - CEP 04582-000

T: +55 11 5561-7488
F: +55 11 5093-2592
E: paolo@wii.com.br
I: www.wii.com.br

CANADA

Streamline Process Management Inc.
#3, 4351 - 104 Ave SE
Calgary, Alberta T2C 5C6
Canada

T: +1 403 225 1986
F: +1 587 585 2828
E: admin@streamlinepm.com
I: www.streamlinepm.com

JCom Automation
1115 Whitefield Dr.
K9J 7P4, Ontario
Canada

T: 1 705 868 8745
i: www.jcomautomation.ca

CHILE

RP Ingenieria Limitada
Tucapel 92 oficina 52
Concepción
Chile

T: +56-(0)41-2469350
F: +56-(0)41-2522592
E: rodrigopinto@rpingeneria.cl
I: www.rpingeneria.cl

CHINA

PROCENTEC Beijing
Room E-1115 WangJingYuan YouLeHui
ChaoYang
Beijing
China

T: +86(10)84766911 or 84787311
F: +86(10)84766722
E: info@procentec.net
I: www.procentec.net

CZECH REPUBLIC

FOXON s.r.o.
Polní 367
460 01 Liberec 12
Czech Republic

T: +420 484 845 555
F: +420 484 845 556
E: foxon@foxon.cz
I: www.foxon.cz

DENMARK

ProSaiCon
T: +45 70 20 52 01

Jernbanegade 23B
DK 4000 Roskilde
Denmark

F: +45 70 20 52 02
E: hfj@prosaicon.dk
I: www.prosaicon.dk

EGYPT

MTSE
7, Amin Annis St., 4th Sec.
11341 Cairo
Egypt

T: +20 2 241 475 07
F: +20 2 229 031 60
E: hassan.mahdy@mtse.com.eg
I: www.mtse.com.eg

ESTONIA

Saksa Automaatika OU
Peterburi Tee 49
Tallinn
EE-11415 Estonia

T: +372 605 2526
F: +372 605 2524
E: info@saksa-automaatika.ee
I: www.saksa-automaatika.ee

FINLAND

Hantekno Oy
Kalliotie 2
04360 Tuusula
Finland

T: +358 40 8222 014
E: info@hantekno.com
I: www.hantekno.fi

FRANCE

AGILiCOM
Bâtiment B
1, rue de la Briaudière
Z.A. La Châtaigneraie
37510 BALLAN-MIRE
France

T: +33 247 76 10 20
F: +33 247 37 95 54
E: [jy.bois@agilicom.fr](mailto: jy.bois@agilicom.fr)
I: www.agilicom.fr

GERMANY

PROCENTEC GmbH
Benzstrasse 15
D-76185 Karlsruhe
Germany

T: +49-(0)721 831 663-0
F: +49-(0)721 831 663-29
E: info@procentec.de
I: www.procentec.de

GREECE

ETA ENERGEIA Ltd
165 Philadelphias str.
Acharnai ,Athens
Greece

T: +30 6945670846
F: +30 2310517103
E: info@eta.gr
I: www.eta.gr/en

INDIA

UL Engineering Services & Software Pvt Ltd
Nirman Classic,
Katraj-Kondhwa Road,
Katraj, Pune-411046
India

T: +91-202 696 0050
F: +91-202 696 2079
E: dileep.miskin@ulepl.com
I: www.ulepl.com

Automation Combine
B.R House, 4th Floor
Hennur Main Road
Bangalore 560043, India

T: +98 452 84550
F: +93 421 37534
W: www.automationcombine.in

IRELAND

PROFIBUS Ireland
Automation Research Centre
University of Limerick
National Technology Park, Plassey
Limerick
Ireland

T: +353-61-202107 or +35361240240
F: +353-61-202582
E: info@profibus.ie
I: www.profibus.ie

ISRAEL

Instrumentics Industrial Control
8 Hamlacha St.
New Industrial Zone
Netanya, 42170
Israel

T: +972-9-8357090
F: +972-9-8350619
E: info@instrumentics-ic.co.il
I: www.inst-ic.co.il

ITALY

PROCENTEC Italy
Via Branze n. 43/45
25123 Brescia
Italy

T: +39 030 200 8610
F: +39 030 238 0059
E: www.procentec.it
W: www.procentec.it

JAPAN

TJ Group
C/O Japanese PROFIBUS Organisation
West World Building 4F
3-1-6 Higashi-Gotanda,
Shinagawa-ku,
Tokyo, 141-0022
Japan

T: +81-3-6450-3739
F: +81-3-6450-3739
E: info@profibus.jp

KOREA

Hi-PRO Tech. Co., Ltd.
#2802, U-Tower, 1029
Youngduk-dong, Giheung-gu
Yongin-Si, Kyunggi-do,
446-908 Korea

T: +82 82-31-216-2640
F: +82 82-31-216-2644
E: chays@hiprotech.co.kr
I: www.profibus.co.kr

LEBANON

Industrial Technologies S.A.L. (ITEC)
Point Center, Boulevard Fouad Chehab
Sin El Fil
Beirut
Lebanon

T: +961 1 491161
F: +961 1 491162
E: sales@iteclb.com
I: www.iteclb.com

MEXICO

F&G GLOBAL Equipment
Rómulo Garza 205
Col. Industrias del Vidrio
San Nicolas de los Garza, NL

T: +81 1933 7754
E: ventas@FGequipment.com
W: www.fgequipment.com

NETHERLANDS

PROCENTEC B.V.
Vlasmarkt 1
3011 PW, Rotterdam
Netherlands

T: +31 (0)174 671800
F: +31 (0)174 671 801
E: info@procentec.com
I: www.procentec.com

NEW ZEALAND

Mantis Systems
34 Glasgow St.
Dunedin
New Zealand

T: +643 455 6072
F: +31 (0)174 671 801
E: tbaldock@mantis-sys.co.nz
I: www.mantis-sys.co.nz

NORWAY

Nortelco Automation AS
Johan Scharffenbergs vei 95
N-0694 Oslo
Norway

T: +47 22 57 61 00
E: post@nortelcoautomation.no
I: www.nortelcoautomation.no

PAKISTAN

OTC
Suite No. 4, 1st Floor Liberty Heights
Main Boulevard Gulberg
Lahore - 54660
Pakistan

T: +92 42 3587 2667-9 Ext. 117
F: +92 42 3587 2670
E: nsm@otc.com.pk
I: www.otc.com.pk

PERU

ControlWare
Jr. Los Silicios 5409
Los Olivos - L39
Peru

T: +51 1637 3735
F: +51 1528 0454
E: info@controlware.com.pe
I: www.controlware.com.pe

POLAND

INTEX Sp. z o.o.
ul. Portowa 4
44-102 Gliwice
Poland

T: +48 32 230 75 16
F: +48 32 230 75 17
E: intex@intex.com.pl
I: www.intex.com.pl

PORTUGAL

IndustrialSys
Rua Alexandre Herculano
Nº25,3530-144 Mangualde
Portugal

T: +351 96 716 1605
I: www.iindustrialsys.pt
E: joao.costa@industrialsys.pt

ROMANIA

S.C. SVT Electronics S.R.L.
Brăila 7
540331 Tg-Mure
Romania
T: +40 365 809 305
F: +40 365 809 305
E: sajgo.tibor@svt.ro
I: www.svt.ro

RUSSIA

Diagnostics and Monitoring
St. Lutova 4 – 60
398036, Lipetsk
Russia
T: +7 910 251 66 74
E: rubanova.oi@gmail.com

SAUDI ARABIA

ASM Process Automation
Al-Zahra Dist. – Attas st.
cross section with helmy Kutby St.
Villa no.25
Jeddah-21553
Saudi Arabia
T: +966 2 691 2741
F: +966 2 682 8943
E: info@asmestablishment.com
I: www.asmestablishment.com

SERBIA

MR Process Equipment
Tribalska 15
11050 Zvezdara
Serbia
T: +381 60 5140 513
E: mr@mrprocessequipment.com
I: www.mrprocessequipment.com

SINGAPORE / SOUTH EAST ASIA

Allegro Electronics
236 Serangoon Avenue 3 07-98
Singapore 550236
T: +65 628 780 63
E: sales@allegro.com.sg
I: www.allegro.com.sg

Gissmatic Automatisierung Pte Ltd (Malaysia)
318 Tanglin Road 01-34
Singapore 247979
T: +65 900 912 76
E: sales@gissmatic.com
I: www.gissmatic.com

SLOVAKIA

FOXON s.r.o.
Polná 367
460 01 Liberec 12
Czech Republic
T: +420 484 845 555
F: +420 484 845 556
E: foxon@foxon.cz
I: www.foxon.cz

SOUTH AFRICA

IDX
1 Weaver Street
Fourways
Johannesburg
South Africa - 2191
T: +27(11) 548 9960
F: +27(11) 465-8890
E: sales@idxonline.com
I: www.idxonline.com

SPAIN

LOGITEK, S.A
Ctra. de Sant Cugat, 63 Esc. B Planta 1ª
Rubí (BARCELONA), 08191
Spain
T: +34 93 588 6767
E: xavier.cardena@logitek.es
I: www.logitek.es

SWEDEN

Nortelco Automation AS
Johan Scharffenbergs vei 95
N-0694 Oslo
Norway
T: +47 22 57 61 00
E: post@nortelcoautomation.no
I: www.nortelcoautomation.no

SWITZERLAND

EME AG
Lohwisstrasse 50
CH-8123 Ebmatingen
Switzerland
T: +41 44 982 11 11
E: mhauri@eme.ch
I: www.eme.ch

TAIWAN

Orion Energy Technology
3F, No. 2, Aly. 6, Ln. 109, Sec. 2, Huanshan Rd.
Neihu District, Tapei City
114, Taiwan
T: +886 9 370 270 96
E: jackychiu76@gmail.com

TURKEY

Emikon Otomasyon
DES Sanayi sitesi 103 sokak
T: +90 216 420 8347
F: +90 216 420 8348

B-7 blok No:16 Yukari Dudullu / Umraniye
Istanbul 34776
Turkey

E: tolgaturunz@emikonotomasyon.com
I: www.emikonotomasyon.com

UNITED ARAB EMIRATES

Synergy Controls
907, IT Plaza Silicon Oasis :
Dubail
United Arab Emirates

T: +971 4 3262692
F: +971 4 3262693
E: sales@synergycontrols.ae

UNITED KINGDOM and N. Ireland

PROCENTEC UK
Digital World Center
1 Lowry Plaza, Suite 620
The Quays, Salford
M50 3UB Manchester
United Kingdom

T: +44-(0)753 430 7696
E: info@procentec.com
I: www.procentec.co.uk

iTech
Unit 1
Dukes Road
Troon
Ayrshire KA10 6QR
United Kingdom

T: +44 (0)1292 311 613
F: +44 (0)1292 311 578
E: sales@itech-troon.co.uk
I: www.itech-troon.co.uk

Parkelect Ltd.
84 Dargan Road
Belfast
BT3 9JU
N. Ireland

T: +44 2890 777743
F: +44 2890 777794
E: igillan@parkelect.co.uk
I: www.parkelect.co.uk

UNITED STATES

Grid Connect Inc.
1630 W. Diehl Road
Naperville, Illinois 60563
USA

T: +1 630 245-1445
F: +1 630 245-1717
E: sales@gridconnect.com
I: www.gridconnect.com/procentec.html

VIETNAM

Bavitech Corporation
42 Truong Son Street
Ward 2, Tan Binh District
Ho Chi Minh City
Vietnam

T: +84-8-3547 0976
F: +84-8-3547 0977
E: hai.hoang@bavitech.com
I: www.bavitech.com

For the up to date list of the Sales Offices and Distributors see www.procentec.com/company/distributors/. If your country or region is not listed, please contact us. We are still searching for distributors who can cover complete areas or countries.



21. About PROCENTEC

PROCENTEC are an independent Dutch company that supply products, training and consultancy to the Industrial Automation Market. Of primary focus is the development and manufacturing of automation products for PROFIBUS, PROFINET and Industrial Ethernet.

Some of our products are the most recognized solutions on the Market today. **ProfiTrace**, our mobile troubleshooting and maintenance tool has established itself as one of the most pioneering, yet essential tools available to engineers. In contrast our robust **ProfiHub** has, over the last decade, established itself as the go-to solution for ensuring a reliable network infrastructure. The combination of these products within our **ComBricks** solution has seen PROCENTEC become the primary manufacturer of network components with the integrated capability for remote monitoring and remote asset-management.

Our training facility, the **PROCENTEC Academy**, has certified over 4000 engineers to implement and maintain their PROFIBUS and PROFINET networks to the highest standards available.

The PROCENTEC **Competence Centre** has established itself as the leading consultancy on PROFIBUS and PROFINET projects worldwide, advising on architecture, engineering, training and commissioning. Once a network is commissioned, we have experts available 24/7, to answer questions with maintenance or help troubleshooting a problem.

Products

- Osiris SaaS, Atlas, Mercury
- EtherTAP and EtherMIRROR
- ProfiHub
- ProfiTrace
- ComBricks
- VPGate
- PROFINET tools
- Cables & Connectors

Services

- On-site & Online Support
- Network Audit
- Network Certification
- Consultancy
- Testlab & Democenter
- Competence Center

Training

- PROFIBUS training courses
- PROFINET training courses
- Product training courses



PROCENTEC BV
Vlasmarkt 1
3011 PW, Rotterdam
The Netherlands

T: +31 (0)174 671 800

F: +31 (0)174 671 801

E: support@procentec.com

W: www.procentec.com

